 




en

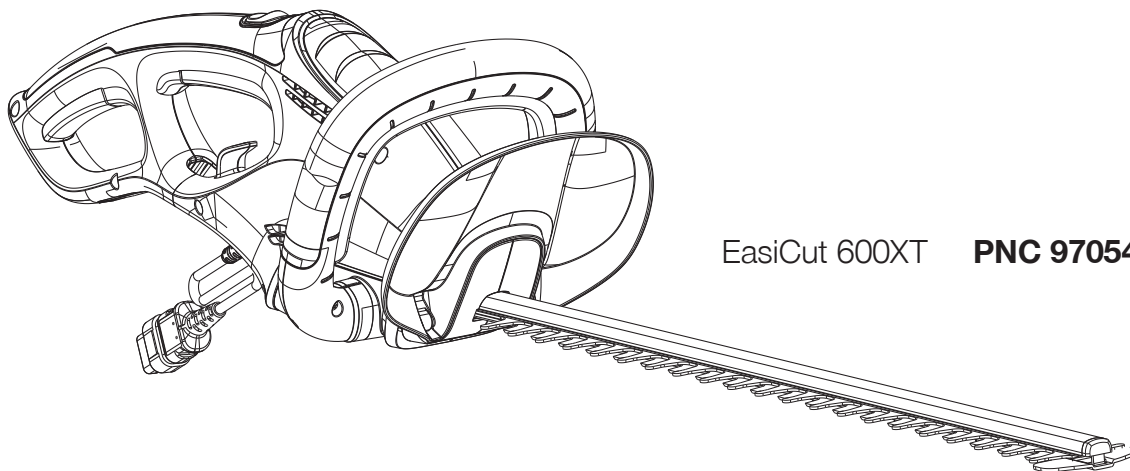


EasiCut 600XT **PNC 9705464-01**

en **Operator's manual**  
Electric Hedge Trimmer


---




**O1**

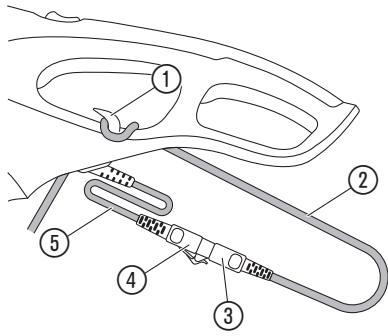 


**O2**

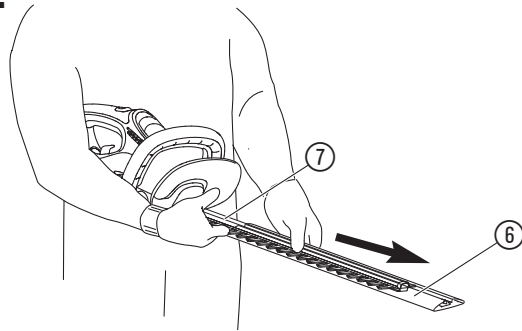 


**O3**

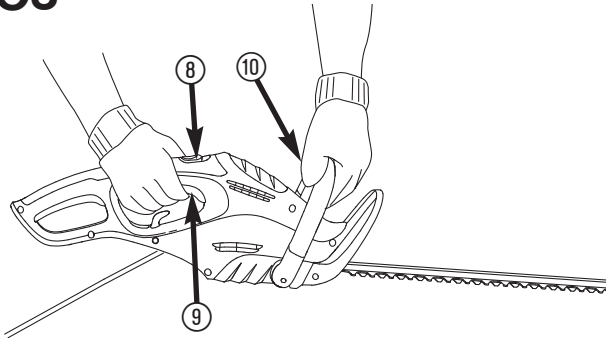 


**O4**

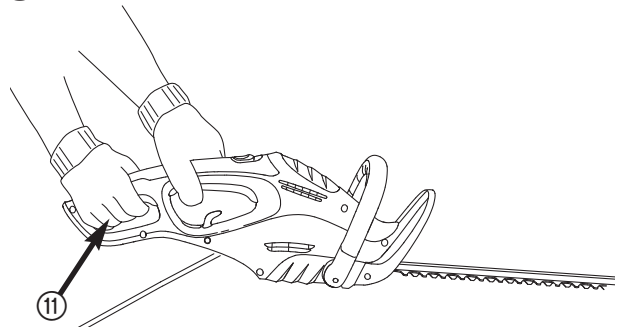 


**O5**

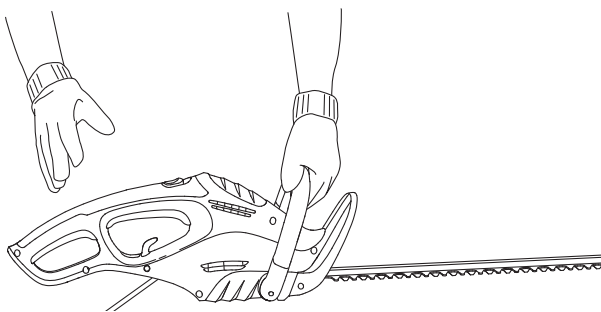 


**O6**

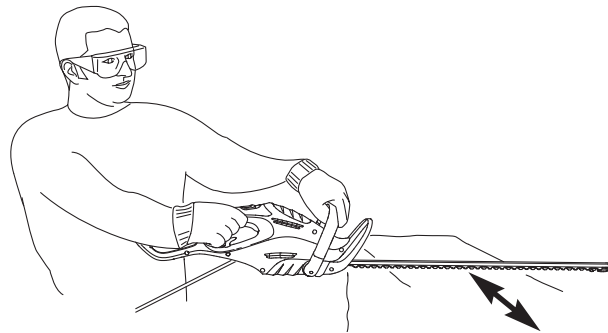 


**O7**

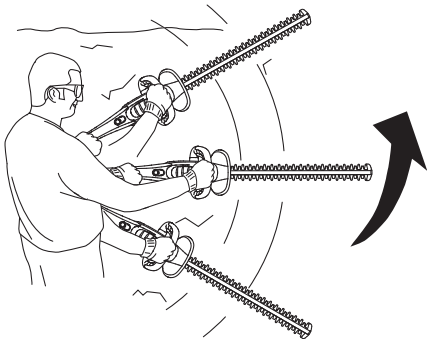 

**M1**

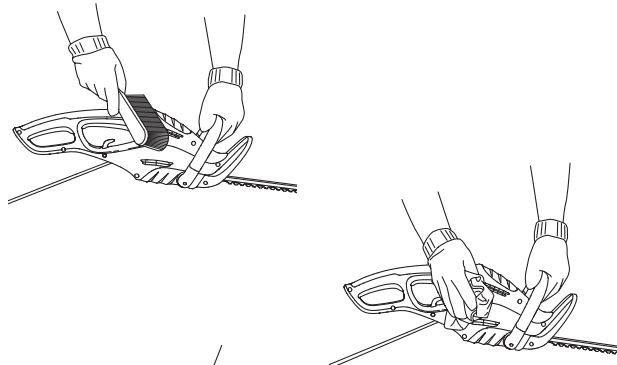 


**M2**

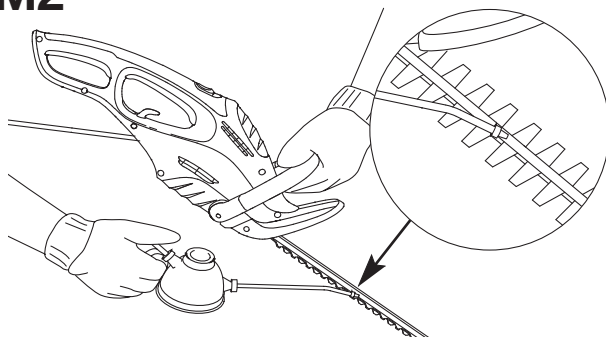 

# en Electric Hedge Trimmer

## Original instructions.


1. SAFETY INSTRUCTIONS . . . . .	4
2. OPERATION . . . . .	6
3. MAINTENANCE . . . . .	6
4. STORAGE . . . . .	6
5. TROUBLESHOOTING . . . . .	6
6. TECHNICAL DATA . . . . .	7
7. WARRANTY / SERVICE . . . . .	7
8. DISPOSAL . . . . .	7
9. ANNEX . . . . .	8

 This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product. The use of this product by young people under the age of 16 is not recommended.

## 1. SAFETY INSTRUCTIONS

### IMPORTANT!

Read the operator's manual carefully before use and keep for future reference.

 This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product. The use of this product by young people under the age of 16 is not recommended.

### 1.1 Symbols on the product



→ Read operator's manual.



### DANGER!

→ Keep hands away from blade.



→ Do not expose to rain.



→ Wear eye and ear protection.



### WARNING!

→ Disconnect the mains cable if the cable becomes damaged or cut.

### 1.2 General safety instructions

#### 1.2.1 General machine safety instructions



### WARNING!

Read all safety warnings, instructions, illustrations and specifications provided with this machine.

Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference. The term "machine" in the warnings refers to your mains operated (corded) machine or battery operated (cordless) machine.

#### 1) Work area safety

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate machines in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Machines create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a machine. Distractions can cause you to lose control.

#### 2) Electrical safety

- Machine plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) machines. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose machines to rain or wet conditions. Water entering a machine will increase the risk of electric shock.

- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the machine. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a machine outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

f) If operating a machine in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

#### 3) Personal safety

a) Stay alert, watch what you are doing and use common sense when operating a machine. Do not use a machine while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating machines may result in serious personal injury.

b) Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and /or battery pack, picking up or carrying the machine. Carrying machines with your finger on the switch or energising machines that have the switch on invites accidents.

d) Remove any adjusting key or wrench before turning the machine on. A wrench or a key left attached to a rotating part of the machine may result in personal injury.

e) Do not overreach. Keep proper footing and balance at all times. This enables better control of the machine in unexpected situations.

f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

h) Do not let familiarity gained from frequent use of machines allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

#### 4) Machine use and care

a) Do not force the machine. Use the correct machine for your application. The correct machine will do the job better and safer at the rate for which it was designed.

b) Do not use the machine if the switch does not turn it on and off. Any machine that cannot be controlled with the switch is dangerous and must be repaired.

c) Disconnect the plug from the power source and /or remove the battery pack, if detachable, from the machine before making any adjustments, changing accessories, or storing machines. Such preventive safety measures reduce the risk of starting the machine accidentally.

d) Store idle machines out of the reach of children and do not allow persons unfamiliar with the machine or these instructions to operate the machine. Machines are dangerous in the hands of untrained users.

e) Maintain machines and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the machine's operation. If damaged, have the machine repaired before use. Many accidents are caused by poorly maintained machines.

f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the machine for operations different from those intended could result in a hazardous situation.

h) Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the machine in unexpected situations.

#### 5) Battery tool use and care

a) Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

b) Use machine only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

c) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

d) Liquid may leak from the battery if used incorrectly; Contact with this liquid should be avoided. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

e) Do not use a battery pack or tool that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

f) Do not expose a battery pack or tool to fire or excessive temperature. Exposure to fire or temperature above 130 °C may cause explosion.

g) Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions. Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

#### 6) Service

a) Have your machine serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the machine is maintained.

b) **Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorised service providers.

### 1.2.2 Hedge trimmer safety warnings

a) **Keep all parts of the body away from the blade. Do not remove cut material or hold material to be cut when blades are moving.** Blades continue to move after the switch is turned off. A moment of inattention while operating the hedge trimmer may result in serious personal injury.

b) **Carry the hedge trimmer by the handle with the blade stopped and taking care not to operate any power switch.** Proper carrying of the hedge trimmer will decrease the risk of inadvertent starting and resultant personal injury from the blades.

c) **When transporting or storing the hedge trimmer, always fit the blade cover.** Proper handling of the hedge trimmer will decrease the risk of personal injury from the blades.

d) **When clearing jammed material or servicing the unit, make sure all power switches are off and the power cord is disconnected.** Unexpected actuation of the hedge trimmer while clearing jammed material or servicing may result in serious personal injury.

e) **Hold the hedge trimmer by insulated gripping surfaces only, because the blade may contact hidden wiring or its own cord.** Blades contacting a „live“ wire may make exposed metal parts of the hedge trimmer „live“ and could give the operator an electric shock.

f) **Keep all power cords and cables away from cutting area.** Power cords or cables may be hidden in hedges or bushes and can be accidentally cut by the blade.

g) **Do not use the hedge trimmer in bad weather conditions, especially when there is a risk of lightning.** This decreases the risk of being struck by lightning.

- Search hedges and bushes for hidden objects (e.g. wire fences and hidden wires).
- The use of a residual current device (RCD) with a trip current of 30 mA or less is recommended.
- Hold the hedge trimmer with both hands on both handles.
- The hedge trimmer is intended for use when the user is standing on the ground and not on a ladder or other unstable surface.
- Before using the hedge trimmer, make sure that the locking devices of all moving parts (e.g. the extended shaft and the pivot element) are in the locked position.

## 1.3 Additional safety instructions

### 1.3.1 Intended use

This **FLYMO Hedge Trimmer** is used to cut hedges, shrubs and grass coverings in private domestic gardens and allotments.

The product is not intended for long term use.



### **DANGER!**

#### **Risk of injury.**

- Do not use the product to cut lawns/lawn edges, to chop up material or to make compost.

### 1.3.2 Work area safety

Only use the product in the manner and for the functions described in these instructions.

The operator or user is responsible for accidents or hazards occurring to other people or their property.

During operation and transport pay special attention to the hazard for other people.

Risk of stumbling. While operation pay attention to the cable.



### **WARNING!**

#### **Risk of injury.**

- When wearing hearing protection, and due to the noise produced by the product, the operator may not notice persons approaching.
- Do not use the product when a thunderstorm is approaching.
- Do not use the product nearby a water.

### 1.3.3 Electrical safety



### **DANGER!**

#### **Cardiac arrest.**

- This product generates an electromagnetic field during operation. This electromagnetic field may affect the functionality of active or passive medical implants (e.g. pacemakers), which may result in serious injury or death.
- Consult your doctor and the manufacturer of your implant before using this product.
- Disconnect the mains plug from the mains socket after using the product.

- The product must be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30 mA. Check your R. C. D. every time you use it.
- Before use, examine cable for damage, replace it if there are signs of damage or ageing.
- If the replacement of the supply cord is necessary, this has to be done by the manufacturer or his agent in order to avoid a safety hazard.
- Do not use the product if the electric cables are damaged or worn.

→ Immediately disconnect from the mains electricity supply if the cable is cut, or the insulation is damaged. Do not touch the electric cable until the electrical supply has been disconnected.

→ Your electric cable must be untangled, tangled cables can overheat and reduce the efficiency of your product.

→ Always disconnect the mains cable before disconnecting any plug, cable connector or extension cable.

→ Switch off, remove plug from mains and examine electric supply cable for damage or ageing before winding cable for storage. Do not repair a damaged cable, send the product to the next FLYMO customer service Center or dealer authorised by FLYMO.

→ Always wind cable carefully, avoiding kinking.

→ Use only on AC mains supply voltage shown on the product rating label.

→ Do not connect an earth to any part of the product.

→ If the product starts unintentionally when the mains plug is connected, disconnect the mains at once. Contact FLYMO Service to check the product.

### 1.3.4 Cables

If additional extension cables are used, these must comply with the minimum cross-sections in the table below:

Voltage	Cable length	Cross section
220 – 240 V / 50 Hz	Up to 40 m	1.0 mm <sup>2</sup>
220 – 240 V / 50 Hz	Up to 60 m	1.5 mm <sup>2</sup>
220 – 240 V / 50 Hz	Up to 100 m	2.5 mm <sup>2</sup>

Minimum rating: 1.0 mm<sup>2</sup> size cable, 10 amps 250 volts AC.

Your product is supplied with cable wired directly into the product.

1. If the supply cord is damaged, it must be replaced by your local Husqvarna UK Ltd. Approved Service Centre or similarly qualified persons in order to avoid a hazard.
  2. FLYMO Extension Cables are available from your local Husqvarna UK Ltd. Approved Service Centre.
  3. Do not wire an extension cable directly to your product yourself. Please contact your local Husqvarna UK Ltd. Approved Service Centre for further information on the connectors and kits available.
  4. Only use extension cables specifically designed for outdoor use and which conform to one of the following specifications:
    - Ordinary rubber (60245 IEC 53), Ordinary PVC (60227 IEC 53) or
    - Ordinary PCP (60245 IEC 57).
  5. Use only permitted extension cables as per HD 516.
- Ask your electrical specialist.

### 1.3.5 Connectors

#### **Important!**

- Connectors are suitable for use with 2 core cables only.
- Under no circumstances should these connectors be used for earthed products.
- All connectors and cables are of splashproof construction.
- They are not waterproof and must not be left outside permanently nor should they be submerged or immersed in water. Do not let cable lay or trail through pools of water or splashed with water from hose pipes.

### 1.3.6 Personal safety

- Always wear suitable clothing, protective gloves, and stout shoes.
- Avoid contact to the oil of the blade in particular when you react allergic with it.
- Thoroughly inspect the area where the product is to be used and remove all wires and other foreign objects.
- All adjustments (inclining the blade head, altering the length of the telescopic tube) have to be made with the sheath in place, and the product must not rest on the blade in the process.
- Always hold the product properly with both hands on both handles [Fig. O4].
- Before using the product and after any impact, check for signs of wear or damage and repair as necessary.
- Never attempt to use an incomplete product or one with an unauthorised modification.

### 1.3.7 Power tool use and care

- Know how to stop the product quickly in an emergency.
- Never hold the product by the guard.
- Do not use the product if the protection equipments (protection cover, quick blade-stop) are damaged.
- Do not use ladders whilst operating the product.

#### **Disconnect the mains cable:**

- before leaving the product unattended for any period.
  - before clearing a blockage.
  - before checking, cleaning or working on the product.
  - if you hit an object. Do not use your product until you are sure that the entire product is in a safe operating condition.
  - if the product starts to vibrate abnormally. Check immediately. Excessive vibration can cause injury.
  - before passing to another person.
- Only use the product between 0 and 40 °C.

### 1.3.8 Maintenance and storage



### **WARNING!**

#### **Risk of injury.**

- Do not touch blades.
- When finishing or interrupting work push up protection cover.

→ Keep all nuts, bolts and screws secure to be sure the product is in safe working condition.

→ If the product got hot during operation, let it cool down before storage.

## 2. OPERATION

### **DANGER!**

#### **Risk of suffocation.**

Small parts can be easily swallowed. There is also a risk that the poly-bag can suffocate toddlers.

→ Keep toddlers away when you assemble the product.

- Always wear suitable clothing, protective gloves, and stout shoes.
- Avoid contact to the oil of the blade in particular when you react allergic with it.
- Thoroughly inspect the area where the product is to be used and remove all wires and other foreign objects.
- Always hold the product properly with both hands and both handles.
- Before using the product and after any impact, check for signs of wear or damage and repair as necessary.
- Never attempt to use an incomplete product or one with an unauthorised modification.

### **WARNING!**

#### **Risk of injury.**

Cut injury when the product starts accidentally.

→ Before you connect, adjust or transport the product, disconnect the mains cable and slide the protective cover ⑥ over the blade ⑦ [Fig. O2].

→ **The FLYMO Hedge Trimmer is delivered with an 10 m extension cable.**

### 2.1 To connect the hedge trimmer to the extension cable [Fig. O1/O2]

### **WARNING!**

#### **Electric shock.**

To avoid damage to the mains cable ⑤ the extension cable ② must be inserted into the cable lock ①.

→ Before you operate the product insert the extension cable ② into the cable lock ①.  
→ Never take hold of the protective cover ⑥ when connecting the product.

1. Loop the extension cable ②, insert the loop into the cable lock ① and pull tight.
2. Connect the plug ④ of the product into the socket ③ of the extension cable ②.
3. Connect the extension cable ② into a 230 V mains socket.

### 2.2 To start the hedge trimmer [Fig. O2/O3/O4]

There are three switch levers fitted to your hedge trimmer.

1. Remove the blade cover ⑥.
2. Push forward the lock-off button ⑧, squeeze the main switch lever ⑨, release lock-off button.
3. To start the hedge trimmer, hold the main switch lever ⑨ and either ⑩ or ⑪.

**NOTE:** For cutting high branches, use switch ⑩.

### 2.3 To stop the hedgetrimmer [Fig. O5]

Move your hedge trimmer away from the cutting area before stopping.

→ To stop, release any switch lever.

### 2.4 How to use your hedge trimmer

1. Inspect the area to be cut before each use: Remove objects which can be thrown or become entangled in the cutting blades.
2. Always keep the hedge trimmer in front of your body. Hold handle firmly with both hands and stand in a secure and stable position.
3. Allow the cutting blades to reach full speed before entering the material to be cut.
4. Always work going away from people and solid objects such as walls, large stones, trees, vehicles etc.
5. If blade stalls, immediately stop the hedge trimmer. Disconnect the hedge trimmer from the power source and clear jammed debris from the cutting blades. Inspect blades and repair or replace as needed.

#### 2.4.1 Top cutting [Fig. O6]

Use a wide sweeping motion. A slight downward tilt of the cutting blades in the direction of motion gives the best cutting results.

#### 2.4.2 2.4.2 Side cutting [Fig. O7]

When trimming the sides of the hedge, begin at the bottom and cut upwards tapering the hedge inward at the top. This shape will expose more of the hedge, resulting in more uniform growth.

## 3. MAINTENANCE

### **WARNING!**

#### **Risk of injury.**

Cut injury when the product starts accidentally.

→ Before you maintain the product, make sure that the mains cable is disconnected and the protective cover ⑥ is slid over the blade ⑦ [Fig. O2].

### 3.1 To clean the hedge trimmer [Fig. M1]

### **WARNING!**

#### **Risk of injury.**

→ Do not clean the product with water or with a water jet (in particular high-pressure water jet).  
→ Do not clean with chemicals including petrol or solvents. Some can destroy critical plastic parts.

1. Using a soft brush – remove debris from all air intakes and cutting blade.
2. Wipe over surface of your hedge trimmer with a dry cloth.

### 3.2 To lubricate the cutting blade [Fig. M2]

For easier operation and longer life, lubricate the cutter blades before and after use. Apply the oil so that it runs between the two blades.

### 3.3 Service recommendations:

1. We strongly recommend that your product is serviced at least every twelve months, more often in a professional application.
2. Always use genuine FLYMO spare parts.
3. Pre-packed spares are available from most FLYMO approved stockists.
4. Your product is uniquely identified by an orange and white product rating label.
5. If you have a problem with your machine contact your local Approved Service Centre ensuring you have full details of your product as described on the product rating label.
6. Should it be necessary for work to be carried out by your Service Centre, it is important to take your complete machine including cable and any extension cables used.

A network of specialist dealers can be found in your local Yellow Pages.

To obtain service on your product simply telephone or visit your local Service Centre. Should you require service under the terms of our guarantee the Service Centre will require proof of purchase.

All of the centres listed stock genuine FLYMO spare parts.

**NOTE:** Our Service Repairers act on their own behalf and are not empowered to commit or legally bind Husqvarna UK Ltd. in any manner whatsoever.

## 4. STORAGE

### **WARNING!**

#### **Don't touch the blades.**

→ When finishing or interrupting work push up the protection cover.  
→ Keep all nuts, bolts and screws secure to be sure the product is in safe working condition.  
→ If the product got hot during operation, let it cool down before storage.

### 4.1 At the end of the cutting season:

1. Clean your hedge trimmer thoroughly.
2. Check that all nuts and bolts are secure.
3. Visually inspect the hedge trimmer for any worn or damaged parts, contact your local Service Centre if any parts require replacement.

### 4.2 To put into storage:

The product must be stored away from children.

1. Disconnect the mains cable.
2. Clean the product (see 3. MAINTENANCE) and slide the protective cover ⑥ over the blade ⑦.
3. Store the product in a dry area where it has protection from frost.

## 5. TROUBLESHOOTING

### **NOTE:**

Repairs must only be done by an authorised FLYMO dealer.

→ For any other malfunctions please contact the FLYMO customer service (see 7. SERVICE / WARRANTY).

**WARNING!****Risk of injury.**

Cut injury when the product starts accidentally.

- Before you troubleshoot the product, make sure that the mains cable is disconnected and the protective cover ⑥ is slid over the blade ⑦ [Fig. O2].

**5.1 Fails to operate:**

1. Is the power turned on?
  2. Check the fuse in the plug, if blown replace.
  3. Fuse continues to blow?
- Immediately disconnect from the mains electricity supply and consult your local approved Service Centre.

**5.2 Cutting blade stops under load:**

1. Cut at a slower pace.
  2. If cutting blade still stops under load?
- Disconnect from the mains electricity supply and consult your local approved Service Centre.

**5.3 Fails to stop when one switch lever is released:**

- Immediately disconnect from the mains electricity supply and consult your local approved Service Centre.

**5.4 Poor cut quality:**

1. Ensure the product is being used correctly  
(see *How to use your hedge trimmer*).
  2. Ensure blades are free from trapped debris.
  3. Damaged Blades?
- Immediately disconnect from the mains electricity supply and consult your local approved Service Centre.

**5.5 Excessive Vibration:**

- Immediately disconnect from the mains electricity supply and consult your local approved Service Centre.

**6. TECHNICAL DATA**

Electric Hedge Trimmer	Unit	Value (PNC 9705464-01)
Motor power consumption	W	500
Blade length	cm	60
Weight	g	4.1
Sound pressure level $L_{pA}^{1)}$	dB	84
Uncertainty $k_{pA}$		2.14
Sound power level $L_{WA}^{2)}$ : measured / guaranteed	dB	95 / 97
Uncertainty $k_{WA}$		2.14
<b>For front and main handle combination:</b>		
<b>Front handle:</b>		
Hand/arm vibration $a_{vhw}^{1)}$	$m/s^2$	2.8
Uncertainty $k_{vhw}$		1.5
<b>Main handle:</b>		
Hand/arm vibration $a_{vhw}^{1)}$	$m/s^2$	2.9
Uncertainty $k_{vhw}$		1.5
<b>For main and rear handle combination:</b>		
<b>Main handle:</b>		
Hand/arm vibration $a_{vhw}^{1)}$	$m/s^2$	2.2
Uncertainty $k_{vhw}$		1.5
<b>rear handle:</b>		
Hand/arm vibration $a_{vhw}^{1)}$	$m/s^2$	2.5
Uncertainty $k_{vhw}$		1.5

Measuring process complying with: <sup>1)</sup> 62841-4-2 <sup>2)</sup> RL 2000/14/EC / S.I. 2001 No.1701



**NOTE:** The stated vibration emission value has been measured according to a standardised test procedure and can be used for comparison of one electric power tool with another. It can also be used for preliminary evaluation of exposure. The vibration emission value can vary during actual use of the electric power tool depending on the ways in which the machine is used. As a safety measure, you should work with the machine for a maximum of 1 hour without interruption.

Electric Hedge Trimmer	Unit	Value (PNC 9705464-01)
Cable length	m	10

**7. WARRANTY / SERVICE****7.1 Product registration**

Please register your product at:



<https://gardenforms.wufoo.com/forms/z9ag18a0ou0ldq>

**7.2 Service**

Please find the current contact information of our service on the back page and online:



<https://www.flymo.com/uk/content/contact-us>

**8. DISPOSAL****8.1 Disposal of the product**

(according to Directive 2012/19/EU / S.I. 2013 No. 3113):






The product must not be disposed of to normal household waste. It must be disposed of in line with local environmental regulations.

**IMPORTANT!**




- Dispose of the product through or via your local recycling collection centre.

## 9. ANNEX

### 9.1 EU – Declaration of Conformity

	The undersigned Husqvarna AB, SE 561 82 Huskvarna, Sweden hereby certifies that, when leaving our factory, the unit(s) indicated below is/are in accordance with the harmonised EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the units are modified without our approval.
Description of the unit:	Hedge Trimmer
Type:	EasiCut 600XT
Article number:	9705464
EU directives:	2006/42/EC 2014/30/EU 2011/65/EU 2000/14/EC
Harmonised Standard:	EN ISO 12100 EN 62841-1 EN 62841-4-2
Noise level: measured / guaranteed:	95 dB(A) / 97 db(A)
Conformity Assessment Procedure:	According to 2000/14/EC Procedure: Art. 14 Annex V
Deposited Documentation:	GARDENA Manufacturing GmbH Technische Dokumentation M. Jäger Hans-Lorenser-Str. 40 89079 Ulm / Germany
Year of CE marking:	2023
Ulm, 06.02.2023	
Authorised representative:	 <b>Reinhard Pompe</b> Vice President Products
	 <b>Wolfgang Engelhardt</b> Vice President Supply Chain

### 9.2 UKCA – Declaration of Conformity

	<b>Declaration of Conformity [only for UK]</b> The manufacturer: Husqvarna AB, SE 561 85 Huskvarna, Sweden hereby certifies that, when leaving our factory, the unit(s) indicated below is/are in accordance with the UK Regulations, designated standards of safety and product specific designated standards. This certificate becomes void if the units are modified without our approval.
Description of the product:	Hedge Trimmer
Type:	EasiCut 600XT
Article number:	9705464
UK regulations:	S.I. 2008/1597 S.I. 2016/1091 S.I. 2012/3032 S.I. 2001/1701
Designated standards:	EN ISO 12100 EN 62841-1 EN 62841-4-2
Noise level: measured / guaranteed	95 dB (A) / 97 dB (A)
Conformity Assessment Procedure:	According to S.I. 2001/1701 Art. 11 Schedule 8
Dokumentation Deposited:	GARDENA Manufacturing GmbH, Technische Dokumentation, M. Jäger Hans-Lorenser-Str. 40 D-89079 Ulm,
Importer to UK: Authorised representative:	Husqvarna UK Limited Preston Road, Aycliffe, County Durham UK DL5 6UP
Ulm, 06.02.2023	
Authorised representative:	 <b>Reinhard Pompe</b> Vice President Products
	 <b>Wolfgang Engelhardt</b> Vice President Supply Chain





**Service Address and  
Importer to Great Britain**

Husqvarna UK Ltd  
Preston Road  
Aycliffe Industrial Park  
Newton Aycliffe  
County Durham  
DL5 6UP  
customer.services@husqvarna.co.uk



31600-85.960.02/0824  
Husqvarna AB  
Drottninggatan 2  
SE-561 82 Huskvarna  
Sweden

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice.  
Copyright © 2024 Flymo S.A. All rights reserved.  
Flymo® and other product and feature names are registered or unregistered trademarks of Flymo S.A.