

Webb **eco**

X-SERIES

WEV20X2LM47SPB4X/WEV20X2LM47SPBARE
CORDLESS BRUSHLESS
SELF-PROPELLED 47cm
LAWN MOWER

Product Number: 1938386001

WEV20X2LM53SPB4X/WEV20X2LM53SPBARE
CORDLESS BRUSHLESS
SELF-PROPELLED 53cm
LAWN MOWER

Product Number: 1938387001

en - ORIGINAL INSTRUCTIONS

ASSEMBLY REQUIRED
MINIMUM TWO PERSONS

Service & Support: 01793 333212

Before use please read & understand this manual; paying particular attention to the safety instructions before use. Incorrect use of the product could put the operator or machine in danger.

Whilst every effort has been made to ensure the accuracy of information contained in this manual, our policy of continuous improvement determines the right to make modifications without prior warning. Images are used for illustration purposes only.

ADVANCED 40V BATTERY TECHNOLOGY

The logo for Webb eco, with 'Webb' in white and 'eco' in green, both inside a white rounded rectangle.

X-SERIES

INSTRUCTION MANUAL

Copyright Notice

Copyright © Handy Distribution

Permission is granted to reproduce this publication for personal & educational use only.

Commercial copying, redistribution, hiring, or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Handy Distribution.

In all cases this copyright notice must remain intact.



CONTENTS

SPECIFICATION

IMPORTANT INFORMATION

SAFETY INSTRUCTIONS

KNOW YOUR MACHINE

ASSEMBLY

BATTERY & CHARGER

OPERATION

CLEANING, MAINTENANCE & STORAGE

TROUBLE SHOOTING

PARTS LIST

DECLARATION OF CONFORMITY

ASSEMBLY IS REQUIRED

- This product requires assembly before use.
- See “Assembly” section for instructions.
- Inspect all components closely upon receipt to make sure no items are missing or damaged.



WARNING

Read this instruction manual carefully before operating this machine. Make sure that you are familiar with the controls and properly operate the machine. Following these instructions can reduce the risk of personal injury.



X-SERIES

INSTRUCTION MANUAL

SPECIFICATION

The manufacturer reserves the right to change the product specification and livery according to continued product improvements.

TOOL		
Model	WEV20X2LM47SPB4X WEV20X2LM47SPBARE	WEV20X2LM53SPB4X WEV20X2LM53SPBARE
Product Number	1938386001	1938387001
Rated Voltage	36VDC – Max: 40VDC	
Cutting Width	47cm	53cm
Cutting Heights	7 (30-35-40-47.5-55-65-78mm)	7 (30-41.7-53.3-65-76.7-83.4-100mm)
No Load Speed	3300/min	
Self-Propel Speed	0.8-1.2m/s	
Collector Capacity	65 L	
Recommended Blade Tension	30-35Nm.	
Run Time (2x20v 4Ah)	Up to 30 min without self-propel	Up to 25 min without self-propel
Protection	IPX1	
Guaranteed Sound Power Level	96 dB(A) - (K = 3 dB(A))	
Vibration ahV	1.35 m/s ² - (K = 1.5 m/s)	
CHARGER		
Model No.	WEV20X265WCHARGER	
Product No.	1938389001	
Rating	input: 240V 50/60Hz Type C1 output: 20V – 3.25A Type C1+Type C2 output: 20V 2.3+1A	
Protection	IPX0	
Charging Time	1x20v 4Ah Battery = 80 min 2x20v 4Ah Battery = 160 min	
BATTERY		
Model No.	WEV20B4XSERIES	
Product No.	1938390001	
Technical data	20V 4Ah 80Wh	




WARNING

Only use authorised batteries and chargers.
Use of other branded batteries and chargers may cause injury and/or fire.

NOTE: WEV20X2LM47SPB4X & WEV20X2LM53SPB4X include the charger and batteries.
WEV20X2LM47SPBARE & WEV20X2LM53SPBARE do not include the charger and batteries.

The manufacturer reserves the right to change the product specification and livery according to continued product improvements.

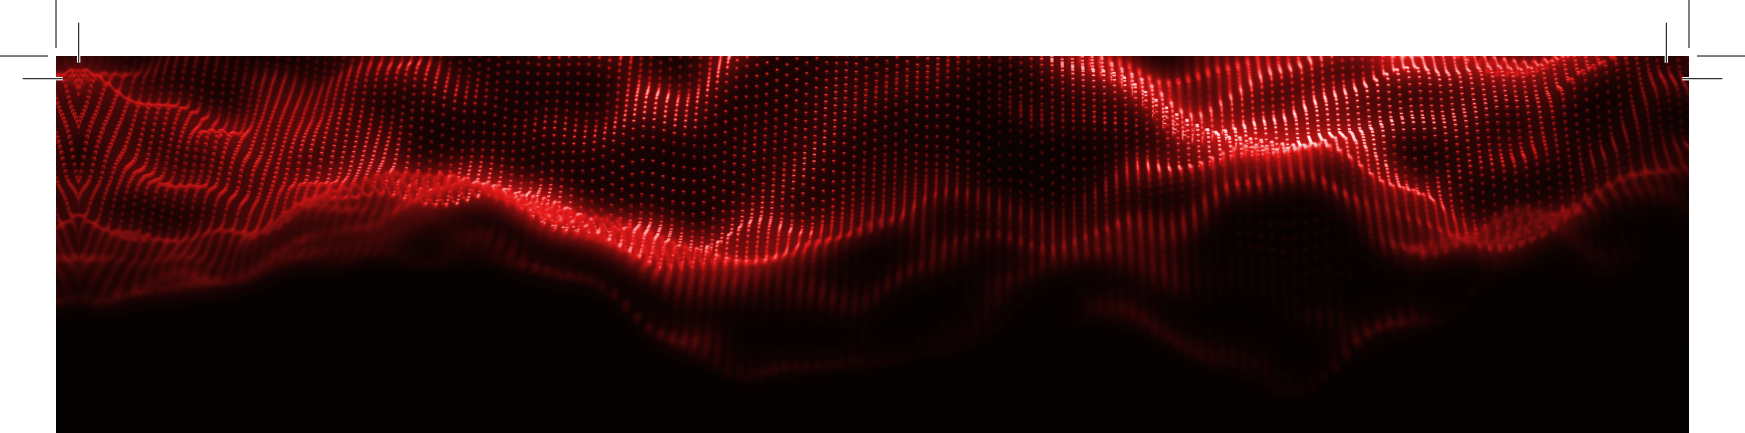

Consistent with our policy of continuous improvement, The Handy reserves the right to change the design and configuration of any of its products without notice or obligation. Therefore, please treat the text and images in this manual for illustrative purposes only. They may in no case serve as a basis for any legal claim. **If you require any assistance with regards to the contents or operation of your machine, please contact us: Tel: 01793 333212 - Email: cs@webbgardenpower.co.uk**
Monday to Friday: 8:00am - 5:00pm
(CLOSED WEEKENDS, BANK HOLIDAYS & COMPANY CLOSURES)

IMPORTANT INFORMATION



WARNING

Read this instruction manual carefully before operating this machine. Make sure that you are familiar with the controls and properly operate the machine. Following these instructions can reduce the risk of fire, electric shock and personal injury.

INTENDED USAGE

The basic version of the equipment is a battery lawnmower intended for private use, i.e., for use in home and domestic gardening environments, whose annual operating time generally does not exceed 50 hours. It is designed for cutting natural grass in small to medium sized gardens. Every other use of the machine is a not intended use. Furthermore, a professional use is strictly forbidden. Any use not expressly permitted in this manual may damage the tool or cause danger to the user.

USE CORRECTLY.

The power tool is for private use only, whose annual operating time generally does not exceed 50 hours. Public facilities, sporting facilities and agricultural / forestry applications are excluded. Not to be used to trim bushes, hedges, and shrubs, to cut or shred climbing plants or lawns on roof gardens or in balcony boxes or to clean footpaths, nor must it be used as a chopper for shredding tree or hedge cuttings. Furthermore, the power tool must not be used as a cultivator or to level off uneven areas of ground, e.g., molehills. Please read this entire manual prior to operating the equipment. It instructs you how to safely and easily set up, operate and maintain your machine. Please be sure that you and any other persons who will operate the machine, always carefully follow the recommended safety practices. Failure to do so could result in personal injury or property damage.

IF NOT USED PROPERLY THIS MACHINE CAN BE DANGEROUS!

This machine can cause serious injury to the operator and others; the warning and safety instructions must be followed to ensure reasonable safety and efficiency in using this product. The operator is responsible for following the warning and safety instructions in this manual and on the machine. Never use the product unless the components are correctly positioned and operational.

TRAINING

Read the instructions carefully: Be familiar with the controls and the proper use of the equipment. Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the age of the operator. Keep in mind that the operator or user is responsible for accidents or hazards involving the machine that occur to other people or their property.

Webb **eco**

X-SERIES

INSTRUCTION MANUAL

TO THE OWNER

All information in this manual is relative to the most recent product information available at the time of printing. Review this manual frequently to familiarise yourself with the machine, its features and operation. Please be aware that this Instruction Manual may cover a range of product specifications for various models. Characteristics and features discussed and/or illustrated in this manual may not be applicable or exact to all models.

We reserve the right to change product specifications, design, and equipment without notice and without incurring obligation. If you have any problems or questions concerning the machine, phone your local authorised Webb service dealer or ourselves. Throughout this manual, all references to *right* and *left* side of the machine are observed from the operating position.















WARNING










The operator or user is responsible for accidents and injury or damage to third parties. The equipment is allowed to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user/operator and not the manufacturer will be liable for any damage or injuries of any kind resulting from such misuse.

Please note that our equipment has not been designed for use in commercial, hire, trade, or industrial applications. Our warranty will be 90 days from the original date of sale for commercial, hire, trade, or industrial businesses or for equivalent purposes.

SAFETY INSTRUCTIONS









Read and understand the owner's manual and labels affixed to the machine. Learn its application and limitations as well as the specific potential hazards. Retain these instructions for future reference. The operator is responsible for following the warnings & instructions in this manual and on the product.


	<p>Read & understand operator's manual before using the machine. Failure to follow instructions could result in death or serious injury.</p>		<p>Check your machine before turning it on. Keep guards in place & in working order. Frequently check to see that foreign objects are removed from the working area before turning it on. Replace damaged, missing or failed parts before using it.</p>
	<p>Keep all bystanders & animals at least 15 metres away from the machine during operation. Thrown objects can ricochet and result in personal injury or property damage. If approached, stop the machine immediately.</p>		<p>When working with the tool:</p> <ul style="list-style-type: none"> • Wear eye protection. • Wear ear protection. • Wear protective gloves • Wear respiratory protection. • Wear sturdy shoes
	<p>For the charger: Remove plug from the mains immediately if the cable is damaged or cut. Only re-charge the battery pack indoors</p>		<p>Do not expose the tool, battery or charger to rain or damp conditions. Failure to use it in dry conditions and to observe safe practices can result in electric shock.</p>
	<p>DANGER Keep sufficient distance away from electrical power lines. Use in dry conditions.</p>		<p>Risk of injury caused by rotating machine parts</p>
	<p>Risk of injury caused by rotating machine parts!</p>		<p>Look down and behind before pulling back to avoid tripping.</p>
	<p>Do not dispose of battery packs in rivers or immerse in water.</p>		<p>Do not dispose of battery packs in fire. They will explode and cause injury.</p>

	Do not dispose of a battery pack with the household waste!		Use and store the battery within an temperature below 122°F(50°C).
	Do not disassemble, crush, heat above 212°F(100°C); Never expose the battery to microwaves or high pressures.		Safety alert symbol. Used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury.
 DANGER	Indicates an imminently hazardous situation which, if not avoided, will result in serious injury.	 WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in serious injury.
 CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.	CAUTION	Used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, may result in property damage.
	Sound Power Level (Image used for illustration purposes only, check machine and Declaration of Conformity for actual reading)	 Li-ion	Battery Li-ion: Recyclable

Recommended Operating Temp	0-40°C
Recommended Storage Temp	0-40°C
Recommended Charging Temp	Charge as instructed in the manual

BATTERY & CHARGER

 	Read & understand operator's manual before using the machine. Failure to follow instructions could result in death or serious injury. Please keep in a safe place for future reference.	 WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in serious injury.
	For indoor use only.		Double Insulation
	Ambient temperature 40°C max. (only for battery)		Waste electrical products MUST NOT be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.
	Do not incinerate battery pack or charger.		

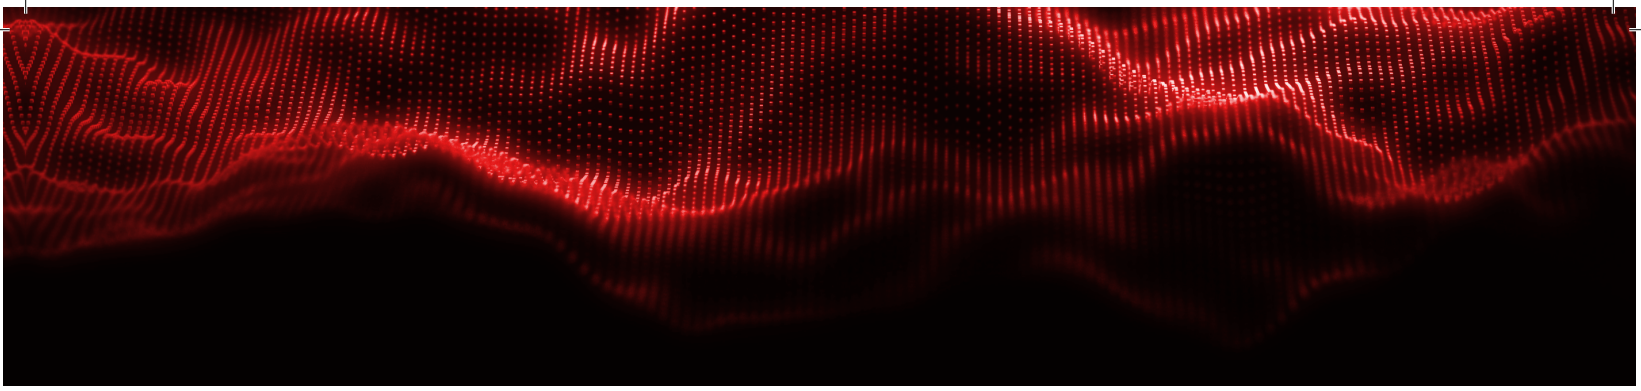

NOISE

Tested to fulfill all relevant provisions of Noise Emission Directive 2000/14/EC amended by 2005/88/EC:
Guaranteed Sound Power Level (L_{WA}): 96 dB(A)

NOTE: The declared noise emission value(s) has been measured in accordance with a standard test method and may be used for comparing one tool with another.

NOTE: The declared noise emission value(s) may also be used in a preliminary assessment of exposure.



WARNING

Wear ear protection

The noise emission during actual use of the power tool can differ from the declared value(s) depending on the ways in which the tool is used especially what kind of workpiece is processed.

Be sure to identify safety measures to protect the operators that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time).

VIBRATION

The vibration total value (tri-axial vector sum) determined according to EN 62841-1, EN 62841-4-2:
Vibration emission (a_h): 1.35 m/s^2 - Uncertainty (K): 1.5 m/s^2 .

NOTE: The declared vibration total value(s) has been measured in accordance with a standard test method and may be used for comparing one tool with another.

NOTE: The declared vibration total value(s) may also be used in a preliminary assessment of exposure.



WARNING

The vibration emission during actual use of the power tool can differ from the declared value(s) depending on the ways in which the tool is used especially what kind of workpiece is processed.

Be sure to identify safety measures to protect the operators that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time).

GENERAL SAFETY RULES



WARNING

Before you put the machine into operation, you must read this instruction manual.

When using this machine, observe the following safety instructions to remove the risk of personal injury or material damage. Please also observe the special safety instructions in the respective chapters. Where applicable, follow the legal directives or regulations for the prevention of accidents in relation to the use of this machine.

When using electric/battery tools, basic safety precautions, including the following, should always be followed to reduce the risk of serious personal injury and/or damage to the unit.

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference. The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

Webb **eco**

X-SERIES

INSTRUCTION MANUAL



WARNING

When using battery tools, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury.

TRAINING


1. **This mower can amputate hands and feet and throw objects. Failure to observe the following safety instructions could result in serious injury or death.**
2. **Only allow responsible adults, who are familiar with the instruction, to operate the mower.**

PREPARATION

1. **Keep Children Away** - All visitors should be kept a safe distance from the work area. Be alert and turn the power tool off if a child enters the area. Use extra care when approaching blind corners, shrubs, trees, or other objects that may block your view of a child.
2. **Dress Properly** - Do not wear loose clothing or jewelry. They can be caught in the power tool. Use of rubber gloves and substantial footwear is recommended when working outdoors. Do not operate the power tool when barefoot or wearing open sandals.
3. **Use Safety Glasses** - Always use face or dust mask if operation is dusty.
4. **Objects struck by the cutting blade can cause severe injuries to persons. The power tool should always be carefully examined and cleared of all objects prior to each use. Stay behind the handle when the power tool is running.**
5. **Be sure the area is clear of other people before operating. Stop power tool if anyone enters the area.**
6. **Watch for holes, ruts, bumps, rocks, or other hidden objects.** Uneven terrain could cause a slip and fall accident. Tall grass can hide obstacles.
7. **Check the blades or blade bolts carefully for cracks or damage before operation. Replace cracked or damaged blades or blade bolts immediately.**
8. **Before operation, inspect the power tool or blades for any damage.**

OPERATION

1. **Avoid Dangerous Environment** - Never operate the power tool in damp or wet locations. Always be sure of your footing: keep a firm hold on the handle and walk; never run.
2. **Don't Use In Rain.**
3. **Use Right Appliance** - Do not use power tool for any job except that for which it is intended.
4. **Don't Force Power Tool** - It will do the job better and safer at the rate for which it was designed.
5. **Don't Overreach** - Keep proper footing and balance at all times. Do not operate near drop-offs, ditches, or embankments. You could lose your footing or balance.
6. **Stay Alert** - Watch what you are doing. Use common sense. Do not operate the power tool when you are tired. Do not operate while under the influence of alcohol or drugs. A moment of inattention while operating may result in serious personal injury.
7. **Remove Batteries From Power Tool** - Remove the batteries when not in use, before servicing, cleaning, removing material or changing accessories such as cutting blades.
8. **Keep hands and feet away from the cutting area. Keep clear of the discharge opening at all times.**
9. **If the power tool strikes a foreign object, follow these steps:**
 - Stop the power tool. Release the OPC lever. Wait until the blade comes to a complete stop.
 - Remove the batteries.
 - Inspect the power tool for any damage.
 - Repair any damage before restarting and operating the power tool. Replace the blade if it is damaged in any way.

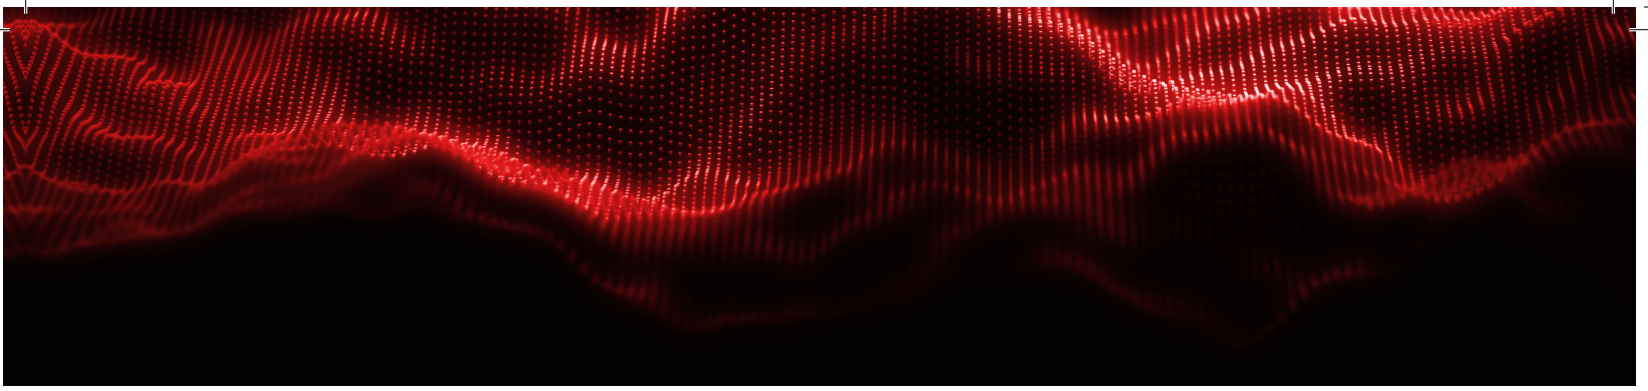

10. **Never direct discharged material toward anyone. Avoid discharging material against a wall or obstruction.** Material may ricochet back toward the operator. Stop the blade when crossing gravel surfaces.
11. **Do not pull the power tool backwards unless absolutely necessary.** When you are compelled to back the power tool from a fence or other similar obstruction, look down and behind before and while moving backwards.
12. **Release ON/OFF lever and wait for blade rotation to stop before crossing driveways, walks, roads and any gravel covered areas.** Also turn off the power tool if you leave it, reach to pick up or remove something out of your way, or for any other reason that may distract you from what you are doing.
13. **Do not operate power tool without the entire grass collector, discharge guard, rear guard, or other safety protective devices in place and working.**
14. **Stop the power tool and remove the batteries whenever you leave the power tool, before cleaning the power tool, or unlogging the side discharge chute, or making any repairs or inspections.**
15. **Shut the power tool off and wait until the blade comes to a complete stop before removing the grass collector.** Beware that the blades coast after switch off.
16. **Mow only in daylight or good artificial light.**
17. **If the power tool starts to vibrate abnormally (check immediately)**
 - inspect for damage,
 - replace or repair any damaged parts,
 - check for and tighten any loose parts.
18. **Don't grasp the exposed cutting blades or cutting edges when picking up or holding the power tool.**
19. **Never attempt to make cutting height adjustments while power tool is running.**
20. **Mow across the face of slopes, never up and down. Exercise extreme caution when changing direction on slopes. Do not mow excessively steep slopes.** Poor footing could cause a slip and fall accident.
21. **Avoid operating the power tool in wet grass.**
22. **Stop operation immediately if you notice anything unusual. Switch off the power tool. Then inspect the power tool.**
23. **Do not start the power tool when standing in front of the side discharge opening.**
24. **Avoid using the power tool in bad weather conditions, especially when there is a risk of lightning.**
25. **When you use the power tool on muddy ground, wet slope, or slippery place, pay attention to your footing.**
26. **Do not submerge the power tool into a puddle.**
27. **When operating the power tool, pay attention to piping and wiring.**

MAINTENANCE AND STORAGE

1. **Store Idle Power Tool Indoors** - When not in use, power tool should be stored in an indoor dry and locked-up place - out of reach of children.
2. **Maintain Power Tools With Care** - Keep cutting edges sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories. Inspect power tool cord periodically and if damaged, have it repaired by an approved Webb Service Dealer. Keep handles dry, clean, and free from oil and grease.
3. **Keep power tool free of grass, leaves, or other debris build up. Keep guards in place and in working order.**
4. **Keep blades sharp.**
5. **Use genuine Webb, identical replacement blades only.**
6. **Check the grass collector frequently for wear or deterioration. For storage, always make sure the grass collector is empty.** Replace a worn grass collector with a new factory replacement one for safety.
7. **Check grass collector components and the discharge guard frequently and replace with manufacturer's recommended parts, when necessary.**
8. **Check the blade mounting bolt at frequent intervals for proper tightness.**
9. **Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.**


10. Never remove or tamper with safety devices. Check their proper operation regularly. Never do anything to interfere with the intended function of a safety device or to reduce the protection provided by a safety device.
11. Be careful during adjustment of the power tool to prevent entrapment of the fingers between moving blades and fixed parts of the power tool.
12. Always allow the power tool to cool down before storing.
13. When servicing the blades be aware that, even though the batteries are removed, the blades can still be rotated.
14. Maintain or replace safety and instruction labels, as necessary.
15. Do not leave the power tool unattended outdoors in the rain.
16. When storing the power tool, avoid direct sunlight and rain, and store it in a place where it does not get hot or humid.

BATTERY TOOL USE AND CARE

1. Prevent unintentional starting. Ensure the On/Off switch is in the off position before connecting the batteries, picking up or carrying the power tool. Carrying the power tool with your finger on the On/Off switch or energising power tool that has the switch on invites accidents.
2. Disconnect the battery from the power tool before making any adjustments, changing accessories, or storing. Such preventive safety measures reduce the risk of starting the power tool accidentally.
3. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery may create a risk of fire when used with another battery.
4. Use power tools only with specifically designated batteries. Use of any other battery may create a risk of injury and fire.
5. When battery is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
6. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help. Liquid ejected from the battery may cause irritation or burns.
7. Do not use a battery or power tool that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
8. Do not expose a battery or power tool to fire or excessive temperature. Exposure to fire or temperature above 130°C (265°F) may cause explosion.
9. Follow all charging instructions and do not charge the battery or power tool outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
10. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
11. Do not modify or attempt to repair the machine or the battery except as indicated in the instructions for use and care.

ELECTRICAL AND BATTERY SAFETY

1. Do not dispose of the battery(ies) in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
2. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if it is swallowed.
3. Do not charge battery in rain, or in wet locations.
4. Do not charge the battery outdoors.
5. Do not handle charger, including charger plug, and charger terminals with wet hands.
6. When replacing batteries, all batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged battery.
7. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.

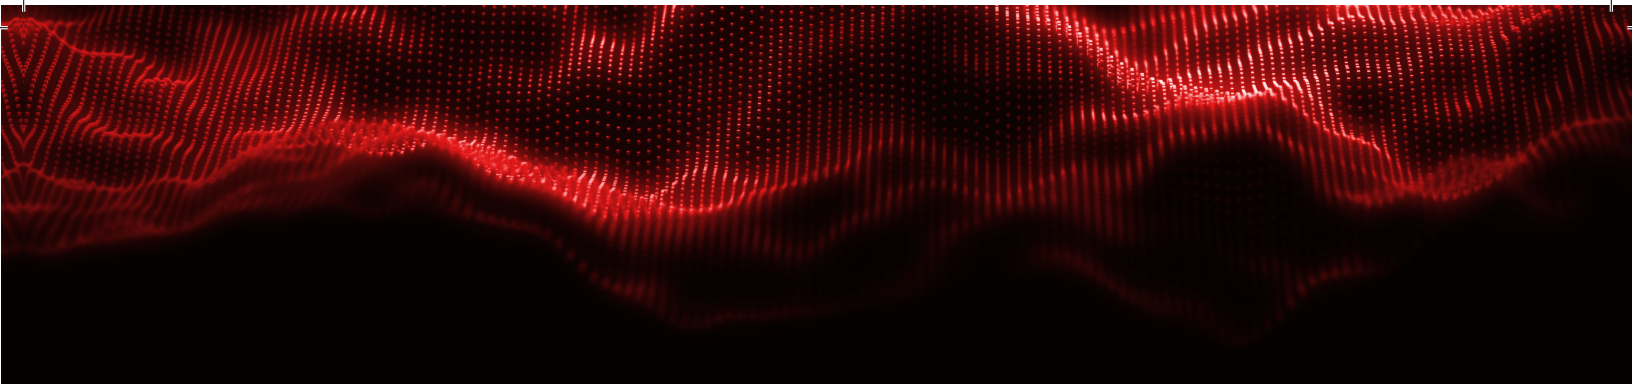- 
8. **Do not replace the battery in the rain.**
 9. **Do not wet the battery terminal with liquid such as water or submerge the battery. Do not leave the battery in the rain, nor charge, use, or store the battery in a damp or wet place.** If the terminal gets wet or liquid enters inside of battery, the battery may be short circuited and there is a risk of overheat, fire, or explosion.
 10. **After removing the battery from the machine or charger, be sure to attach the battery cover to the battery and store it in a dry place.**
 11. **Do not replace the battery with wet hands.**
 12. **Avoid dangerous environment. Don't use the machine in damp or wet locations or expose it to rain.** Water entering the machine will increase the risk of electric shock.
 13. **If the battery gets wet, drain the water inside and then wipe it with a dry cloth. Dry the battery completely in a dry place before use.**

SERVICE

1. **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.
2. **Never service damaged batteries. Servicing of batteries is not authorised.**



WARNING

Use of this product can create dust containing chemicals which may cause respiratory or other illnesses. Some examples of these chemicals are compounds found in pesticides, insecticides, fertilizers and herbicides.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well-ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

IMPORTANT BATTERY SAFETY INSTRUCTIONS

1. **Before using battery cartridge, read all instructions and cautionary markings on (1) battery charger, (2) battery, and (3) product using battery.**
2. **Do not disassemble or tamper with the battery cartridge.** It may result in a fire, excessive heat, or explosion.
3. **If operating time has become excessively shorter, stop operating immediately. It may result in a risk of overheating, possible burns and even an explosion.**
4. **If electrolyte gets into your eyes, rinse them out with clear water and seek medical attention right away. It may result in loss of your eyesight.**
5. **Do not short the battery cartridge:**
 - **Do not touch the terminals with any conductive material.**
 - **Avoid storing battery cartridge in a container with other metal objects such as nails, coins, etc.**
 - **Do not expose battery cartridge to water or rain.**

A battery short can cause a large current flow, overheating, possible burns and even a breakdown.

6. **Do not store and use the tool and battery cartridge in locations where the temperature may reach or exceed 50 °C (122 °F).**
7. **Do not incinerate the battery cartridge even if it is severely damaged or is completely worn out. The battery cartridge can explode in a fire.**
8. **Do not nail, cut, crush, throw, drop the battery cartridge, or hit against a hard object to the battery cartridge.** Such conduct may result in a fire, excessive heat, or explosion.
9. **Do not use a damaged battery.**
10. **The contained lithium-ion batteries are subject to the Dangerous Goods Legislation requirements.** For commercial transports e.g. by third parties, forwarding agents, special requirement on packaging

Webb **eco**

X-SERIES

INSTRUCTION MANUAL

and labeling must be observed. For preparation of the item being shipped, consulting an expert for hazardous material is required. Please also observe possibly more detailed national regulations. Tape or mask off open contacts and pack up the battery in such a manner that it cannot move around in the packaging.

11. **When disposing of the battery, remove it from the tool and dispose of it in a safe place. Follow your local regulations relating to disposal of battery.**
12. **Use batteries only specified by Webb Garden Power.** Installing the batteries to non-compliant products may result in a fire, excessive heat, explosion, or leak of electrolyte.
13. **If the tool is not used for a long period of time, the battery must be removed from the tool.**
14. **During and after use, the battery cartridge may take on heat which can cause burns or low temperature burns. Pay attention to the handling of hot battery cartridges.**
15. **Do not touch the terminal of the tool immediately after use as it may get hot enough to cause burns.**
16. **Do not allow chips, dust, or soil stuck into the terminals, holes, and grooves of the battery cartridge. It may cause heating, catching fire, burst and malfunction of the tool or battery cartridge, resulting in burns or personal injury.**
17. **Do not use the battery near a high-voltage electrical power lines.** It may result in a malfunction or breakdown of the tool or battery cartridge.
18. **Keep the battery away from children.**



CAUTION

Only use genuine Webb Garden Power batteries. Use of non-genuine Webb Garden Power batteries, or batteries that have been altered, may result in the battery bursting & causing fires, personal injury and damage. It will also void the Webb Garden Power warranty for the tool and charger.

TIPS FOR MAINTAINING MAXIMUM BATTERY LIFE

1. Charge the battery before completely discharged. Always stop tool operation and charge the battery when you notice less tool power.
2. Never recharge a fully charged battery cartridge. Overcharging shortens the battery service life.
3. Charge the battery cartridge with room temperature at 10°C - 40°C (50°F - 104°F). Let a hot battery cool down before charging it.
4. When not using the battery, remove it from the tool or the charger.
5. Charge the battery if you do not use it for a long period (more than six months).




WARNING

Always be sure that all the batteries are removed before carrying out any work on the machine. Failure to remove all the batteries may result in serious personal injury from accidental start-up.



WARNING

Never start the machine unless it is completely assembled. Operation of the power tool in a partially assembled state may result in serious personal injury from accidental start-up

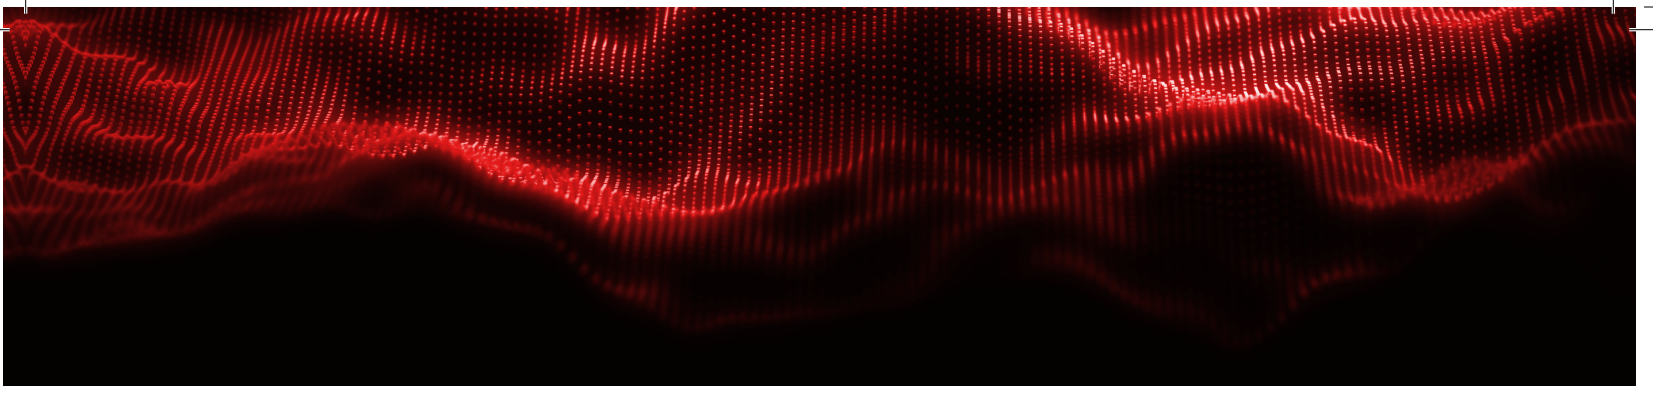

KNOW YOUR MACHINE

NOTE: WEV20X2LM47SPB4X & WEV20X2LM53SPB4X include the charger and batteries.

WEV20X2LM47SPBARE & WEV20X2LM53SPBARE do not include the charger and batteries.

1. OPC Lever	2. Control Panel	3. Quick Release Handle
4. Grass Collector	5. Battery Compartment	6. Wheel x4
7. Height Adjuster Handle	8. Side Discharge Chute	9. Side Discharge Cover
10. Lights	11. Rear Grass Flap	12. 20v Battery
13. Indicator Lights	14. Lock Button	15. Battery Lock
16. Charger Cable Input	17. Charger – BS 3-Pin	18. Charger - Type C x2 & USB A Outlets



Webb **eco**

X-SERIES

INSTRUCTION MANUAL



ASSEMBLY



WARNING

In the unlikely event your machine is damaged prior to assembly or operation, do not attempt to operate the machine. Contact your retailer for assistance.

Remove the machine and contents from the carton. Be sure the carton is empty before discarding. If you require assistance regarding the contents of the machine, contact us:

TEL: 01793 333212 - EMAIL: CS@WEBBGARDENPOWER.CO.UK

MONDAY TO FRIDAY – 08:00 TO 17:00 - (CLOSED WEEKENDS, BANK HOLIDAYS & BUSINESS CLOSURES)

If you find parts are missing or damaged, do not use the product but contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.

Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.

NOTE: WEV20X2LM47SPB4X & WEV20X2LM53SPB4X include the charger and batteries.

WEV20X2LM47SPBARE & WEV20X2LM53SPBARE do not include the charger and batteries.



WARNING



Wear protective gloves for this assembly work and always lay the product on a flat and stable surface while assembling. Follow the assembly instructions step-by-step and use the pictures provided as a visual guide to easily assemble the product.

Do not insert the battery, before the power tool is completely assembled or adjusted.

HANDLE ASSEMBLY (47CM MODEL)




WARNING


RISK OF INJURY!

When installing the handles, be careful not to pinch the cord between the handles. If the cord is damaged, the mower switch may not work.

1. Pull up the handle quick release levers (1).


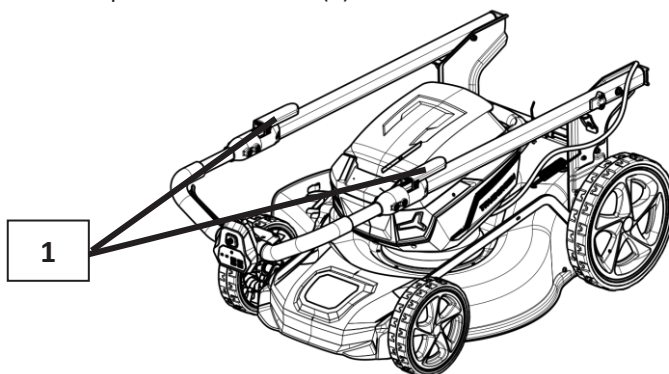


2. Raise the handle assembly to the chosen angle of operation.
3. Ensure handle assembly is fully locked into position.
4. Release the quick release handles.

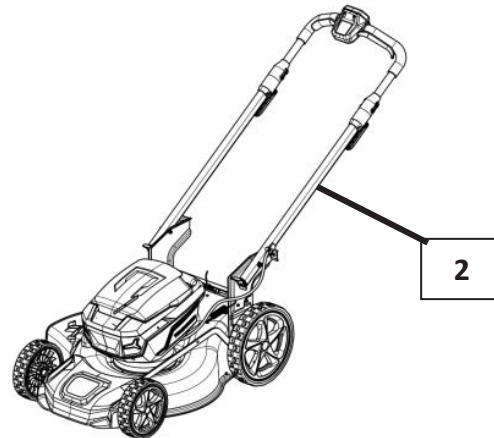



REMOVING MULCH PLUG

1. Lift the rear flap (1) (Fig.4).
2. Lift and slide the mulch plug (1) away from the machine (Fig.5)

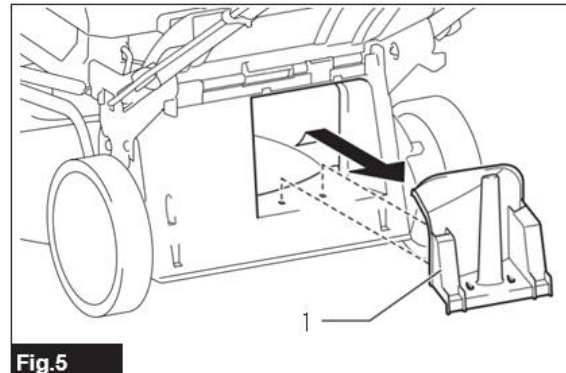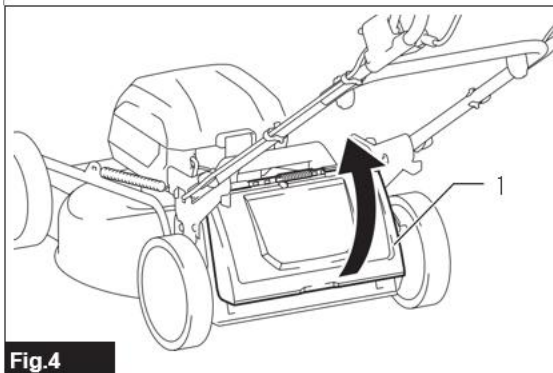



GRASS COLLECTOR ASSEMBLY

1. Lift the upper clip (1) of the grass collector (Fig.6).
2. Insert the collector frame (1) into the grass collector, as imaged (Fig.7).

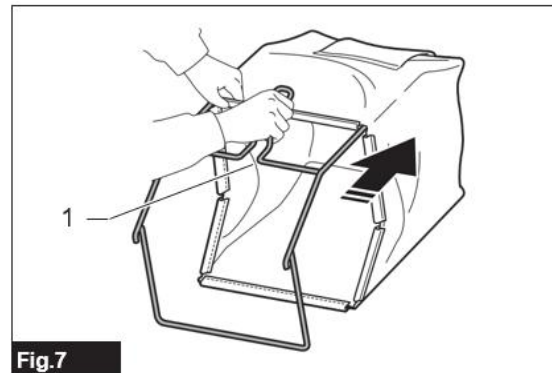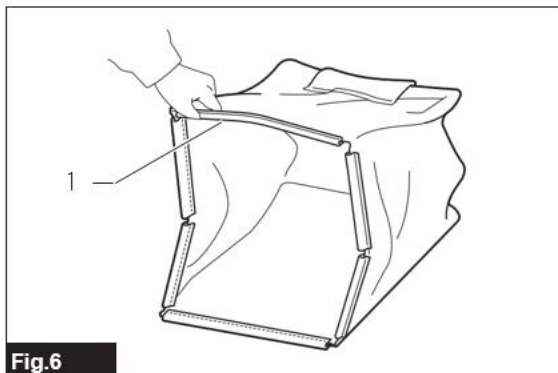


NOTE: Do not insert the handle into the collector frame into the grass collector. Be sure to insert the frame along the stitch of the grass collector.

3. Make sure that there is no sagging on the corners of the grass collector (Fig.8).
4. Open the upper clip of the grass collector and attach it to the frame (Fig.9).
5. Attach all the remaining clips (1) as shown in the Fig.10. Make sure that all the clips are securely attached to the frame.

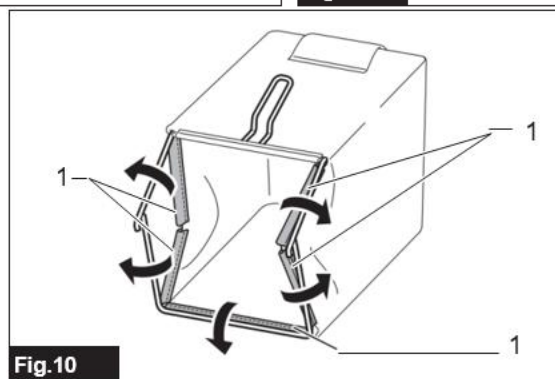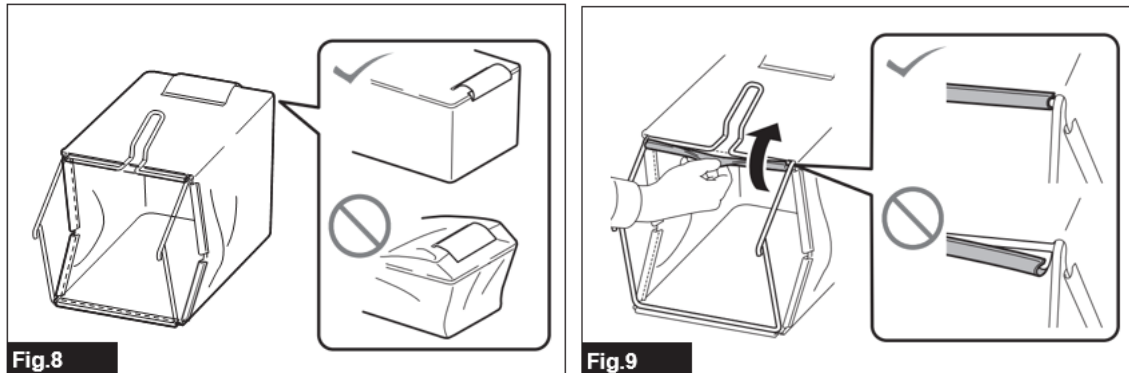

INSTALL OR REMOVE GRASS COLLECTOR


1. Lift the rear flap (1) (Fig.11).

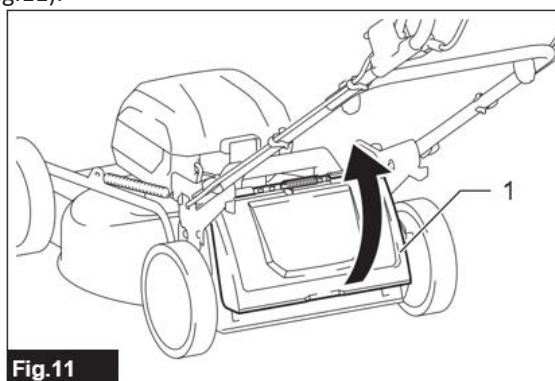

X-SERIES

INSTRUCTION MANUAL


2. Hold the handle (2) of the grass collector (1) and then hook the grass collector onto the rod (3) of the machine body as shown in the (Fig.12).

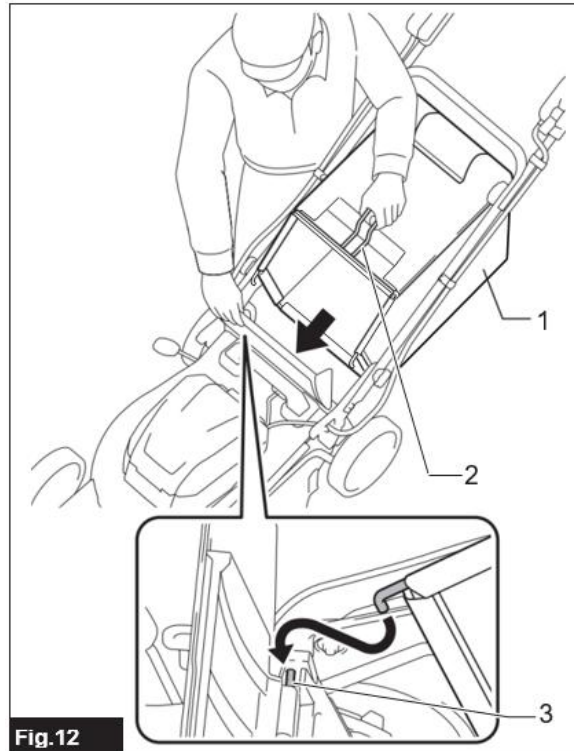

3. To remove the grass collector, open the rear flap and then remove the grass collector by holding the handle.

FITTING MULCH PLUG


1. Open the rear flap (1) and then remove the grass collector (2) (Fig.13).
2. Attach the mulch plug (1) by pushing it as far as it will go so that the feet on the mulch plug (2) fit into the holes on the machine (Fig.14).

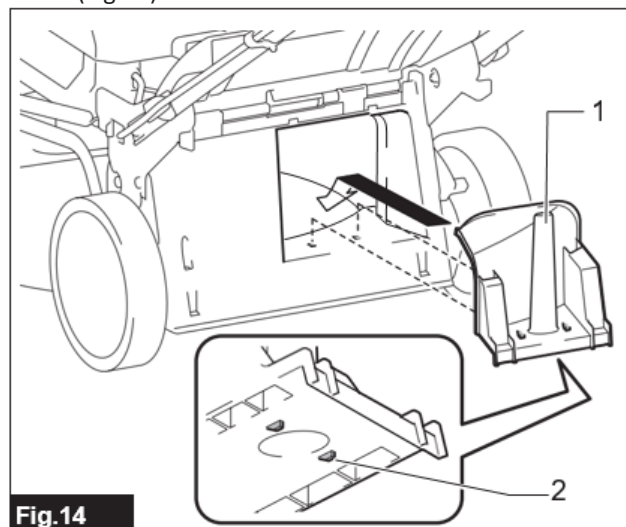


INSTALLING & REMOVING SIDE DISCHARGE CHUTE

To install the discharge chute, follow the steps below.

1. Open the rear flap and then remove the grass collector.
2. Attach the mulch plug (1) by pushing it as far as it will go so that the feet on the mulch plug (2) fit into the holes on the machine (Fig.14).

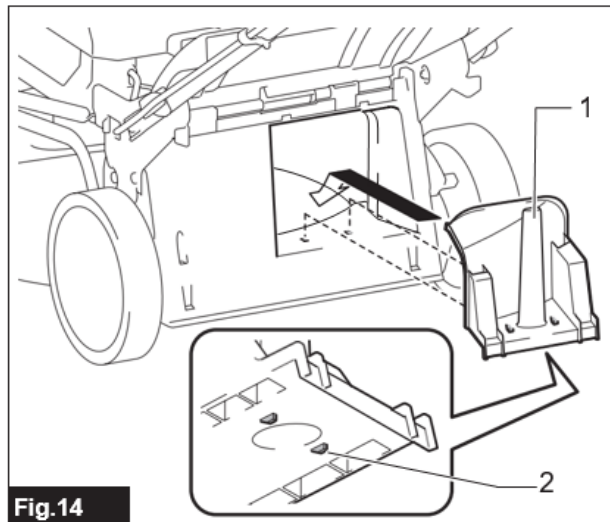

3. Lift the side discharge flap and hook the side discharge chute to the bar of the side discharge flap.
4. To remove the side discharge chute, lift the side discharge cover, unhook the side discharge chute and re-seat the side discharge chute.

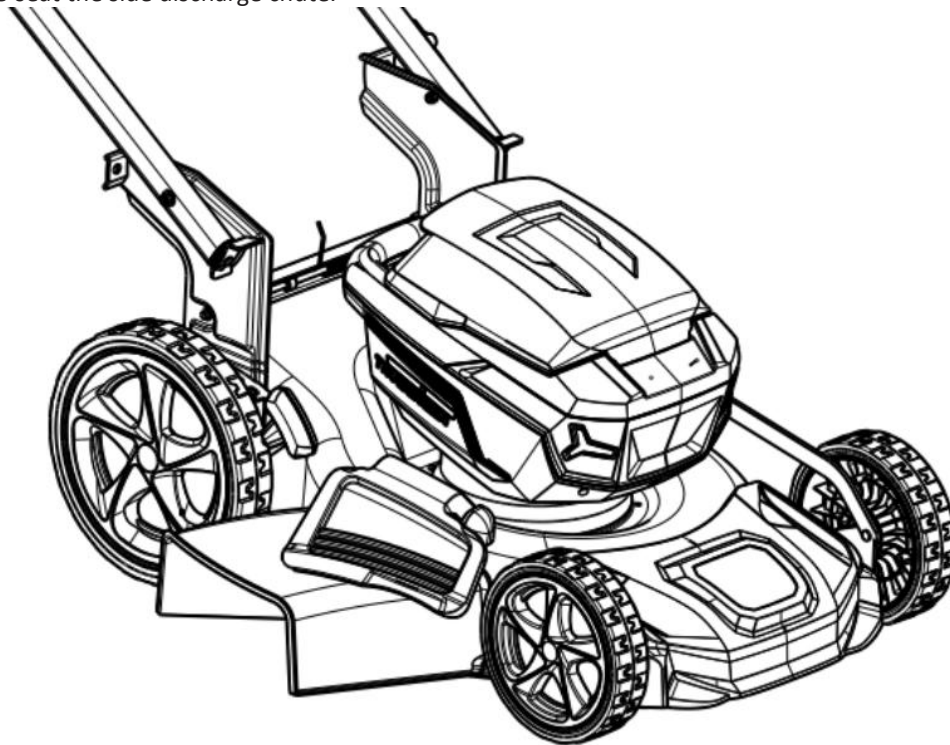

BATTERY & CHARGER**WARNING**

Use only authorised Webb 20v lithium-ion batteries.

CHARGING BATTERY**CAUTION**

Use only authorised Webb 20v Lithium-ion batteries.

Batteries are shipped in a low charge condition to prevent potential problems. Therefore, you should charge them prior to use.

NOTE: Batteries will not reach full charge the first time they are charged. Allow several cycles (operating tool followed by recharging batteries) for them to fully charge.

TO CHARGE

1. Use this charger only with Authorised Webb 20v Lithium-ion batteries.
2. Never attempt to charge non-rechargeable batteries.
3. Make sure the power supply is normal UK home voltage, 230 volts, 50 Hz, AC only.
4. Connect the charger to the power supply. The charger light will illuminate GREEN noting that the power is on.
5. Slide the battery onto charger.
6. Press down on battery to be sure contacts on the battery engage correctly with the charger contacts.
7. When the battery and charger are connected correctly, the charger light will be a flickering RED to indicate the battery is charging.
8. A constant GREEN light indicates the battery is fully charged.
9. A minimum charge time of 80 minutes (1x 4Ah battery) or 160 minutes (2x 4Ah battery) is required to recharge a completely discharged battery.
10. The battery will become slightly warm to the touch while charging. This is normal and does not indicate a problem.
11. DO NOT place a charger in an area of extreme heat or cold. It will work best if stored and operated in normal room temperature.
12. Frequently monitor the charger and battery while connected.
13. When the battery is fully charged, unplug your charger from power supply and remove the battery from the charger.
14. Allow the battery to cool completely before attempting to use it.

NOTE: If the battery does not fit properly, disconnect it and confirm that the battery is the correct model for the charger supplied. Do not charge any other battery or any battery that does not securely fit the charger.

**CAUTION**

**When in continuous operation in a tool, the battery will become hot!
Allow the battery to cool down to room temperature for approximately 30 minutes, before attempting to recharge. This will extend the life of your batteries.**

INSTALLING / REMOVING BATTERY



CAUTION

Always switch off the machine before installing or removing the battery.

Hold the machine and the battery firmly when installing / removing battery. Failure to hold the machine and battery firmly may cause them to slip out your hands and result in damage to the machine, battery or the operator.

Always install the battery fully until the battery lock cannot be seen. If not, it may accidentally fall out of the machine, causing unrepairable damage or cause injury to you or bystanders.

Do not install the battery forcibly. If the battery does not slide in easily, it is not being inserted correctly.

INSTALL BATTERY

1. To install the battery, pull up the battery compartment locking lever (2) and then lift the cover (1) (Fig.16).


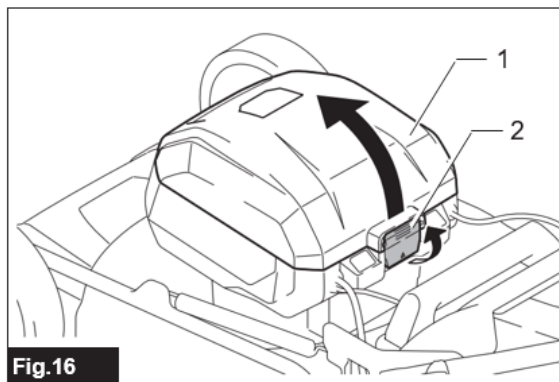


Fig.16

2. Ensure the battery release button of the battery is at the top and the base of the battery is facing the front of the machine.
3. Align the battery with the groove in the battery housing and slide it into place. Insert it all the way until it locks in place with an audible click (1).

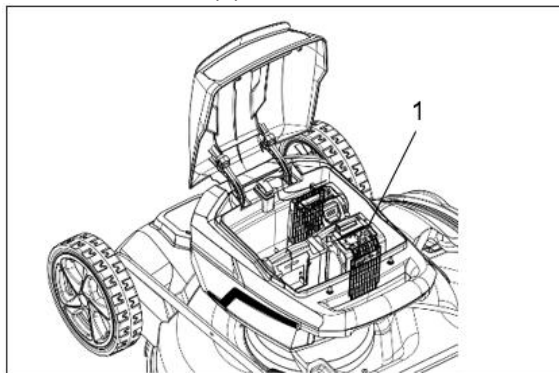

4. Close the battery cover and push it until it is latched with the battery compartment locking lever.

X-SERIES

INSTRUCTION MANUAL

REMOVE BATTERY

To remove the battery.

1. Pull up the battery compartment locking lever and then lift the cover.
2. Press the battery release button and remove the battery, by sliding upwards from the tool.



MACHINE & BATTERY PROTECTION

The tool is equipped with a tool or battery protection system. The system can automatically cut off the power supply to the motor to extend the lifespan of the tool and battery. If the tool or battery is in one of the following conditions, the tool will automatically stop during operation.

OVERLOAD PROTECTION

When a tool or battery operates in a manner that causes it to produce an abnormally high current, the tool automatically shuts down. In this case, shut down the tool and remove the factors that caused the overload. Then turn on the tool to restart.

OVERHEAT PROTECTION

When the tool overheats, it will automatically stop. Let the tool cool down for a minimum period of 15 minutes before attempting to restart. When the battery overheats, the green light will blink and stop the power supply to the tool. The tool automatically stops and restarts after cooling of the battery.

UNDER VOLTAGE PROTECTION

When the battery capacity is low, the tool will automatically stop. If the tool does not start, please remove the battery, and then charge the battery to its full capacity.


PROTECTION AGAINST OTHER CAUSES

Protection system is also designed for other causes that could damage the tool and allows it to stop automatically. Take all the following steps to clear the causes when the tool has been brought to a temporary halt or stop in operation.

- Turn the tool off and then turn it on again to restart.
- Charge the battery(ies) or replace it/them with recharged battery(ies).
- Let the tool and battery(ies) cool down.

If no improvement can be found by restoring the protection system, contact Webb Garden Power.

NOTE: The timing, at which the battery indicator lights illuminate, depends on the temperature at the work area and the battery conditions.

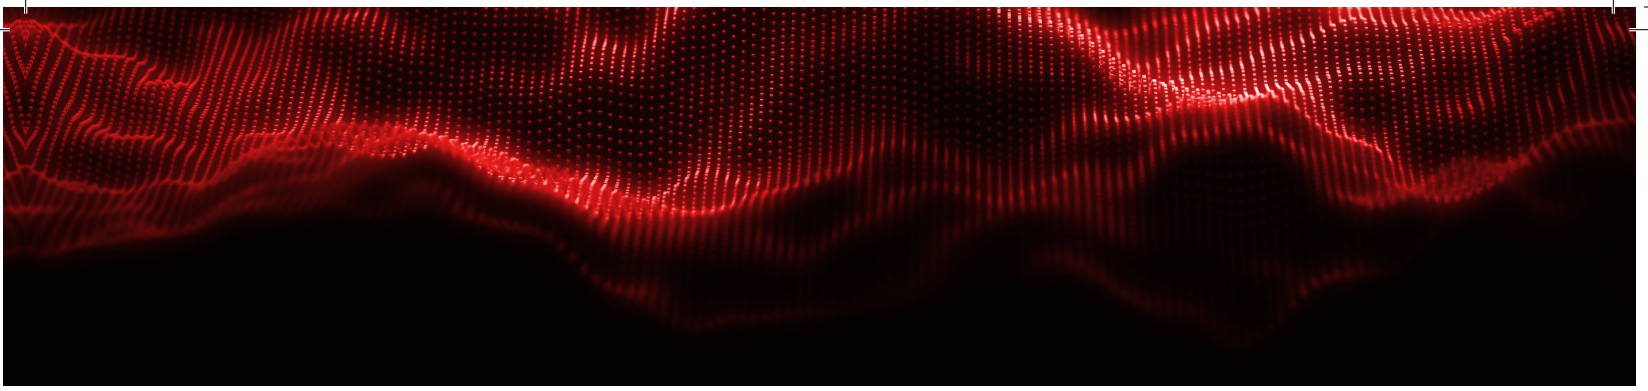

BATTERY INDICATOR

Press the check Red release button on the battery to indicate the remaining battery capacity. The LED indicator lights will illuminate for a few seconds.



BATTERY LED LIGHTS	BATTERY CAPACITY
LED 1,2 & 3 on	Full charged (66-100%)
LED 1 & 2 on	Battery is 33%-66% charged
LED 1 on	Battery is depleted (0%-33%). Charge the battery.

NOTE: Depending on the conditions of use and the ambient temperature, the indication may differ slightly from the actual capacity.

NOTE: The green indicator light will blink when the battery protection system works.

OPERATION



WARNING

In the unlikely event your machine is damaged prior to assembly or operation, do not attempt to operate the machine. Contact your retailer for assistance.



DANGER

Risk of injury!

The device may only be put into operation if there are no defects. If a part is defective, it must be replaced before the device is used again.

Before starting work check the area and remove all objects which may be kicked up by the unit.

Check the safety equipment and the safe condition of the power tool.

- Check all parts to make sure they fit tightly.
- Check whether there are visible defects, broken parts, cracks etc.

DASHBOARD

The dashboard has the On/Off button and power indicator lights.

1. On/Off Power Button	2. Battery Life Indicators	3. Auto Mode Light
4. Max Mode Light	5. Safety Button	6. Drive Lever


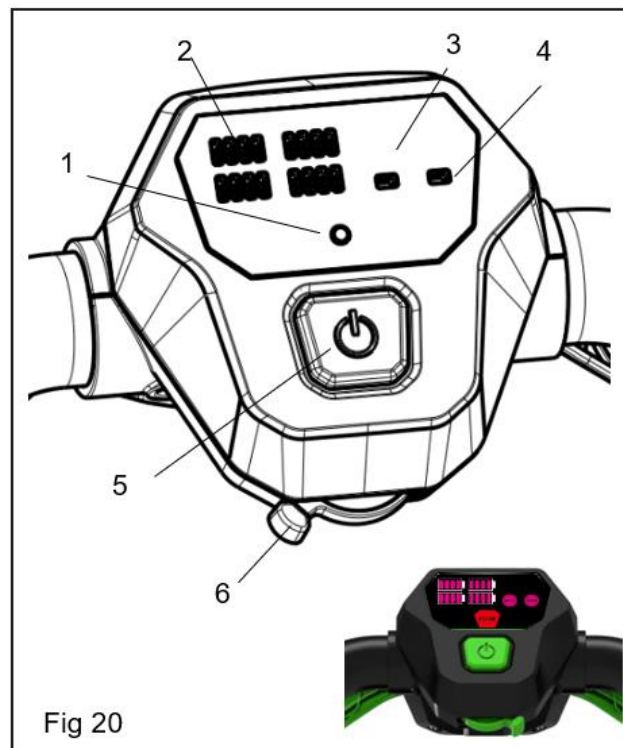


Fig 20

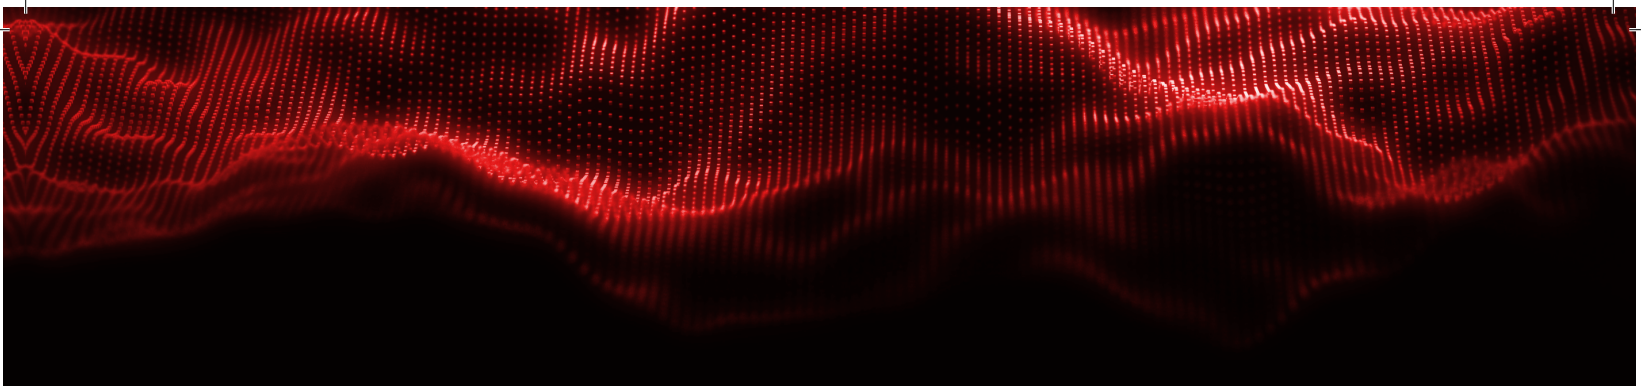

DASHBOARD BATTERY LIFE INDICATORS

When the remaining battery capacity gets low, the battery indicator blinks on the applicable battery side. By further use, the machine stops and the battery indicator lights up. In this situation, charge the battery.

INDICATOR LIGHTS			REMAINING CAPACITY
ON	OFF	FLASHING	
			75% TO 100%
			50% TO 75%
			25% TO 50%
			0% TO 25%
			CHARGE THE BATTERY.
			THE BATTERY MAY HAVE MALFUNCTIONED.

NOTE: Depending on the conditions of use and the ambient temperature, the indication may differ slightly from the actual capacity.

NOTE: The first (far left) indicator lamp will blink when the battery protection system works.

SWITCHING ON/OFF

- To switch ON the power tool, press the On/Off Power button (1) until the battery life indicators (2) illuminate on the dashboard.
- To switch OFF the power tool, press the On/Off Power button (1) until the battery life indicators go out on the dashboard.

NOTE: Please adhere to local rules regarding periods of days for operation.

NOTE: If the main power lamp lights up in red or blinks in red or green, refer to the instructions for machine/battery protection system.

MODES BUTTON

By pressing the On/Off Power button, you can switch the power tool from standard mode to max mode, with the appropriate dashboard light illuminating on the dashboard.

NOTE: By increasing the machines power to Max Mode, you will use more battery life.

Mode	Lamp	Description
Standard Mode	Auto Lamp On	The machine works in the auto mode.
Max Mode	Max Mode Lamp Lights Up In Green.	The Machine Works In The High-Speed Mode.

X-SERIES

INSTRUCTION MANUAL

OPC LEVERS



WARNING

Before installing the battery, always check to see that the OPC levers operate correctly and return to the off position when released. Operating the machine with controls that do not operate correctly can lead to loss of control and serious personal injury.

NOTE: The mower will not start without pressing the On/Off button first, before pulling the OPC Levers.

NOTE: Mower may not start due to the overload when you try to mow long or dense grass. Increase the mowing height in this situation.

OPERATION

This machine is equipped with On/Off Button. If you notice anything unusual with its operation, stop the power tool immediately and have it checked by your nearest Approved Webb Service Dealer.

1. Install the batteries in the power tool and close the battery cover.
2. Press the On/Off Power Button on the dashboard.
3. Hold the Safety Button (1), then hold either the left or right OPC Lever (2) at the same time. The motor will start and cutting blade rotate (Fig.21). Once the motor is running, you can release the Safety Button (1) during operation and use both hands on the OPC Levers (2).
4. To stop the machine, release the OPC Levers (2)

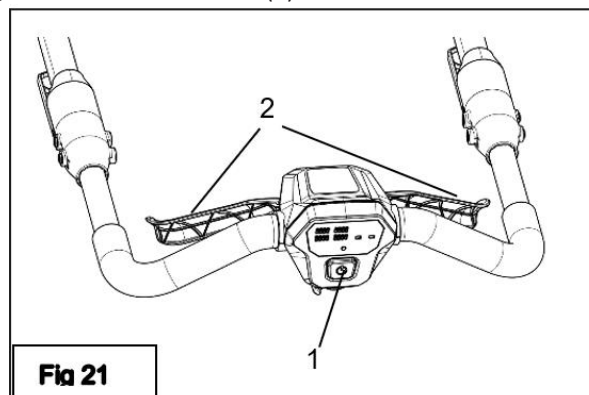


Fig 21

DRIVE LEVER

The power tool is supplied with a drive function. This function assists the user in driving the machine forwards, between 0.8mph and 1.2mph. (The operator must be in attendance for this to operate)

1. Slide the drive lever from the left (off position) to the right to determine your required forward motion speed.

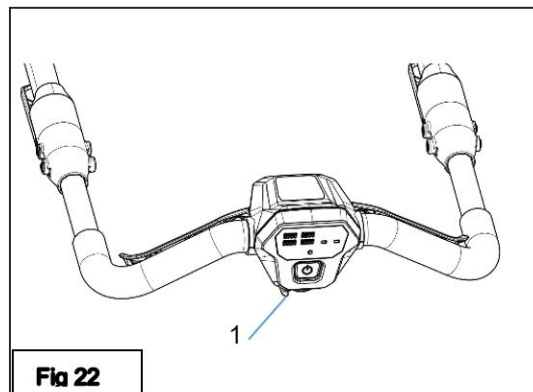


Fig 22

ADJUSTING CUTTING HEIGHT



WARNING

Never put your hands, feet or legs under the mower deck when adjusting the mowing height. Always make sure that the height adjustment lever is correctly located in your chosen cutting height groove, before operation.

The mowing height can be adjusted between 30mm and 75mm (47cm Model) and 30mm and 100mm (53cm Model). Turn off the power tool and then adjust the mowing heights, pulling the height adjusting lever out of the groove and move it to your desired mowing height.

The table shows the relevant adjustment number to the appropriate cutting height.

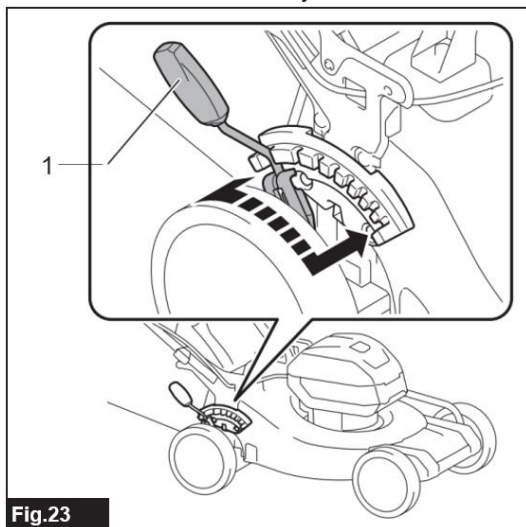


Fig.23

Number	47cm Cutting Width	53cm Cutting Width
1	30mm	30mm
2	35mm	41.7mm
3	40mm	53.3mm
4	47.5mm	65mm
5	55mm	76.7mm
6	65mm	88.3mm
7	75mm	100mm

Hold the right lower handle (2) with your left hand and then move the mowing height adjusting lever (1) with your right hand (Fig.24).

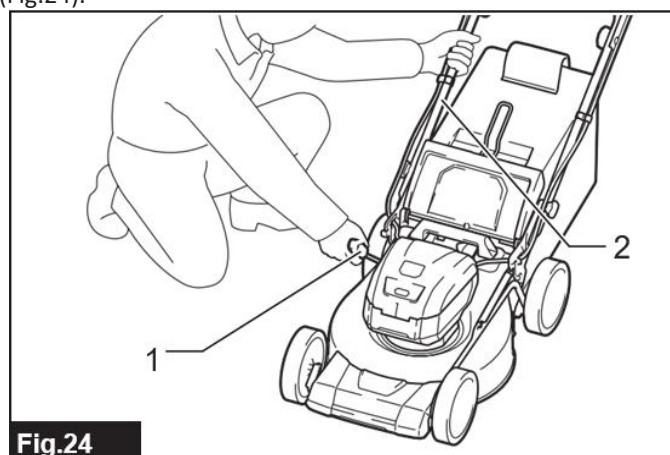


Fig.24

NOTE: The mowing height figures should be used as a guideline. Depending on the conditions of the lawn or the ground, the actual lawn height may become slightly different from the set height.

NOTE: Try a test cutting area of grass in a less conspicuous place to get your desired cutting height.

Webb **eco**

X-SERIES


INSTRUCTION MANUAL

HANDLE HEIGHT ADJUSTMENT

The handle height can be adjusted in two levels.

Release the two Quick Release Handles (1) and lower or lift the handle to the required cutting height.

When the locking pin is located on both sides of the handle assembly, release the quick release handles.

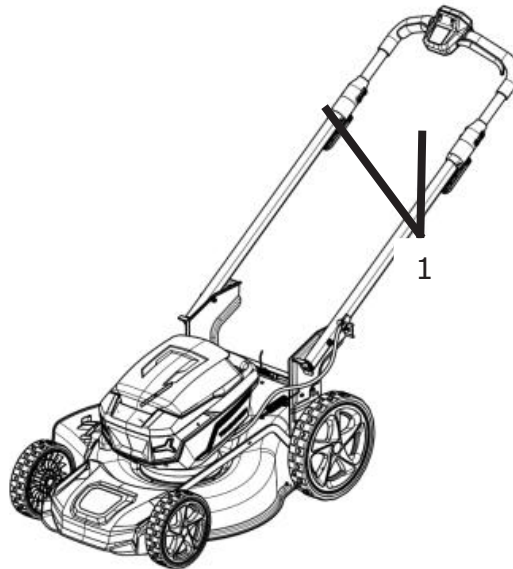

MOWING WITH COLLECTOR



WARNING

Always observe the strictest safety procedures when using the lawnmower. Carefully read the safety instructions of this manual before using the lawnmower.

Never open the rear flap when the grass bag has been detached (to be emptied) and the engine is still running. The rotating blade can cause serious injuries!

1. Select your required height of cut setting.
2. Start the power tool.
3. Keep a firm grip on the upper handle with OPC lever always engaged when attempting to cut.
4. Move the Drive lever when you wish to have help driving the machine forward.


EMPTYING THE GRASS COLLECTOR

As soon as grass clippings start to trail the lawnmower, it is time to empty the grass bag.

NOTE: Before taking off the grass collector, switch off the engine and wait until the blade has come to a stop.

1. To take off the grass collector, use one hand to lift up the rear flap and the other to grab onto the grass collector carry handle. The rear flap automatically falls down after removing the grass collector and closes off the rear chute opening.
2. Empty the grass debris from the grass collector and refit.

NOTE: If any grass residue is caught in the discharge chute, clean it using a brush. Do not remove grass debris in the mower deck or on the blade by hand or with your feet. Instead use suitable tools such as a brush or broom. To ensure that the cut grass can be collected into the grass collector, the discharge opening and inside the mower deck must be cleared of any blockage.

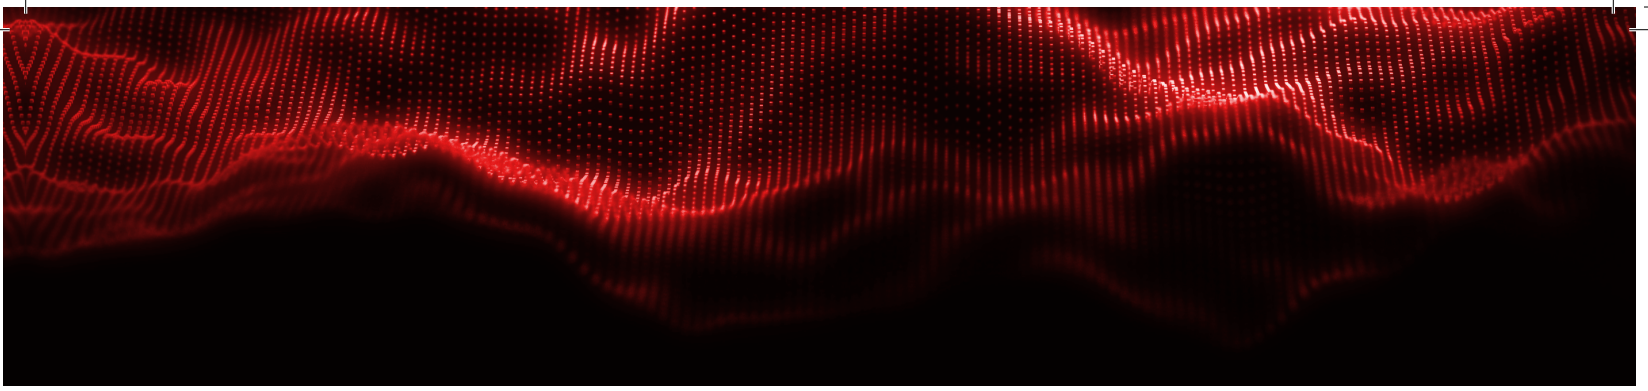

MOWING WITH THE SIDE DISCHARGE CHUTE

NOTE : When using the side discharge function. Remove the grass collector and plug the mulch plug into the rear of the machine.

1. Lift the side discharge cover. Hook in the side discharge chute.
2. Allow the side discharge cover to secure onto the side discharge chute into position.
3. Remove the grass collector. Place the grass collector in a safe place.
4. Insert the mulch plug into the rear of the machine.
5. Start the machine and mow. Grass will be discharged from the side discharge chute back to the floor.

NOTE: If any grass residue is caught in the side discharge chute, clean it using a brush. Do not remove grass debris in the mower deck or on the blade by hand or with your feet. Instead use suitable tools such as a brush or broom.

MOWING WITH THE MULCH PLUG

NOTE: Mulching stops collection of grass into the rear collector.

1. Lift the rear cover and remove the grass collector.
2. Insert the mulch plug into the rear of the machine
3. Allow the rear collector to sit on the rear of the deck.
4. Remove the side discharge chute if fitted and close the side discharge cover.
5. Start the machine and mow. The grass will be discharged back to the floor, under the deck in finely cut particles providing nutrients to the ground.

MOWING WITH REAR DISCHARGE

Using the rear discharge allows you to discharge the cut grass to the ground from the rear side of the machine without gathering the cut grass in the grass collector.

When you operate the machine using the rear discharge, be sure to remove the mulch plug, grass collector or side discharge chute, and close the rear cover.

MOWING INSTRUCTIONS

1. Walk, never run with the mower, be very careful when mowing uneven or rough ground.
2. Be careful when changing the direction of the mower on a slope. Mow across the face of slopes, never down or up.
3. Do not mow excessively steep slopes.
4. Best results will be achieved if the grass is dry. Wet grass will clog the blade & grass collection system.
5. Grass grows at different rates at different times of the year. Never use the lowest cutting height for the first cut of the season or in drought conditions.
6. Do not remove grass debris in the mower deck or on the blade by hand or with your feet. Instead use suitable tools such as a brush or broom.
7. Check that all nuts, bolts and screws are well tightened.
8. Before mowing, place the grass collector in its position.
9. Before mowing make sure that the blade and the blade fixing screw are securely fastened. When blade cutting edges require re-sharpening, this must be done evenly on both sides, so as to prevent any imbalance. If you are unsure how to sharpen the blade, please visit your local Approved Webb Service Dealer. If the blade is damaged, it must be replaced.
10. When mowing, always wear long trousers and strong footwear.
11. Work only when there is enough light.
12. Turn off the motor if you must leave the lawnmower unattended.
13. Never lift the rear of the mower while starting the motor and never place your hands and feet underneath the deck or into the rear/side discharge chutes while the motor is running.
14. Never change in any way the rated speed of the motor.
15. On driven mowers, disconnect the drive system before starting the motor.
16. Never lift or carry the mower while the motor is running.
17. Stop the motor and remove the batteries in these cases:
 - Before any operation under the deck or the rear discharge chute.

X-SERIES

INSTRUCTION MANUAL

- Before any maintenance, repairing or checking operations.
- Before carrying, lifting or removing the mower.
- If you leave the mower unattended or changing the cutting height.
- To remove and emptying the grass collector.

After hitting a foreign object, stop the motor and check thoroughly the mower in order to see if it is damaged. Take the machine to a local Approved Webb Service Dealer for inspection if necessary. Repairs of this nature are not covered under the Manufacturer's warranty.

- If the mower vibrates in an abnormal way, find the reasons why, and take your mower to a local Approved Webb Service Dealer.



WARNING

After the engine has stopped, the blade will still rotate a couple of seconds.



CAUTION

Operating on gradients could cause the machine to tip over.

Allowing anyone to operate this machine without proper instruction may result in injury.

Wear sturdy, full coverage footwear. Operating this machine with bare feet, or with open toe shoes or sandals increases your risk of injury.

Do not use the machine at night or in poor light.

Be sure to transport the machine from one place to another with the motor off and batteries removed.

Be sure to wear heavy gloves when cleaning underside of the deck or handling the blade.

To prevent damage, check the machine for any signs of damage or other faults when operated.

MOWING



WARNING

Before mowing, clear away sticks and stones from mowing area. Furthermore, clear away any weeds from mowing area in advance.


Always wear the safety goggles or safety glasses with side shields when operating the mower.




CAUTION

If cut grass or foreign object blocks up inside of the mower body, be sure to remove the batteries and wear gloves before removing the grass or foreign object.


NOTE: When cutting long grass or dense lawn, if the unevenness in the length of lawn or poor finish is found after mowing or decrease of the motor speed is found during mowing, decrease the mowing speed lower than recommended in this manual, or raise the mowing height.

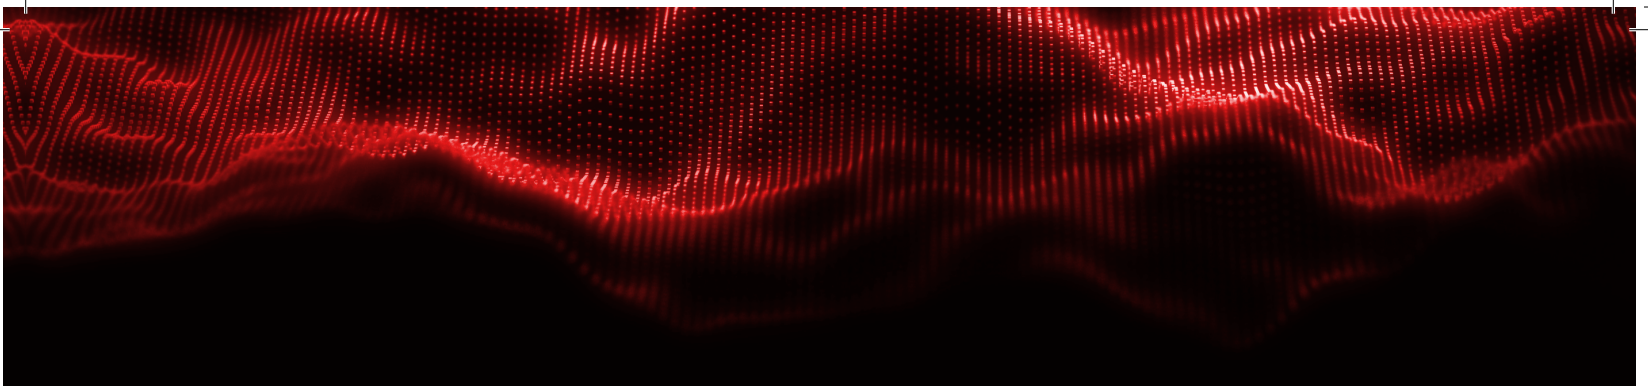

The centre line of the front wheel (3) are guidelines to mowing width (1). Using the centre lines as guidelines, mow in strips. Overlap by 1/2 to 1/3 of the previous strip (2) to mow the lawn evenly.

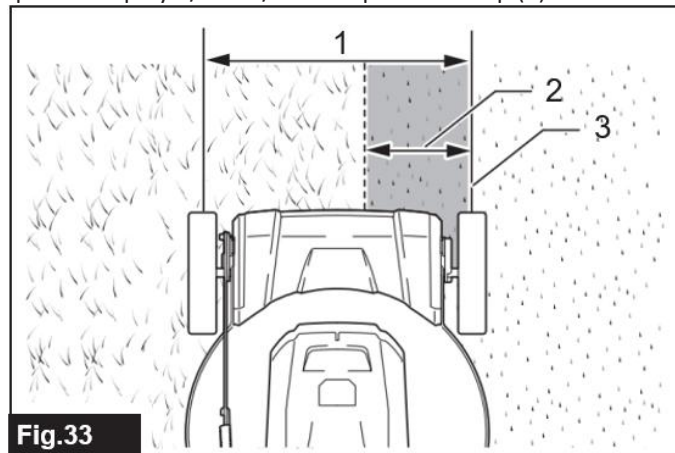

Change the mowing direction each time to prevent the grass grain pattern from forming in just one direction.

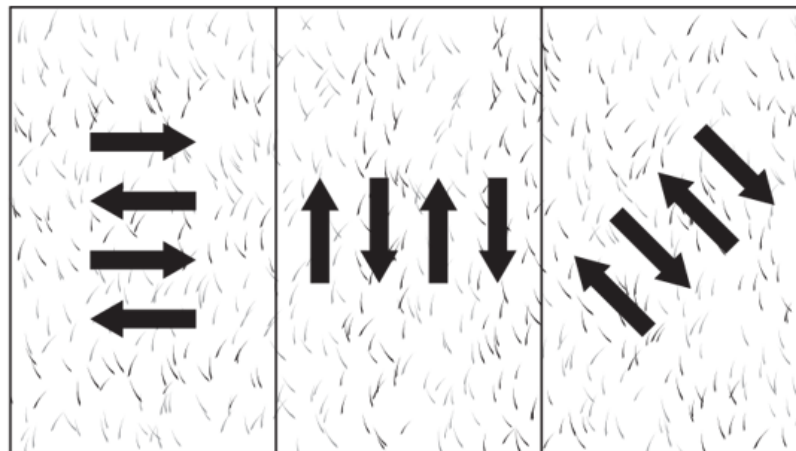

Periodically check the grass collector for mowed grass. Empty the grass collector before it becomes full. Before every periodical check, be sure to stop and turn off the machine.


NOTE: Using the mower with the grass collector full prevents smooth blade rotation and places an extra load on the motor, which may cause breakdown not covered under the manufacturer's warranty.

X-SERIES

INSTRUCTION MANUAL

LONG GRASS

Do not try to cut long grass all at once. Instead, mow the lawn in steps. Leave a day or two between each pass until the lawn becomes evenly short.

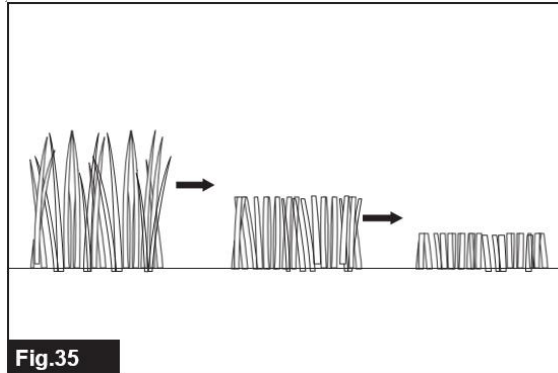

NOTE: Mowing long grass to a short length all at once may cause the lawn to die. The cut grass may also block up inside of the mower body.

NOTE: If the unevenness in the length of grass or poor finish is found after mowing, or decrease in motor speed, decrease the mowing speed, or raise the mowing height.

CLEANING, MAINTENANCE & STORAGE



WARNING

Before undertaking any work on the machine (e.g. maintenance, cleaning the tool, etc.) as well as during its transport and storage, ensure the batteries are removed and safety levers are in the off position.

There is a danger of injury when the On/Off lever is unintentionally actuated.



WARNING

Failure to identify and replace damaged or worn parts can cause serious personal injury. Inspect the power tool regularly. Regular inspection is the first step to proper maintenance. Follow the guidelines below to maximise safety and satisfaction. Have any damaged or excessively worn parts replaced immediately.



WARNING

Always remove the batteries and let the product completely cool down before performing cleaning and maintenance work!

Only perform cleaning and maintenance work according to these instructions! A qualified specialist must perform all further works!

CLEANING



WARNING

Before performing any work, make sure the tool has stopped running.
Ensure the batteries are removed.
Always wear protective gloves when using, adjusting or cleaning the machine.

THOROUGHLY CLEAN THE MACHINE AT THE END OF EACH USE.

- Brush off coarse dirt.
- Wipe down the device with a slightly damp cloth.

COLLECTION BAG

- Remove the collection bag.
- Shake out the collection bag thoroughly, turn it inside out and brush the bag out.
- You may wash the bag with a very mild detergent **BY HAND** but ensure it is completely dry before attaching it to the machine and use.
- Regularly check the collector for rips, tears or holes and replace immediately if damaged.

IMPORTANT

Never clean the tool under running water - and particularly never with high pressure - because of the potential danger to persons and property. Keep your cordless pruner in a dry and frost proof place. Choose a place that children are unable to enter.

MAINTENANCE



DANGER

Never clean the machine in water (especially running water), as there is a risk of personal injury and damage to the tool.



WARNING

There are no user serviceable parts inside the battery. Do not disassemble.

- Remove all the batteries and then close the battery cover.
- Put the mower on its side. Clean grass clippings accumulated on the underside of mower deck with a stiff brush.
- Pour water toward the bottom of the machine to which the blade is attached.

NOTE: Do not wash the machine with high pressure water.

- Check all nuts, bolts, screws etc. for tightness.
- Inspect moving parts for damage, breakage, and wear. Damaged or missing parts should be repaired or replaced.
- Store the mower in a safe place out of the reach of children.

NOTE: Do not pour water to the area shown in the figure. Pouring water to the motor unit may cause a malfunction of the machine.

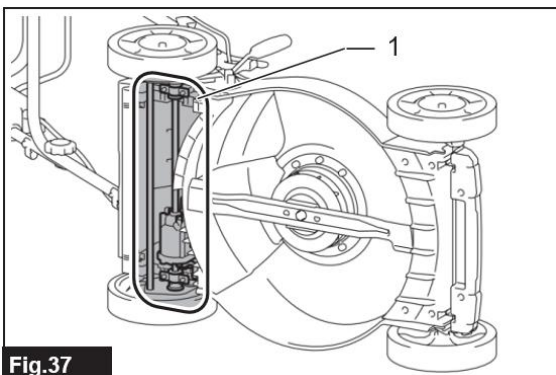


Fig.37

NOTE: Do not pour water on the machine while it is in the upright position as shown. If the machine is in the upright position, water may pour down the motor unit and cause a malfunction of the machine.

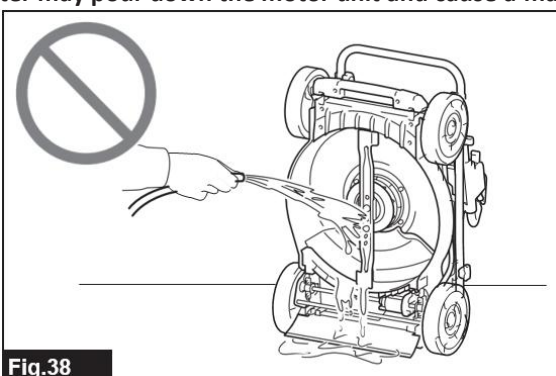


Fig.38

MOWER BLADE REMOVAL & FITTING



WARNING

The blade coasts for a few seconds after releasing the OPC lever. Do not start any operation until the blade comes to a complete stop.



WARNING

Always remove all the batteries when removing or installing the blade. Failure to remove all the batteries may cause a serious injury.




WARNING


Always wear gloves when handling the blade.

REMOVING/INSTALLING THE MOWER BLADE

1. Put the power tool on its side so that the mowing height adjusting lever comes to the upper side.
2. To lock the blade, insert an Allen key or similar into the hole on the mower body as far as it will go.
3. Turn the blade bolt counter-clockwise with 17mm spanner.

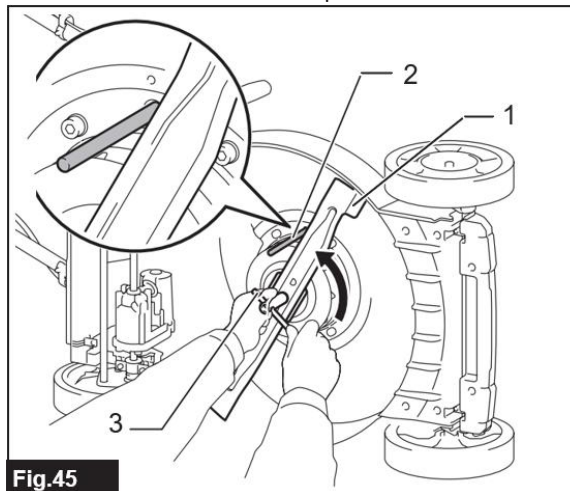

4. Remove the bolt and blade.

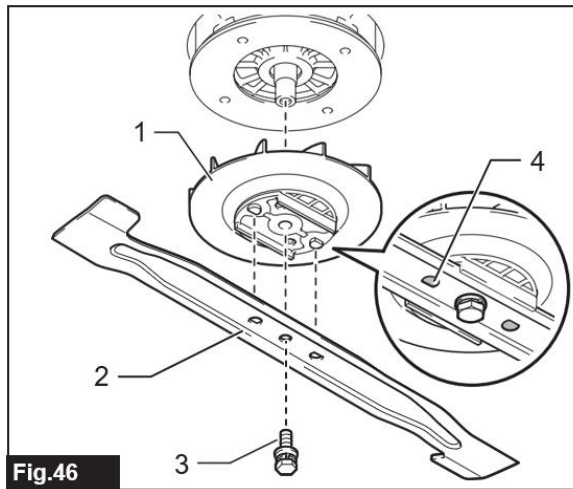

5. To install the mower blade, perform the removal procedure in reverse.
 6. Tighten the bolt clockwise firmly to secure the blade to 30-35 Nm.
- NOTE: After installing the mower blades, remove the pin from the blade assembly.**



WARNING

Install the mower blade carefully. It has a top/bottom facing.
Tighten the bolt clockwise firmly to secure the blade to 30-35 Nm.
Make sure that the mower blade and all the fixing parts are installed correctly and tightened securely.
When you replace the blades, always follow the instructions provided in this manual.

X-SERIES

INSTRUCTION MANUAL

TRANSPORT

- Remove batteries from the power tool.
- Tools can shift during transport. Ensure the tool is secure and cannot fall or move into contact with people or property.

CARRYING



CAUTION

Before carrying the mower, make sure that the batteries are removed.

When carrying the power tool, hold the rear grip and the lower holding section at the front of the machine with two people as shown in Fig.39

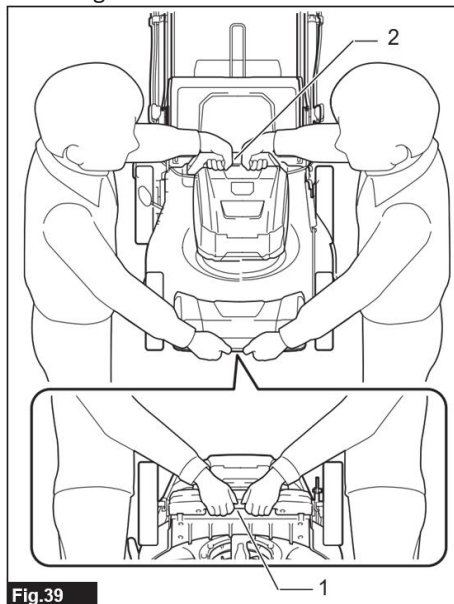


Fig.39

STORAGE

- Remove the batteries from the power tool.
- Clean power tool thoroughly as described above.
- Store in a dry place.
- Keep out of reach of children or pets.
- We recommend using the original packaging for storage or covering the product with a suitable cloth or enclosure to protect it against dust.

NOTE: To prolong battery life, never store battery in a completely discharged condition. Make sure the battery is charged once per year or when the battery indicator shows only one light.



CAUTION

When putting the power tool in the upright position, place the machine on a flat and stable surface. If the machine is placed on an unstable surface, the machine may fall over and cause personal injury.

Store power tool indoors in a cool, dry and locked place. Don't store the power tool and charger in locations where the temperature may reach or exceed 40°C (104°F).

1. Remove all the batteries.
2. Pull up quick release levers (1) and push handle towards storage position, then release quick release levers (1). Support the handle to its storing position, do not let go.

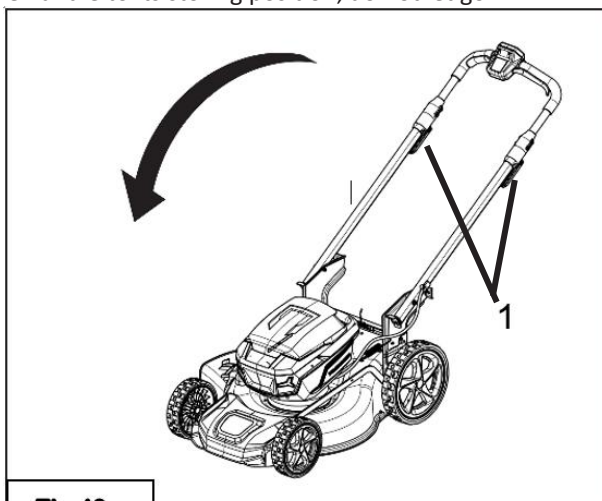


Fig 40

3. Place the machine in the upright position.

NOTE: When putting the power tool in the upright position, do not hold the handle only, but hold the power tool body and handle.

4. Store the grass basket as shown (Fig.43).

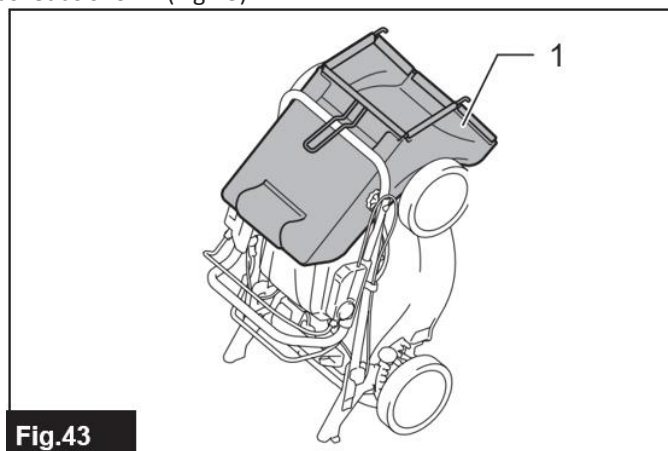


Fig.43

X-SERIES

INSTRUCTION MANUAL

DISPOSAL SAFE DISPOSAL OF BATTERIES



Li-ion

Our batteries are designed according to the latest state of technology and optimised for the use in electric tools. Lithium ion cells contain hazardous substances and may therefore not be disposed off with normal household waste. Our batteries are lithium-ion cells and are therefore subject to special disposal regulations. Bring defective batteries to your specialist dealer. Before disposing of the tool, remove the battery. We wish to encourage users to act in an environmentally friendly manner.

DISPOSAL OF THE TOOL



A crossed-out wheelie bin icon means: Batteries and rechargeable batteries, electrical or electronic devices must not be disposed of with household waste. They may contain substances that are harmful to the environment and human health.

Consumers must dispose of waste electrical devices, spent portable batteries and rechargeable batteries separately from household waste at an official collection point to ensure that these items are processed correctly. The product can be returned free of charge in accordance with the legal requirements, for example through a municipal waste disposal company or a dealer.



Batteries, rechargeable batteries and lamps that are not permanently installed in waste electrical equipment and can be removed in a non-destructive way must be removed and disposed of separately before disposal of the equipment. Lithium batteries and rechargeable battery packs of all systems are only to be handed in to the waste collection points in a discharged state. The batteries must always be protected against short circuits by taping off the poles.

All end users are responsible for deleting any personal data stored on waste devices prior to their disposal.

DISPOSAL OF PACKAGING



The packaging consists of cardboard and correspondingly marked plastics that can be recycled.
– Make these materials available for recycling.

TROUBLE SHOOTING



Switch off the mower and remove the batteries before inspecting, cleaning or working on the mower.

Problem	Possible Cause	Solution
The lawnmower fails to start	<ol style="list-style-type: none"> 1. The battery is depleted. 2. The battery is not attached to the lawnmower. 3. Battery or lawnmower circuitry is too hot. 4. The handle is not set at one of the operating positions. 5. Lawnmower deck is clogged with grass and debris. 	<ol style="list-style-type: none"> 1. Charge the battery. 2. Attach the battery to the lawnmower. 3. Allow the battery or lawnmower to cool down. 4. Adjust the handle to the one of the operating positions. 5. Clean the lawnmower deck and make certain that the blade has freedom of movement.
The lawnmower cuts unevenly.	<ol style="list-style-type: none"> 1. Dull blade. 2. The cutting height is not set properly. 3. The blade is assembled incorrectly. 	<ol style="list-style-type: none"> 1. Sharpen or replace blade. 2. Raise the blade to a higher setting. 3. Reassemble the blade, following the section "Replacing the Cutting Blade" in this manual.
Lawnmower stops while mowing	<ol style="list-style-type: none"> 1. The battery is depleted. 2. Lawnmower is in overload condition. 3. Lawnmower deck is clogged with grass and debris. 4. Battery or lawnmower circuitry is too hot. 	<ol style="list-style-type: none"> 1. Charge the battery. 2. Raise cutting height or slow down the mowing. 3. Unclog lawnmower deck. Raise cutting height or cut a narrow swath. 4. Allow the battery or lawnmower to cool down.
Lawnmower does not mulch properly.	<ol style="list-style-type: none"> 1. Wet grass clippings are sticking to the underside of the deck. 2. The lawnmower is set to cut too much grass. 	<ol style="list-style-type: none"> 1. Wait until the grass dries before mowing. 2. Raise the blade to a higher setting.
Excessive vibration	<ol style="list-style-type: none"> 1. Cutting blade is loose. 2. Cutting blade is unbalanced. 3. Bent cutting blade. 4. Bent motor shaft. 	<ol style="list-style-type: none"> 1. Tighten the blade bolt. 2. Balance the blade following the instructions. 3. Replace the blade. 4. Contact your local Approved Service Dealer.

If you cannot fix the fault yourself, contact your local Approved Service Dealer. Please be aware that any improper repairs will also invalidate the warranty and additional costs may be incurred.

Webb **eco**


X-SERIES

INSTRUCTION MANUAL

MACHINE PARTS DIAGRAM

WEV20X2LM47SPB4X – WEV20LM47SPBARE (1938386001)

NOTE: WEV20X2LM47SPB4X includes the charger and batteries. WEV20X2LM47SPBARE does not include the charger and batteries.

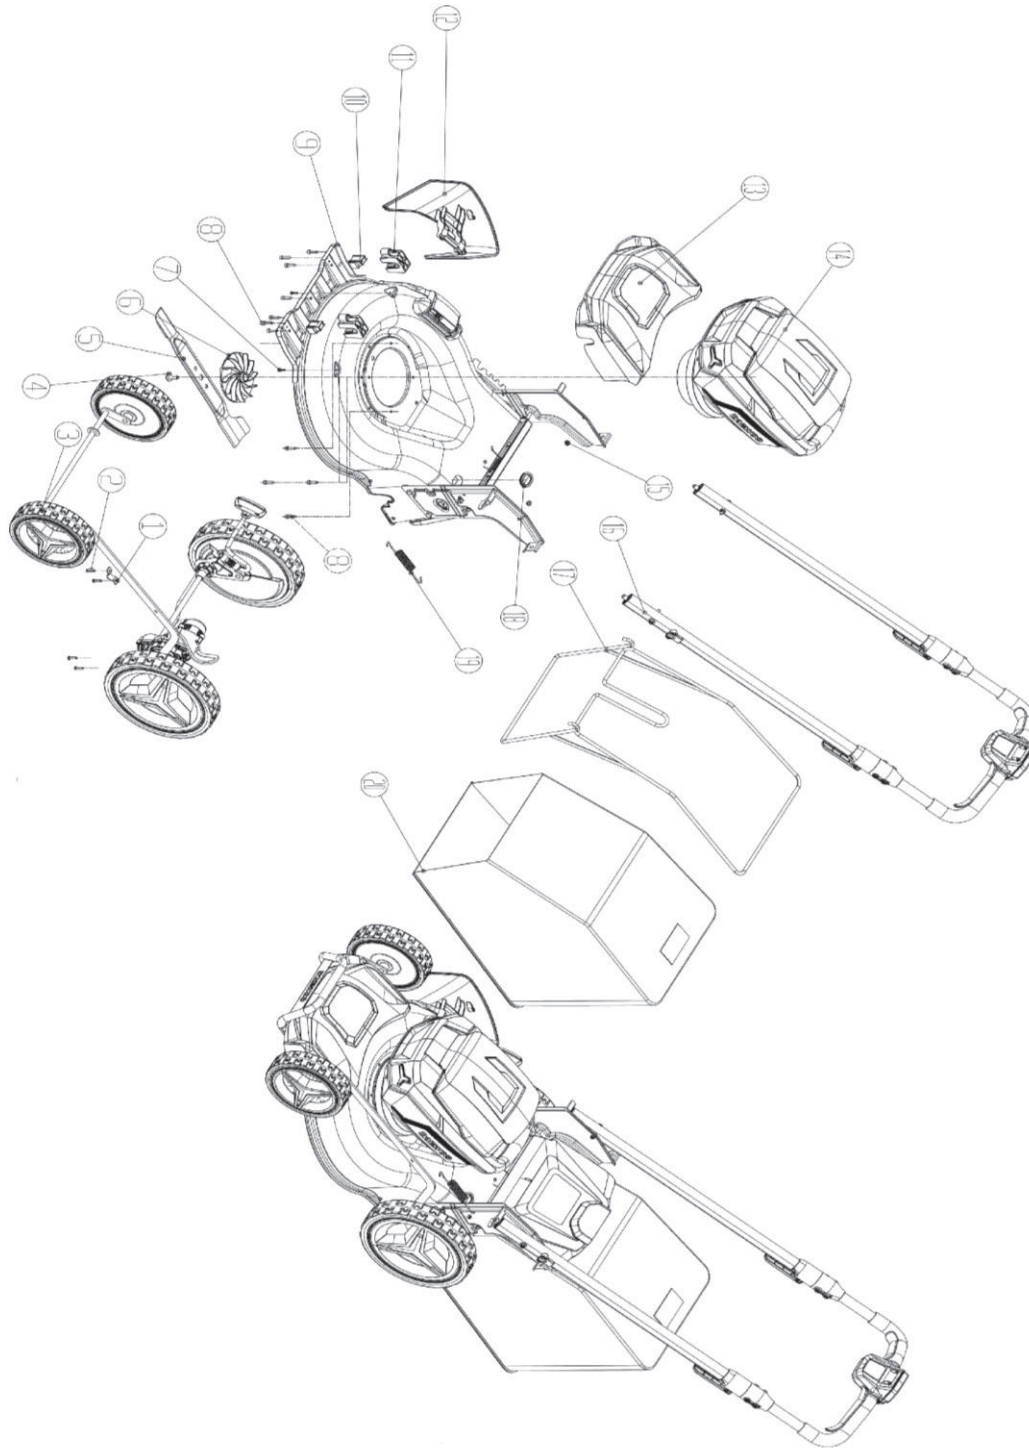

MACHINE PARTS LIST

WEV20X2LM47SPB4X – WEV20LM47SPBARE (1938386001)

Item No.	Webb Part No.	Webb Description	Qty
1	WE270-220-8A12806	Axial Sleeve Retaining Plate 1	1
2	WE270-131-ABAD50-20	ST5x20 Screw	4
3	See Separate Diagram	Gearbox & Axle Assemblies	
4	WE270-131-RDDD10-23	Hex Flange Screw M10x23	1
5	WE270-183-8A12802	Blade	1
6	WE270-116-8A12801	Fan blade	1
7	WE270-131-ABAD50-12	ST5x12 Screw	2
8	WE270-131-KCCD63-25	Internal Hex Round Head ST6.3x25 Screw	11
9	WE270-324-8A12851	Deck	1
10	WE270-388-8A12808	Shaft Retaining Plate Lower	2
11	WE270-220-8A12805	Shaft Retaining Plate Upper	2
12	WE270-216-8A12807	Side Discharge Chute	1
13	WE270-388-8A12807	Front Bumper	1
14	WE270-324-8A12859	Power Unit Complete	1
15	WE270-132-B06	M6 Lock Nut	2
16	WE270-324-8A12835	Handle Assembly	1
17	WE270-286-8A12801	Collector Frame	1
18	WE270-271-8A12801	Deck Protection Pad	1
19	WE270-346-8A12808	Height Adjustment Spring	1
20	WE270-459-8A12801	Collecting Bag	1

If you wish to purchase Spare Parts, please visit www.webbgardenpower.co.uk and enter your chosen part number in the search bar. If the part is not listed, please contact our Spares Team on **01793 333212 option 2** or email spares@webbgardenpower.co.uk with your requirements, model and part number details (found on the front cover of this instruction manual).

Webb **elo**


X-SERIES

INSTRUCTION MANUAL

GEARBOX & AXLE ASSEMBLY PARTS DIAGRAM

WEV20X2LM47SPB4X – WEV20LM47SPBARE (1938386001)

NOTE: WEV20X2LM47SPB4X includes the charger and batteries. WEV20X2LM47SPBARE does not include the charger and batteries.

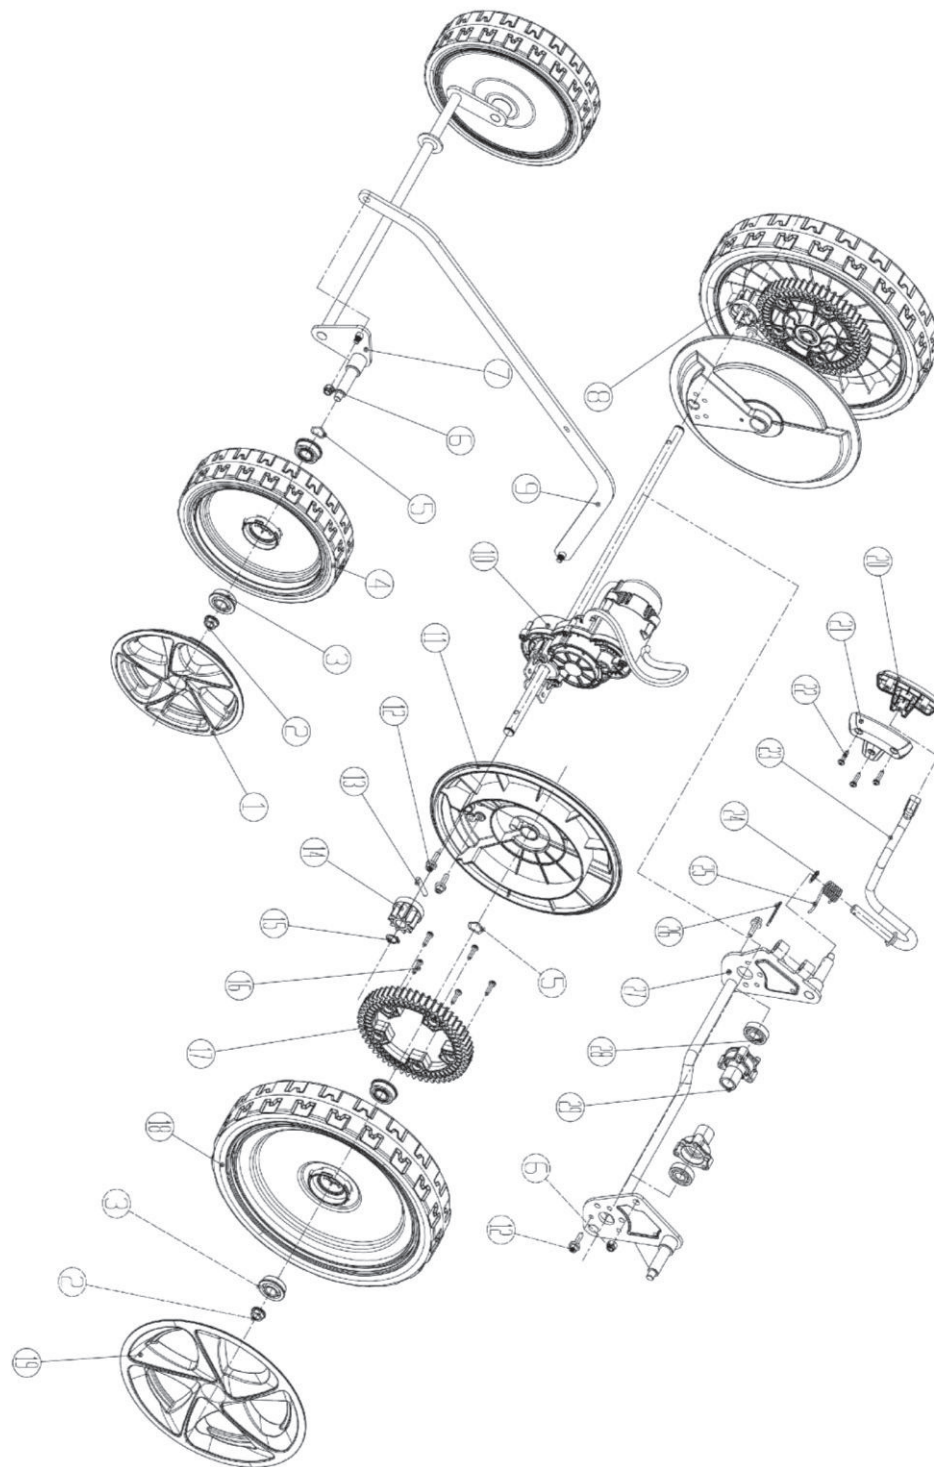

GEARBOX & AXLE ASSEMBLY PARTS DIAGRAM WEV20X2LM47SPB4X – WEV20LM47SPBARE (1938386001)

Item No.	Webb Part No.	Webb Description	Qty
1	WE270-388-8A12809	Front Wheel Trim	2
2	WE270-132-C08	Flange Nut M8	4
3	WE270-369-8A12801	Bearing	8
4	WE270-324-8A12805	Front Wheel	2
5	WE270-129-A13	Wave Washer	4
6	WE270-132-B06	Locking Nut M6	2
7	WE270-330-8A12807	Front Axle	1
8	WE270-363-8A12801	Ratchet (Right)	1
9	WE270-234-8A12801	Height Adjuster Bar	1
10	WE270-324-8A12829	Gearbox Assembly	1
11	WE270-388-8A12820	Rear wheel Dust Cover	2
12	WE03010010022	Screw M5x20	6
13	WE270-232-8A12802	Pin $\phi 5 \times 25.5$	2
14	WE270-363-8A12802	Ratchet (Left)	1
15	WE270-130-G12	Axle Retaining Ring	2
16	WE135-J0010001270R	Screw ST4x16	10
17	WE270-359-8A12801	Large Gear	2
18	WE270-324-8A12806	Rear Wheel	2
19	WE270-388-8A12818	Rear Wheel Trim	2
20	WE270-388-8A12817	Height Adjust Handle Lower	1
21	WE270-388-8A12816	Height Adjust Handle Upper	1
22	WE270-131-ABBD40-14	Screw 4x14	10
23	WE270-231-8A12803	Height adjust Rod	1
24	WE270-179-8J30102	Flat Washer	1
25	WE270-346-8A12803	Height Adjust Spring	1
26	WE270-232-A0220	Open Pin 2x20	1
27	WE270-330-8A12806	Rear Wheel Axle	1
28	WE195-9-19A	Bearing 6001	2
29	WE270-198-8A12801	Axial Sleeve	2

If you wish to purchase Spare Parts, please visit www.webbgardenpower.co.uk and enter your chosen part number in the search bar. If the part is not listed, please contact our Spares Team on **01793 333212 option 2** or email spares@webbgardenpower.co.uk with your requirements, model and part number details (found on the front cover of this instruction manual).

Webb **eco**


X-SERIES

INSTRUCTION MANUAL

MACHINE PARTS DIAGRAM

WEV20X2LM53SPB4X – WEV20X2LM53SPBARE (1938387001)

NOTE: WEV20X2LM53SPB4X includes the charger and batteries. WEV20X2LM53SPBARE does not include the charger and batteries.

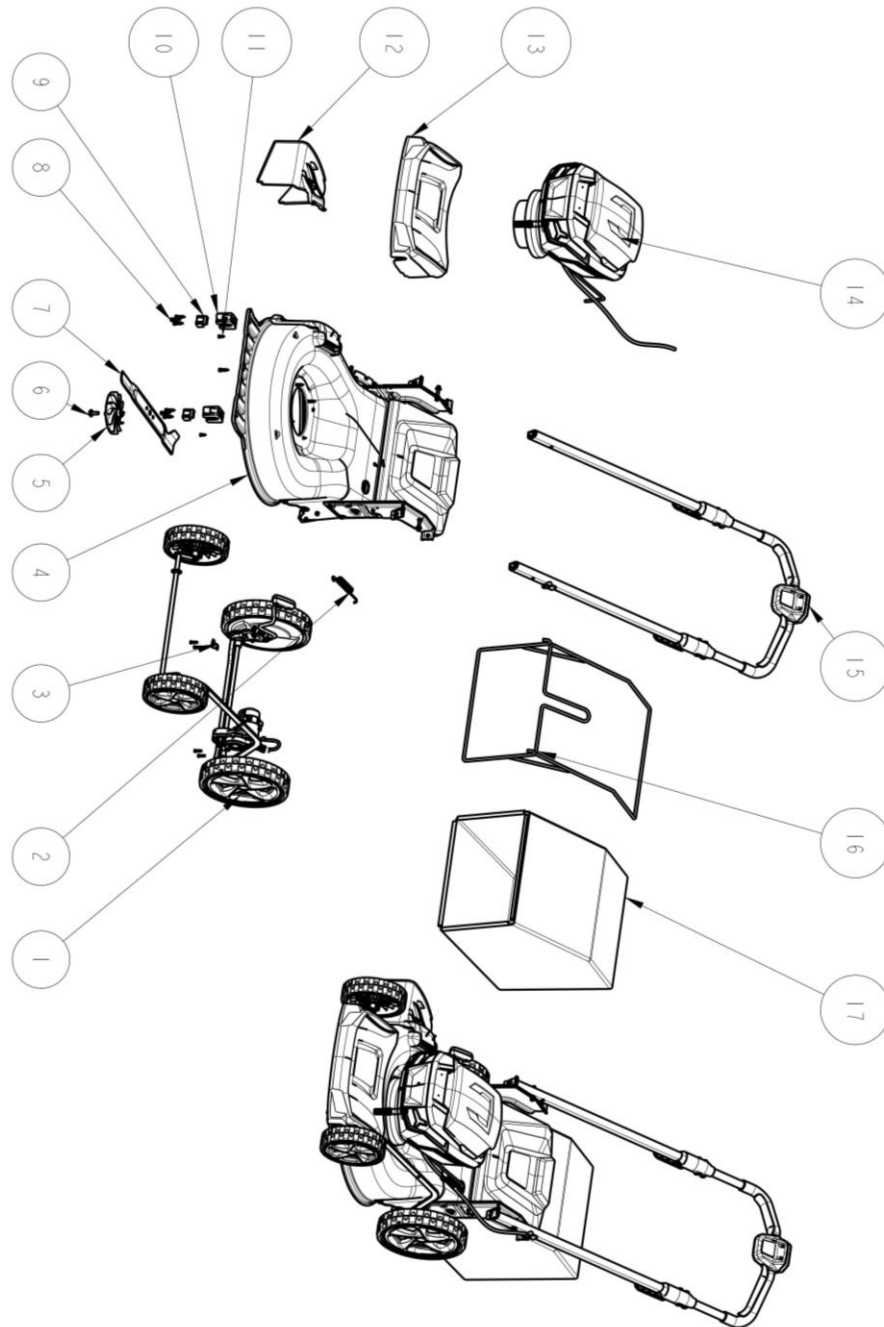

MACHINE PARTS DIAGRAM

WEV20X2LM53SPB4X – WEV20X2LM53SPBARE (1938387001)

NOTE: WEV20X2LM53SPB4X includes the charger and batteries. WEV20X2LM53SPBARE do not include the charger and batteries.

Item No.	Webb Part No.	Webb Description	Qty
1	See Separate Diagram	Gearbox & Axle Assemblies	1
2	WE270-346-8A12808	Height Adjustment Spring	1
3	WE270-220-8A12806	Axial Sleeve Retaining Plate 1	1
4	WE271-324-8A12951	Deck	1
5	WE270-116-8A12801	Fan blade	1
6	WE270-131-RDDD10-23	Hex Flange Screw M10x23	1
7	WE271-183-8A12901	Cutting Blade (530mm)	1
8	WE271-131-KCCD63-2501R	Hex Screw ST6.3x25	11
9	WE270-388-8A12808	Shaft Retaining Plate Lower	2
10	WE270-220-8A12805	Shaft Retaining Plate Upper	2
11	WE271-131-ABCD50-16	Cross Head Screw ST5x16	4
12	WE271-216-8A12903	Side Discharge Chute	1
13	WE271-388-8A12902	Front base cover	1
14	WE271-324-8A12966	Power Unit Complete	1
15	WE271-324-8A12901	Handle Assembly	1
16	WE271-287-8A12901	Collector Frame	1
17	WE271-459-8A12901	Collecting Bag	1

If you wish to purchase Spare Parts, please visit www.webbgardenpower.co.uk and enter your chosen part number in the search bar. If the part is not listed, please contact our Spares Team on **01793 333212 option 2** or email spares@webbgardenpower.co.uk with your requirements, model and part number details (found on the front cover of this instruction manual).

Webb **eco**


X-SERIES

INSTRUCTION MANUAL

GEARBOX & AXLE ASSEMBLY PARTS DIAGRAM

WEV20X2LM53SPB4X – WEV20X2LM53SPBARE (1938387001)

NOTE: WEV20X2LM53SPB4X includes the charger and batteries. WEV20X2LM53SPBARE do not include the charger and batteries.

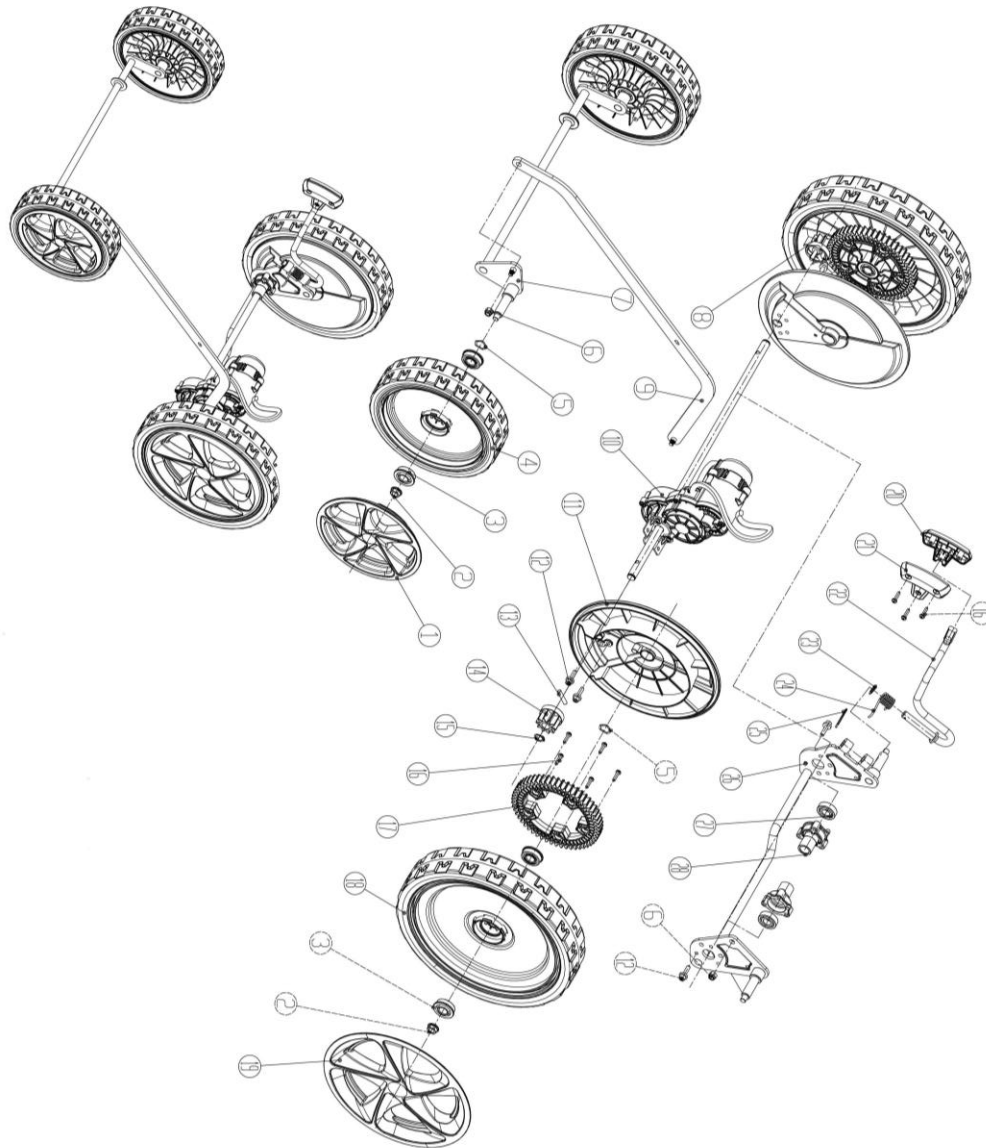

GEARBOX & AXLE ASSEMBLY PARTS DIAGRAM

WEV20X2LM53SPB4X – WEV20X2LM53SPBARE (1938387001)

NOTE: WEV20X2LM53SPB4X includes the charger and batteries. WEV20X2LM53SPBARE do not include the charger and batteries.

Item No.	Webb Part No.	Webb Description	Qty
1	WE270-388-8A12809	Front Wheel Trim	2
2	WE270-132-C08	Flange Nut M8	4
3	WE270-369-8A12801	Bearing	8
4	WE270-324-8A12805	Front Wheel	2
5	WE270-129-A13	Wave Washer	4
6	WE270-132-B06	Locking Nut M6	2
7	WE271330-8A12902	Front Axle Shaft	1
8	WE270-363-8A12801	Ratchet (Right)	1
9	WE271-234-8A12901	Height Adjuster Bar	1
10	WE271-324-8A12913	Gearbox Assembly	1
11	WE270-388-8A12820	Rear Wheel Dust Cover	2
12	WE03010010022	Screw M5x20	6
13	WE270-232-8A12802	Pin $\phi 5 \times 25.5$	2
14	WE270-363-8A12802	Ratchet (Left)	1
15	WE270-130-G12	Axle Retaining Ring	2
16	WE135-J0010001270R	Screw ST4x16	13
17	WE270-359-8A12801	Large Gear	2
18	WE270-324-8A12806	Rear Wheel	2
19	WE270-388-8A12818	Rear Wheel Trim	2
20	WE270-388-8A12817	Height Adjust Handle Lower	1
21	WE270-388-8A12816	Height Adjust Handle Upper	1
22	WE271-231-8A12901	Height Adjust Rod	1
23	WE270-179-8J30102	Flat Washer	1
24	WE270-346-8A12803	Height Adjust Spring	1
25	WE270-232-A0220	Open Pin 2x20	1
26	WE271-330-8A12904	Rear wheel Axle	1
27	WE195-9-19A	Bearing 6001	2
28	WE270-198-8A12801	Axial Sleeve	2

If you wish to purchase Spare Parts, please visit www.webbgardenpower.co.uk and enter your chosen part number in the search bar. If the part is not listed, please contact our Spares Team on **01793 333212 option 2** or email spares@webbgardenpower.co.uk with your requirements, model and part number details (found on the front cover of this instruction manual).

Webb **eco**

X-SERIES

INSTRUCTION MANUAL



DECLARATION OF CONFORMITY

We Handy Distribution Ltd - SN3 5HY (Importer) declare that the product:

Designation: Cordless Lithium Battery Rotary Lawnmower

Model(s): WEV20X2LM47SPB4X – WEV20X2LM47SPB4X

Product Number: 1938386001

Type/Serial No. As per rating label on machine

Protection: IPX1

Rated Voltage: 36V d.c – Max 40V d.c

Cutting Width: 47cm

No Load Speed: 3300/min

This machine conforms to EU Directives, to which this declaration relates & corresponds to the relevant basic safety and health requirements of Directive:

Machinery Directive 2006/42/EC

EMC Directive 2014/30/EU

RoHS Directive 2011/65/EU & (EU) 2015/863

Noise Directive 2000/14/EC, Annex VI, and 2005/88/EC

For the relevant implementation of the safety and health requirements mentioned in the Directives, the following standards and/or technical specification(s) have been respected:

EN 62841-1:2015/A11:2022 - EN IEC 62841-4-3:2021/A11:2021

EN IEC 55014-1:2021 – EN IEC 55014-2:2021

EN IEC 62841-4-3:2021 - EN IEC 62841-4-3:2021/A11:2021, Annex I, clause I.2

Guaranteed Sound Power Level: $L_{WA} = 96$ dB(A)

Vibration Level: Handle $a_h = < 1.35$ m/s² - Uncertainty K: 1.5 m/s²

Notified Bodies:

TÜD SÜD

Authorised signatory and technical file holder

Date: 13/01/2026

Name: Mr Simon Belcher

Signature:

A handwritten signature in black ink, appearing to read 'S Belcher', written over a horizontal line.

Position: Chairman

Company: Handy Distribution Ltd

Address: Murdock Rd, Swindon, Wiltshire, SN3 5HY.



DECLARATION OF CONFORMITY

We Handy Distribution Ltd - SN3 5HY (Importer) declare that the product:

Designation: Cordless Lithium Battery Rotary Lawnmower

Model(s): WEV20X2LM53SPB4X – WEV20X2LM53SPB4X

Product Number: 1938387001

Type/Serial No. As per rating label on machine

Protection: IPX1

Rated Voltage: 36V d.c – Max 40V d.c

Cutting Width: 53cm

No Load Speed: 3300/min

This machine conforms to EU Directives, to which this declaration relates & corresponds to the relevant basic safety and health requirements of Directive:

Machinery Directive 2006/42/EC

EMC Directive 2014/30/EU

Noise Directive 2000/14/EC, Annex VI, and 2005/88/EC

For the relevant implementation of the safety and health requirements mentioned in the Directives, the following standards and/or technical specification(s) have been respected:

EN 62841-1:2015/A11:2022 - EN IEC 62841-4-3:2021/A11:2021

EN IEC 55014-1:2021 – EN IEC 55014-2:2021

EN IEC 62841-4-3:2021 - EN IEC 62841-4-3:2021/A11:2021, Annex I, clause I.2

Guaranteed Sound Power Level: $L_{WA} = 96$ dB(A)

Vibration Level: Handle $a_h = < 1.35$ m/s² - Uncertainty K: 1.5 m/s²

Notified Bodies:

TÜD SÜD

Authorised signatory and technical file holder

Date: 13/01/2026

Name: Mr Simon Belcher

Signature:

Position: Chairman

Company: Handy Distribution Ltd

Address: Murdock Rd, Swindon, Wiltshire, SN3 5HY.



X-SERIES

INSTRUCTION MANUAL

This Service Book is provided with your Webb, to help you look after your purchase to our recommendations and enable you to take advantage of the conditional manufacturer domestic warranty*.


Present this service book to your authorised Webb repair dealer, whenever a service or a warranty appraisal is required.

The booklet is applicable to the following products, in the UK only:

- Ride On Lawn Tractors
- Cylinder Lawnmowers
- Petrol Rotary Lawnmowers
- Petrol Hand Held Range

Please register your machine using the following pages or at www.webbgardenpower.co.uk. By registering your machine, you agree to maintain the machine in accordance with the service schedules specified in this manual and services duly recorded. (Not applicable for Webb electric handheld machines). You may be asked to produce this booklet as proof of servicing in the event of a claim. Proof of purchase should also be kept as a reference.


Ensure you have the following information available from your machine product label. The two examples below can be found on your machine:

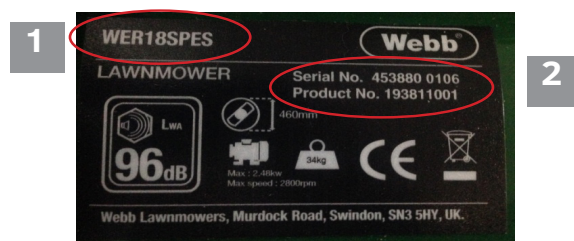

1. Model Number

2. Serial & Product Number

Please complete using BLOCK CAPITALS.
Sections marked* must be completed to validate Warranty.

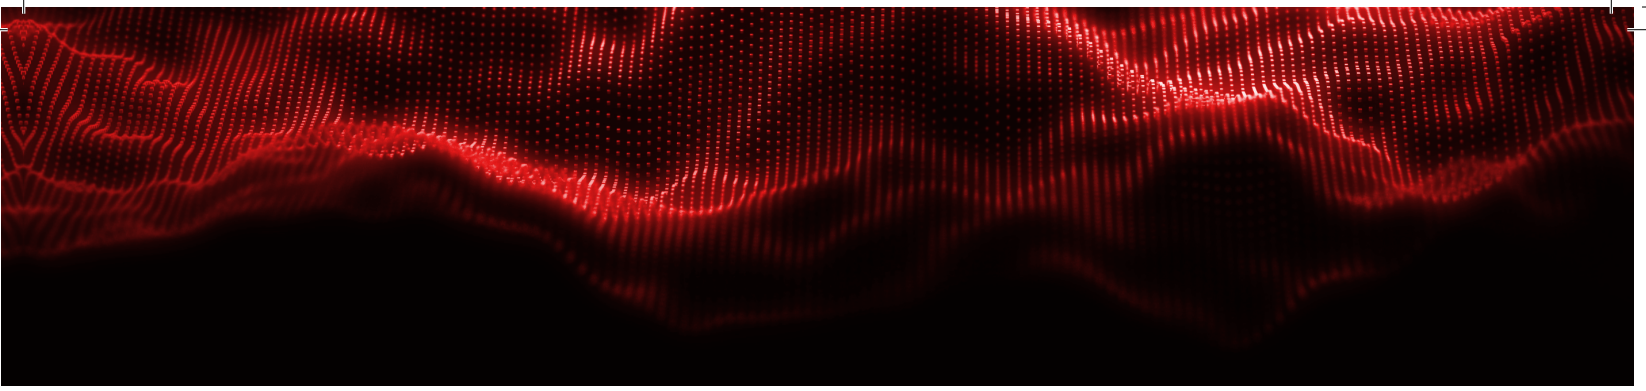

Users Statement of Warranty

Each new machine is warranted against defective material or assembly of material under normal usage. The warranty applies to the original purchaser and covers faulty parts and the labour involved in replacing and repairing those parts, which are of original manufacture.

All claims must be accompanied by evidence of the date of purchase, such as a Sales Receipt showing that the product has been purchased from an approved retailer, it was brand new at time of purchase, which is within the warranty time period.

Period of Warranty

Webb (Green Products)

- a) 3 years from the original date of sale to the first domestic user. (2 years batteries & chargers)
- b) 90 days from the original date of sale to the professional/commercial user.
- c) 90 days from the original date of sale when used for hire.
- d) A reduced warranty period of 90 days applies to those items which are subject to normal wear and tear (e.g. but not limited to wheels, tyres, cutter bars, cylinders, cutting blades, blade boss, belts, cables, nylon line & spool, collection bags, engine spark plugs, electric plug fuses).
- e) Engines are supplied with a separate warranty to the machine. The engine manufacturers warranty statement which will be supplied within the engine instruction manual. All enquiries and warranty repairs should be discussed with the engine manufacturer or approved warranty repair dealer.
- f) 90 days from the original date of purchase for Replacement Spare Parts (unless normal wear & tear component, which are covered for 30 days).
- g) All machines' must be serviced within the first 12 & 24 months from the original date of purchase to comply with the warranty (if applicable), failure to do so will invalidate the 2nd & 3rd years of the warranty.

All warranty repairs must be undertaken by an authorised service dealer. These dealers have been accredited by GJ Handy (Trading) Ltd and agree to only use genuine parts and follow our repair procedures.

Not covered by this warranty

- a) Error in assembly by user in accordance with manufacturers instructions.
- b) Incorrect operation of product in accordance with manufacturers instructions.
- c) The defect is due to accident, misuse, unauthorised modification or inexpert repair.
- d) The warranty policy does not cover any depreciation or damages caused by ordinary wear, rusting or corrosion, lack of correct maintenance or operation, misuse, abuse, lack of transportation or accident.
- e) The warranty policy does not cover any costs necessary for the standard periodic maintenance services instructed by the operator's manual, or service parts replacement which would include oil, filters, tyres, belts, brake linings, fuses, blades, seals and other service parts unless it can be proven that the item has evidence of faulty manufacture.
- f) The warranty policy will not cover failure or damage caused as a result of parts or accessories being modified without the written approval of GJ Handy (Trading) Ltd.
- g) The warranty policy will not cover the unit if non-genuine parts have been fitted and as a result damage has occurred to the unit.

X-SERIES

INSTRUCTION MANUAL

- a) The warranty policy is non-transferable and is only applicable to the original purchaser.

Disclaimer

- a) This warranty is only a remedy for defect of products. GJ Handy (Trading) Ltd will never warranty in terms of the merchantability or the fitness for a particular purpose.
- b) No person is authorised to make any warranties, representations or promises, expressed or implied, on behalf of GJ Handy (Trading) Ltd, or to modify the terms conditions or limitation of this warranty policy in any way.
- c) Neither GJ Handy (Trading) Ltd nor any company affiliated with GJ Handy (Trading) Ltd shall be liable in any event or manner whatsoever for incidental or consequential damages or injuries, including, but not limited to, loss of crops, loss of profit, out of pocket expenses or profits, rental of substitute equipment or other commercial losses.

General

- a) Most warrantable failures show up within the first few weeks of use. These failures are usually straightforward and warranty assessment is relatively easy.
- b) Failures relating to cutter decks and belts need careful investigation, as the cause may not always be straightforward. Look for damage to blades and pulleys especially when the cutter belt or blade boss have snapped or cracked as this could be due to impact damage.
- c) Customers should always refer to the operator/instruction manual when any disputed problem arises, you will find most areas covered within the manual.

Protecting your machine

Maintenance

Regular maintenance of your Webb machine is essential to ensure it operates, safely, efficiently and therefore reducing the environmental impact.

It is the owner's responsibility to ensure that their Webb machine is maintained at specific intervals. Any approved Webb service dealer can undertake a service, which are specialised in our products and will be aware of your particular machine and any technical updates which will save valuable time & money.

If you are using your machine in dry, dusty or high temperatures, you will need to service the machine more regularly.

Fuel (if applicable)

Due to ongoing efforts by fuel companies to reduce emissions, unleaded petrol will oxidize & deteriorate in storage overtime, leaving residue from detergent components.


Fuel deterioration problems may occur when petrol is stored for over 30 days. If you are planning to store fuel for over 30 days, we recommend you add Handy Parts Sure-Start fuel stabilizer to fresh fuel after purchasing. Sure-Start cannot reconstitute stale fuel.

Storage

When storing your machine for an extended period, we do recommend that you follow the instructions of engine instruction manual.

Always store the fuel in a clean, approved and sealed container. If the container is steel, ensure it is not corroded. If the container is not filled to its recommended capacity, air can accelerate fuel deterioration.

Always store fuel away from direct sunlight, in a dark, cool environment.

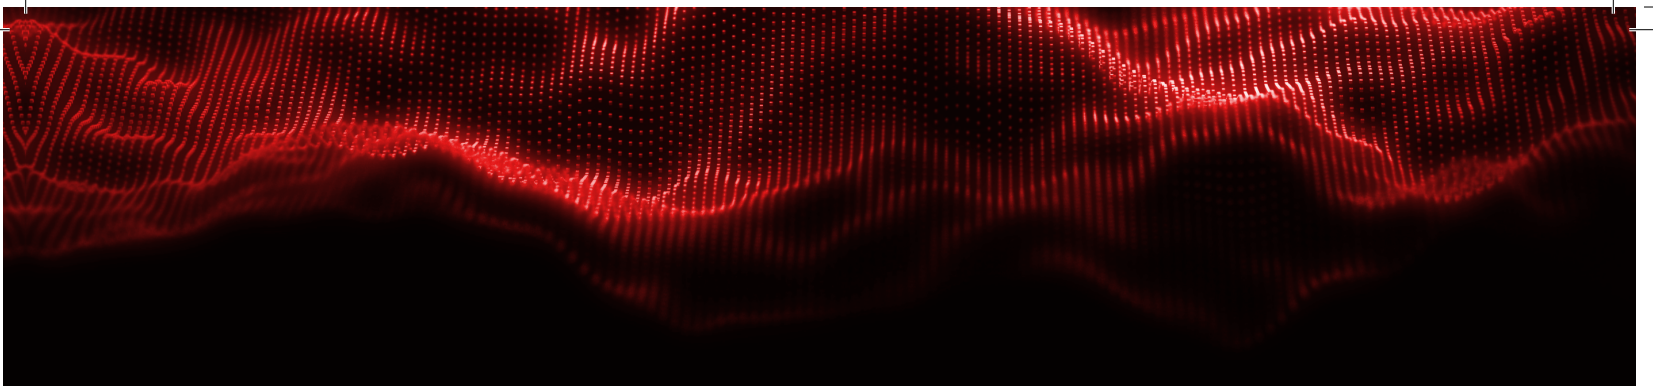

Your servicing Webb approved dealer will stamp & date the below relevant sections, when the correct service actions have been completed.

PLEASE ENSURE THE SERVICE BOOK IS AVAILABLE FOR THE DEALER, DURING SERVICE WORK.

1st Service

This must be stamped by an approved service dealer to qualify for a free second year warranty.
(Excluding the Webb Electric Handheld machines)

12 Months

Date

24 Months

Date

36 Months


Date




X-SERIES

INSTRUCTION MANUAL


48 Months

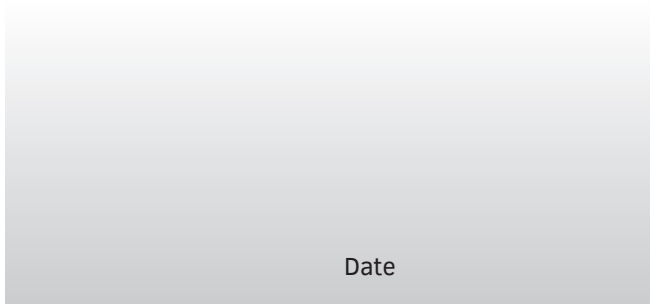


60 Months

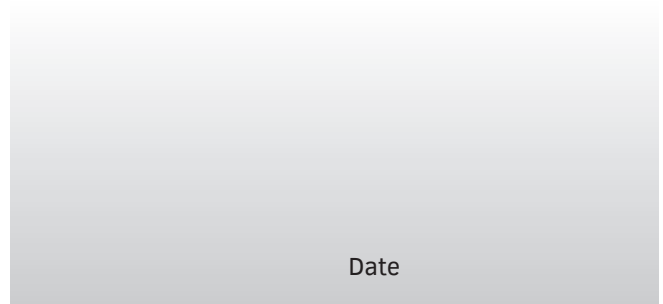


72 Months

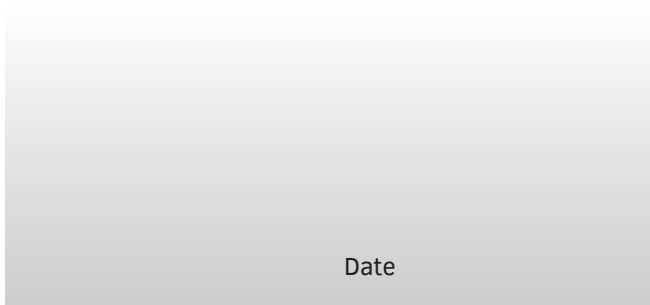


84 Months

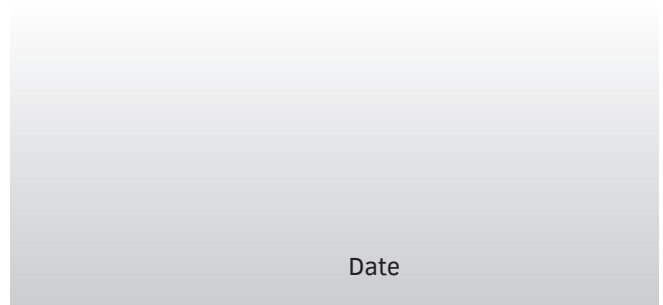


96 Months

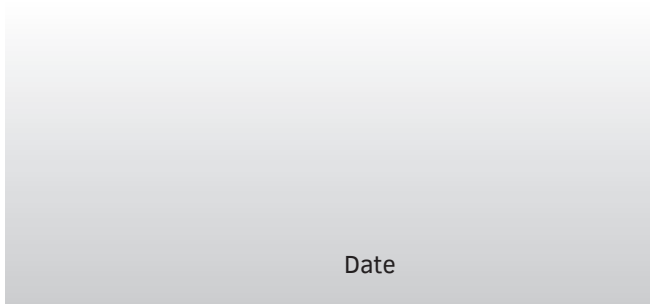


108 Months

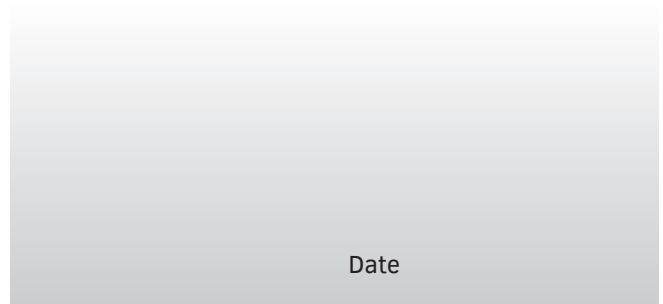

120 Months

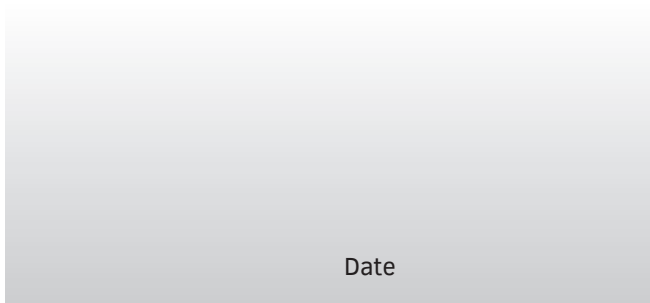

132 Months

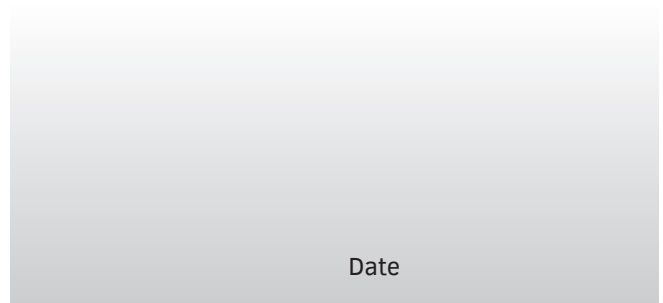



X-SERIES

INSTRUCTION MANUAL

If you have registered online, this form is not necessary.
PLEASE POST THIS COPY TO THE ADDRESS OVERLEAF

Product Information (* Compulsory)

*Model No:	
*Product No:	
*Serial No:	
*Date of Purchase:	

Personal Information (* Compulsory)

*Title		*Forename		*Surname	
*House Number		*House Name			
*Address 1					
*Address 2					
*Town					
*County					
*Postcode					
Home Tel				Mobile Tel	
Email					

Age	18 to 25	26 to 35	36 to 45	46 to 60	61 to 80	81 & over
*Usage	Domestic Use		Commercial/Professional/Hire Use			

*Dealer Stamp (if available)



*Selling Retailer (If dealer stamp not available)

*Dealer Name	
*Dealer Address	
*Date of Purchase	

Webb Lawnmowers privacy commitment to machine owners.

The information supplied, helps us to improve the products & services we provide, including information that we believe is relevant to your and/or your machine. We value your trust by giving us this information about yourself and we are committed to protecting your privacy.

Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding **PRODUCT RECALLS** specific to your machine. Please advise how you wish to be contacted for this specific reason only:

Post Telephone Email

From time to time Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding our products, services, offers or just opinions, which may be used for marketing, research or analysis purposes.

If you wish to be contacted by any of the following methods, please tick the relevant boxes:

Post Telephone Email

You may give Webb Lawnmowers notice in writing at any time that you no longer wish to receive direct marketing communications

Webb[®] **eco**

X-SERIES

Service & Support: cs@webbgardenpower.co.uk

Webb, Murdock Road, Dorcan
Swindon, Wiltshire SN3 5HY

New cordless garden machinery range from

Webb[®]

ADVANCED 40V BATTERY TECHNOLOGY