

Webb **ewo**

X-SERIES

WEVX2BCB4X & WEV20X2BCBARE
40V CORDLESS GRASS
TRIMMER & BRUSH CUTTER

Product Number: 1938382001

en - ORIGINAL INSTRUCTIONS

ASSEMBLY REQUIRED
MINIMUM TWO PERSONS

Service & Support: 01793 333212

Before use please read & understand this manual; paying particular attention to the safety instructions before use.
Incorrect use of the product could put the operator or machine in danger.

Whilst every effort has been made to ensure the accuracy of information contained in this manual, our policy of continuous improvement determines the right to make modifications without prior warning.
Images are used for illustration purposes only.

ADVANCED 40V BATTERY TECHNOLOGY

The logo for Webb eco, with 'Webb' in white and 'eco' in green, both inside a white rounded rectangle.

X-SERIES

INSTRUCTION MANUAL

Copyright Notice

Copyright © Handy Distribution

Permission is granted to reproduce this publication for personal & educational use only.

Commercial copying, redistribution, hiring, or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Handy Distribution.

In all cases this copyright notice must remain intact.



CONTENTS

SPECIFICATION

IMPORTANT INFORMATION

SAFETY INSTRUCTIONS

KNOW YOUR MACHINE

ASSEMBLY

BATTERY & CHARGER

OPERATION

CLEANING, MAINTENANCE & STORAGE

TROUBLE SHOOTING

PARTS LIST

DECLARATION OF CONFORMITY

ASSEMBLY IS REQUIRED

- This product requires assembly before use.
- See “Assembly” section for instructions.
- Inspect all components closely upon receipt to make sure no items are missing or damaged.



WARNING

Read this instruction manual carefully before operating this machine. Make sure that you are familiar with the controls and properly operate the machine. Following these instructions can reduce the risk of personal injury.



X-SERIES

INSTRUCTION MANUAL

SPECIFICATION

The manufacturer reserves the right to change the product specification and livery according to continued product improvements.


TOOL	
Model	WEV20X2BCB4X/WEV20X2BCBARE
Product Number	1938382001
Rated Voltage	36VDC – Max: 40VDC
No Load Speed	5500-7500 RPM
Spool	Dual Line – Auto Feed
Cutting Width - Spool	30cm
Nylon Line Diameter	1.6mm
Metal Blade	3-Bladed
Cutting Width – Metal Blade	25.5cm
Run Time (2x20v 4Ah)	Up to 35 min on lowest speed
Protection	Class III - IPX0
Guaranteed Sound Power Level L _{WA}	96 dB(A)
Vibration emission (a _n)	Trimmer: 2.0 m/s ² - Uncertainty (K): 1.5 m/s ² Brush Cutter: 2.92 m/s ² - Uncertainty (K): 1.5 m/s ²
CHARGER	
Model No.	WEV20X265WCHARGER
Product No.	1938389001
Rating	input: 240V 50/60Hz Type C1 output: 20V – 3.25 A Type C1+Type C2 output: 20V 2.3+1A
Protection	IPX0
Charging Time	1x20v 4Ah Battery = 80 min 2x20v 4Ah Battery = 160 min
BATTERY	
Model No.	WEV20B4XSERIES
Product No.	1938390001
Technical data	20V 4Ah 80Wh
Recommended Operating Temp	0-40°C
Recommended Storage Temp	0-40°C
Recommended Charging Tep	Charge as instructed in the manual



WARNING

Only use authorised batteries and chargers.
Use of other branded batteries and chargers may cause injury and/or fire.

NOTE: WEV20X2BCB4X includes the charger and batteries. WEV20X2BCBARE does not include the charger and batteries.

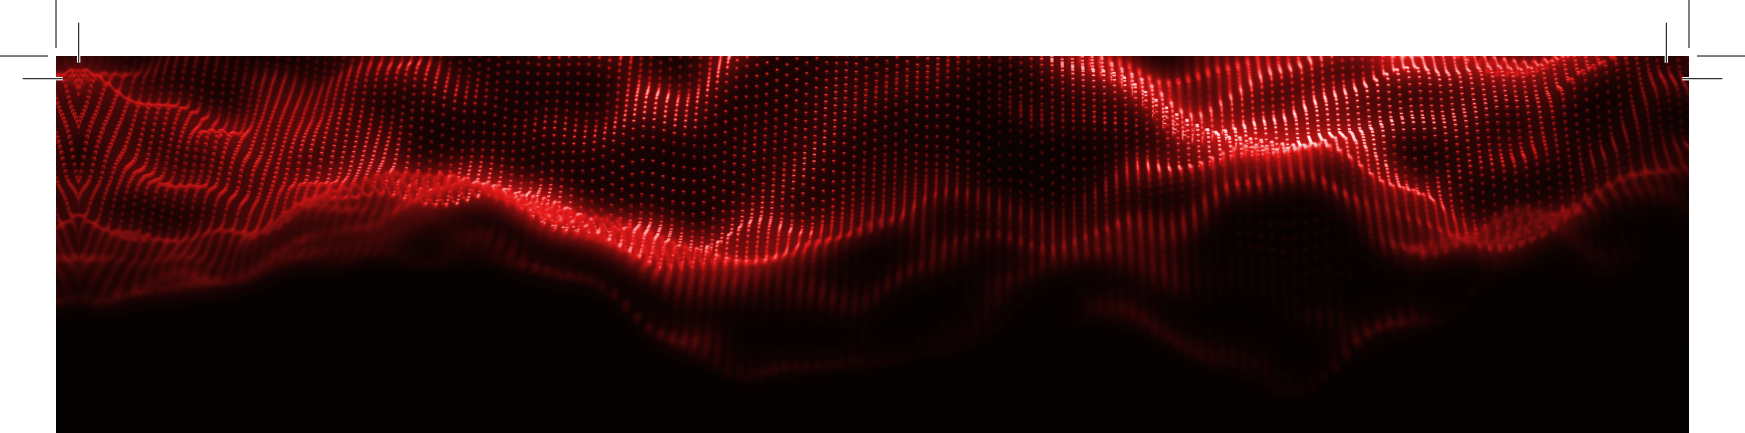

Consistent with our policy of continuous improvement, The Handy reserves the right to change the design and configuration of any of its products without notice or obligation. Therefore, please treat the text and images in this manual for illustrative purposes only. They may in no case serve as a basis for any legal claim. **If you require any assistance with regards to the contents or operation of your machine, please contact us: Tel: 01793 333212 - Email: cs@webbgardenpower.co.uk**
Monday to Friday: 8:00am - 5:00pm
(CLOSED WEEKENDS, BANK HOLIDAYS & COMPANY CLOSURES)

IMPORTANT INFORMATION



WARNING

Read this instruction manual carefully before operating this machine. Make sure that you are familiar with the controls and properly operate the machine. Following these instructions can reduce the risk of fire, electric shock and personal injury.

INTENDED USAGE

The basic version of the equipment is a battery trimmer and brush cutter intended for private use, i.e., for use in home and domestic gardening environments, whose annual operating time generally does not exceed 50 hours. It is designed to trim long grass, shrubs, weeds and brush, dry materials in medium to large sized gardens. Every other use of the machine is a not intended use. Furthermore, a professional use is strictly forbidden. Any use not expressly permitted in this manual may damage the tool or cause danger to the user.

USE CORRECTLY.

The tool is for private use only, whose annual operating time does not exceed 50 hours. Public facilities, sporting facilities and agricultural / forestry applications are excluded. To be used as a domestic garden trimmer and brush cutter, on or about ground level, the cutting plane should be approximately parallel to the ground surface when trimming. The product should not be used to cut or trim hedges, bushes or other vegetation when the cutting plane is not parallel to the ground.

Please read this entire manual prior to operating the equipment. It instructs you how to safely and easily set up, operate and maintain your machine. Please be sure that you and any other persons who will operate the machine, always carefully follow the recommended safety practices. Failure to do so could result in personal injury or property damage.

During use of the tool the user must arrange for personal protective equipment (PPE) according to the manual and to the named pictograms on the tool. Parts of the intended use are also the details in the manual regarding safety warnings and references for use/maintenance. People/Users who work with the tool or undertake maintenances on it must be familiar with the manual. Only assemble onto the tool, the manufacturers original or approved spare parts.

The user and not the manufacturer are liable for any accident which results from a combination of incorrect intended use or an incorrect construction on the machine.

The tool is only intended for outdoor use.

IF NOT USED PROPERLY THIS MACHINE CAN BE DANGEROUS!

This machine can cause serious injury to the operator and others; the warning and safety instructions must be followed to ensure reasonable safety and efficiency in using this product. The operator is responsible for following the warning and safety instructions in this manual and on the machine. Never use the product unless the components are correctly positioned and operational.

Webb **eco**

X-SERIES

INSTRUCTION MANUAL

TRAINING

Read the instructions carefully: Be familiar with the controls and the proper use of the equipment. Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the age of the operator. Keep in mind that the operator or user is responsible for accidents or hazards involving the machine that occur to other people or their property.

TO THE OWNER

All information in this manual is relative to the most recent product information available at the time of printing. Review this manual frequently to familiarise yourself with the machine, its features and operation. Please be aware that this Instruction Manual may cover a range of product specifications for various models. Characteristics and features discussed and/or illustrated in this manual may not be applicable or exact to all models.

We reserve the right to change product specifications, design, and equipment without notice and without incurring obligation. If you have any problems or questions concerning the machine, phone your local authorised Webb service dealer or ourselves. Throughout this manual, all references to *right* and *left* side of the machine are observed from the operating position.



WARNING











The operator or user is responsible for accidents and injury or damage to third parties.

The equipment is allowed to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user/operator and not the manufacturer will be liable for any damage or injuries of any kind resulting from such misuse.

Please note that our equipment has not been designed for use in commercial, hire, trade, or industrial applications. Our warranty will be 90 days from the original date of sale for commercial, hire, trade, or industrial businesses or for equivalent purposes.












SAFETY INSTRUCTIONS

Read and understand the owner's manual and labels affixed to the machine. Learn its application and limitations as well as the specific potential hazards. Retain these instructions for future reference. The operator is responsible for following the warnings & instructions in this manual and on the product.








	<p>Read & understand operator's manual before using the machine. Failure to follow instructions could result in death or serious injury.</p>		<p>Check your machine before turning it on. Keep guards in place & in working order. Frequently check to see that foreign objects are removed from the working area before turning it on. Replace damaged, missing or failed parts before using it.</p>
	<p>Keep all bystanders & animals at least 15 metres away from the machine during operation. Thrown objects can ricochet and result in personal injury or property damage. If approached, stop the machine immediately.</p>		<p>When working with the tool:</p> <ul style="list-style-type: none"> • Wear eye protection. • Wear ear protection. • Wear protective gloves. • Wear respiratory protection. • Wear close fitting full clothing. • Wear sturdy shoes
	<p>Do not expose to rain or damp conditions. Failure to operate in dry conditions and to observe safe practices can result in electric shock.</p>		<p>WARNING Disconnect battery before maintenance.</p>
	<p>DANGER Keep sufficient distance away from electrical power lines. Use in dry conditions.</p>		<p>For the charger: Remove plug from the mains immediately if the cable is damaged or cut. Only re-charge the battery pack indoors</p>
	<p>Risk of injury caused by rotating machine parts!</p>		<p>Danger of cutting</p>


X-SERIES

INSTRUCTION MANUAL

	Do not dispose of battery packs in rivers or immerse in water.		Do not dispose of battery packs in fire. They will explode and cause injury.
	Do not dispose of a battery pack with the household waste!		Use and store the battery within an temperature below 122°F(50°C).
	Do not disassemble, crush, heat above 212°F(100°C); Never expose the battery to microwaves or high pressures.		Safety alert symbol. Used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury.
 DANGER	Indicates an imminently hazardous situation which, if not avoided, will result in serious injury.	 WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in serious injury.
 CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.	CAUTION	Used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, may result in property damage.
	Sound Power Level (Image used for illustration purposes only, check machine and Declaration of Conformity for actual reading)		Battery Li-ion: Recyclable

CHARGER

	Read & understand operator's manual before using the machine. Failure to follow instructions could result in death or serious injury. Please keep in a safe place for future reference.	 WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in serious injury.
	For indoor use only.		Double Insulation
	Positive Terminal		Negative Terminal
	Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.		

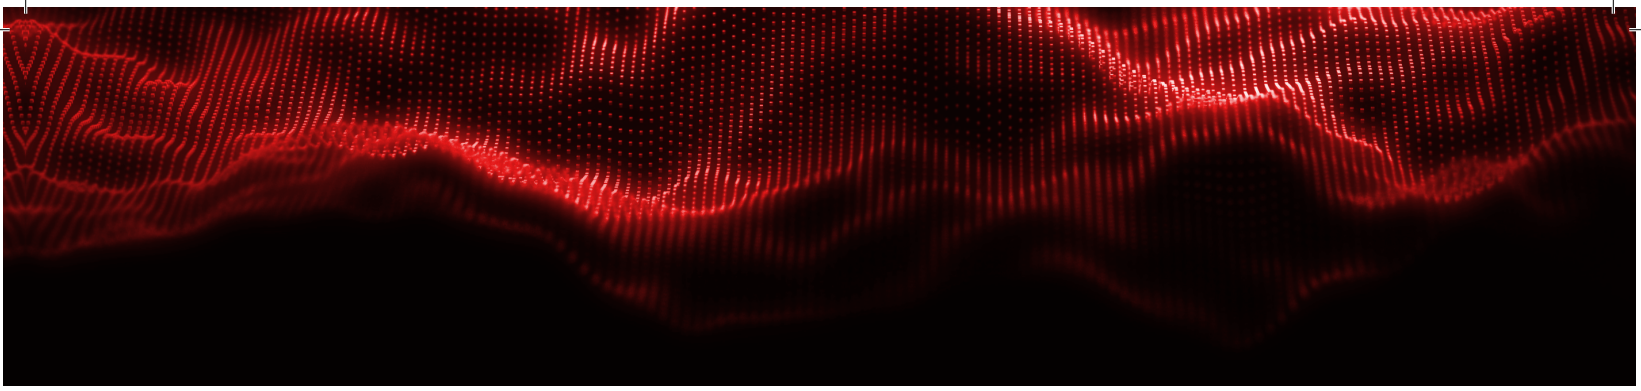

NOISE

Tested to fulfill all relevant provisions of Noise Emission Directive 2000/14/EC amended by 2005/88/EC:
Guaranteed Sound Power Level (L_{WA}): 96 dB(A)

NOTE: The declared noise emission value(s) has been measured in accordance with a standard test method and may be used for comparing one tool with another.

NOTE: The declared noise emission value(s) may also be used in a preliminary assessment of exposure.



WARNING

Wear ear protection

The noise emission during actual use of the power tool can differ from the declared value(s) depending on the ways in which the tool is used especially what kind of workpiece is processed.

Be sure to identify safety measures to protect the operators that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time).

VIBRATION

The vibration total value (tri-axial vector sum) determined according to EN 62841-1, EN 62841-4-2:
Vibration emission (a_h): Trimmer: 2.0 m/s^2 - Brush Cutter: 2.92 m/s^2 - Uncertainty (K): 1.5 m/s^2

NOTE: The declared vibration total value(s) has been measured in accordance with a standard test method and may be used for comparing one tool with another.

NOTE: The declared vibration total value(s) may also be used in a preliminary assessment of exposure.



WARNING

The vibration emission during actual use of the power tool can differ from the declared value(s) depending on the ways in which the tool is used especially what kind of workpiece is processed.

Be sure to identify safety measures to protect the operators that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time).

GENERAL SAFETY RULES



WARNING

Before you put the machine into operation, you must read this instruction manual.

When using this machine, observe the following safety instructions to remove the risk of personal injury or material damage. Please also observe the special safety instructions in the respective chapters. Where applicable, follow the legal directives or regulations for the prevention of accidents in relation to the use of this machine.

When using electric/battery tools, basic safety precautions, including the following, should always be followed to reduce the risk of serious personal injury and/or damage to the unit.

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference. The term "power tool" in the warnings refers to your mains operated (corded) power tool or battery-operated (cordless) power tool.

WORK AREA SAFETY

- **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

ELECTRICAL SAFETY


- **Charger plugs must match the outlet. Never modify the plug in any way. Do not use adaptor plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- **Do not expose chargers to rain/wet conditions.** Water entering a charger will increase the risk of electric shock.
- **Do not abuse the charger cable. Never use the charger cable for carrying, pulling or unplugging the charger.** Keep cable away from heat, oil, sharp edges or moving parts. Damaged or entangled cables increase the risk of electric shock.
- **When operating a charger outdoors, use an extension cable suitable for outdoor use.** Use of a charger suitable for outdoor use reduces the risk of electric shock.
- **If operating a charger in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

PERSONAL SAFETY

- **Stay alert, watch what you are doing and use common sense when operating a power tool.** Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes or hearing protection for conditions will reduce personal injuries.
- **Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

POWER TOOL USE AND CARE

- **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- **Disconnect the plug from the power source and/or the battery from the power tool before making any adjustments, changing accessories, or storing.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- **Store idle power tools out of the reach of children, do not allow persons unfamiliar with the power tool or instructions to operate the power tool.** They are dangerous in the hands of untrained users.
-

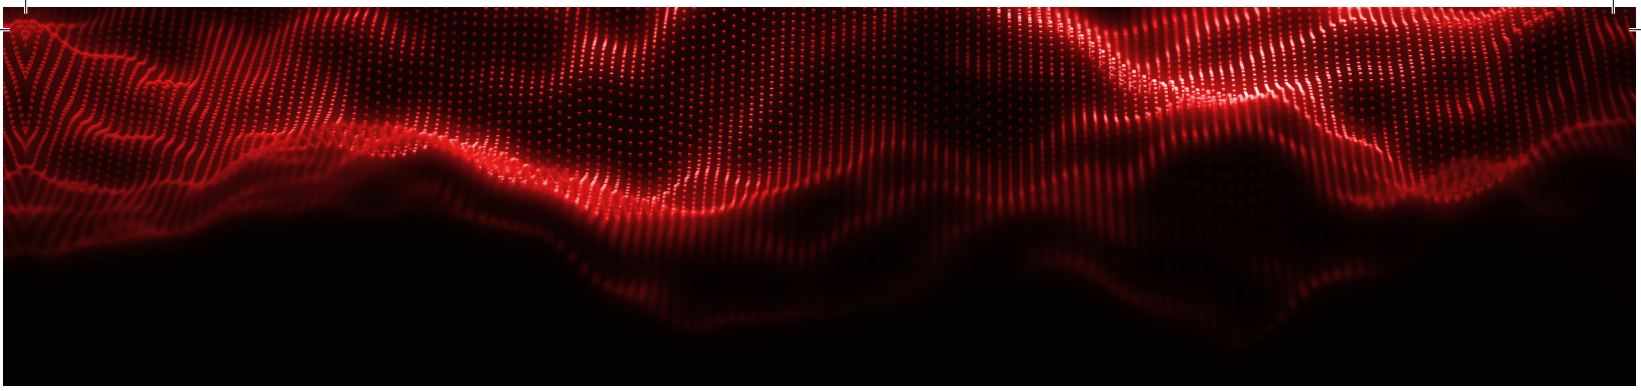

- **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation.** If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- **Keep cutting tools sharp and clean.** Properly maintained tools with sharp cutting edges are less likely to bind and are easier to control.
- **Use the power tool and any accessories in accordance with these instructions, considering the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

BATTERY TOOL USE AND CARE

- **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery may create a risk of fire when used with another battery.
- **Use power tools only with specifically designated batteries.** Use of any other battery may create a risk of injury and fire.
- **When a battery is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- **Under abusive conditions, liquid may be ejected from the battery; avoid contact.** If contact accidentally occurs, flush body air with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

SERVICE

- **Have your power tool serviced by an approved Webb service dealer, a qualified repair person using only Webb replacement parts.** This will ensure that the safety of the power tool is maintained.

VIBRATION AND NOISE REDUCTION



CAUTION

Risk of injury due to vibrations!

Vibrations may, for persons with circulation problems, cause damage to blood vessels and/or nerves. If you notice any of the following symptoms, stop working immediately and consult a doctor. Numbness of body parts, loss of sense of feeling, itching, pins and needles, pain, changes in skin colour.

The vibration values specified in the technical data represent the main uses of the device. The actual existing vibrations during use may deviate from these because of the following factors:

- Incorrect use of the product.
- Unsuitable tools inserted.
- Unsuitable material.
- Insufficient maintenance.

You can reduce the risks by following the tips below:

- Maintain the device in accordance with the instructions in the operating instructions.
- Avoid working at low temperatures.
- When it is cold, make sure your body and hands, are kept warm.
- Take regular breaks and move your hands at the same time to promote circulation.

HANDLING RECHARGEABLE DEVICES

- **Danger of fire!** Only use batteries approved by the manufacturer. Only use chargers approved by the manufacturer. Keep batteries away from metal objects that could cause short circuiting when not in use. There is a risk of injuries and fire.
- Prior to connecting the charger, verify that the power supply connection corresponds with the connecting data of the device.
- The fuse must be a residual current circuit breaker with a measured residual current of no more than 30 mA.
- Only charge the battery in enclosed rooms.
- Ensure that the device is switched off before installing the battery.
- Fluid can escape from the battery when used incorrectly. Battery fluid may result in skin irritations and burns. Avoid contact! In the event of accidental contact, rinse thoroughly with water. Immediately seek the aid of a physician in the event of eye contact.


TOOL SPECIFIC SAFETY INSTRUCTIONS

- When working with the tool, always maintain a safe distance and natural body position.
- Always hold the tool firmly in both hands.
- Before starting to work, check the working area for animals and objects. Remove all objects that may be slung away or become jammed in the cutting tool.
- No other persons or animals may be present within an area of 15m around the work area, as they may otherwise be injured by objects being slung away.
- Only work in good light and vision conditions.
- Do not work above head height! Do not lean forward or back!
- The operator must wear tightly fitting clothing. Avoid wearing loose clothing. Wear sturdy shoes and long trousers.
- Take care when walking backwards. Danger of stumbling!
- Never work in the rain.
- When working with the device, ensure that there is sufficient lighting.
- Always wear the required personal protective equipment.
- Be careful of the dust you have raised and flying objects. Especially dangerous is the rebound effect on walls.
- Do not direct the device at people or animals when operating.
- The machine may only be operated during sensible hours – not too early in the morning or too late in the evening, as it may disturb other people.
- The operation times listed by the local authorities must be adhered to.
- The safety guard must be used, so that the debris can fall to the ground and not towards the operator.
- Heed children, pets, open windows, and blow the foreign bodies safely away.
- Remember that moving parts may also be located behind ventilation and venting slots.
- Symbols which are on your tool may not be removed or covered. Notes on the device which are no longer legible must be replaced immediately.

EMERGENCY

Familiarise yourself with the use of this product by means of this instruction manual. Memorise the safety directions and follow them to the letter. This will help to prevent risks and hazards.

- Always be alert when using this product, so that you can recognise and handle risks early. Fast intervention can prevent severe injury and damage to property.
- Switch off the product and remove the battery pack if there are malfunctions. Have the product checked by an approved Webb service dealer, qualified professional and repaired, if necessary, before you operate it again.

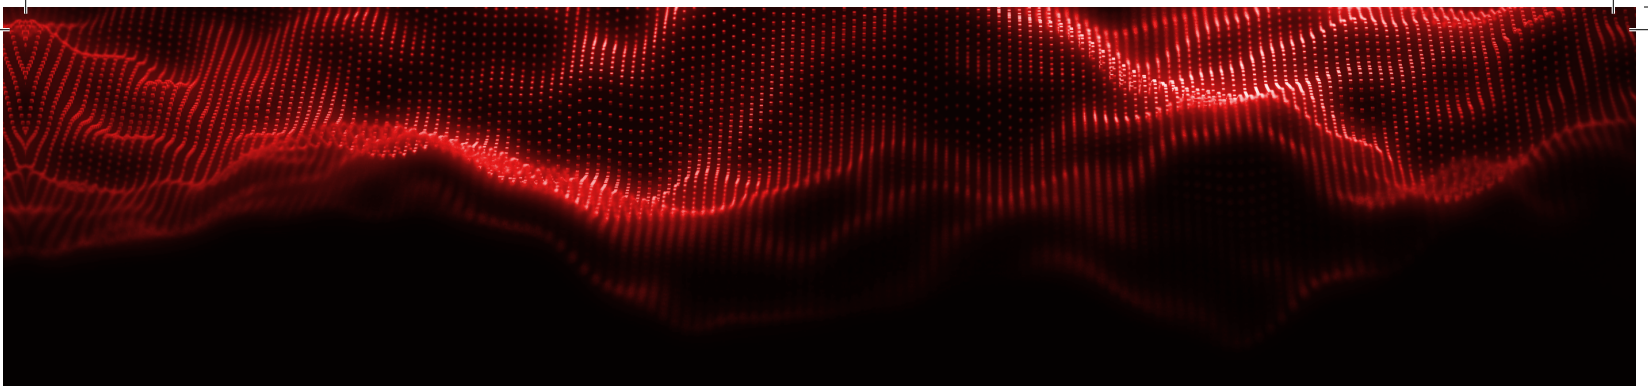

WARNING

This product produces an electromagnetic field during operation! This field may in some circumstances interfere with active or passive medical implants!

To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their doctor and the medical implant manufacturer before operating this product!



WARNING

Injuries may be caused, or aggravated, by prolonged use of a tool. When using any tool for prolonged periods, ensure you take regular breaks.



DANGER OF FIRE OR EXPLOSION

**Never charge batteries in the vicinity of acids or easily flammable materials.
Charge battery only at a temperature between 10-45°C. After heavy use, first allow the battery to cool.
Protect the device from direct exposure to heat and fire.**

**Do not place on heating units or expose to strong sunlight for an extended period.
Operate the device only at temperatures between 0°C to 45°C.**



RISK OF SHORT CIRCUIT

For disposal, transport or storage, pack the battery in a plastic bag or a cardboard box, or isolate the contacts with adhesive tape.

Do not open the battery.

Webb **eco**

X-SERIES





INSTRUCTION MANUAL

KNOW YOUR MACHINE

NOTE: WEV20X2BCB4X includes the charger and batteries. WEV20X2BCBARE does not include the charger and batteries.

1. Trigger Handle	2. On/Off Switch
3. Safety Guard	4. Battery Indicator Lights
5. Safety Button	6. Nylon Head & Line (Not in image)
7. P-Shape Front Handle	8. Brush Cutter Metal Blade
9. 20v 4Ah Battery	10. Battery Life Indicator
11. Battery Lock Button	12. Battery Lock
13. Charger Cable Input	14. Charger – BS 3-Pin
15. Charger – Type-C x2 & USB-A Outlets	16. Shaft Connector



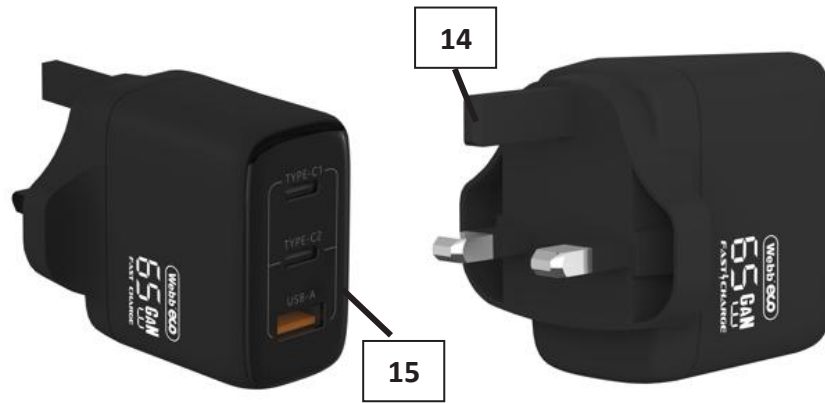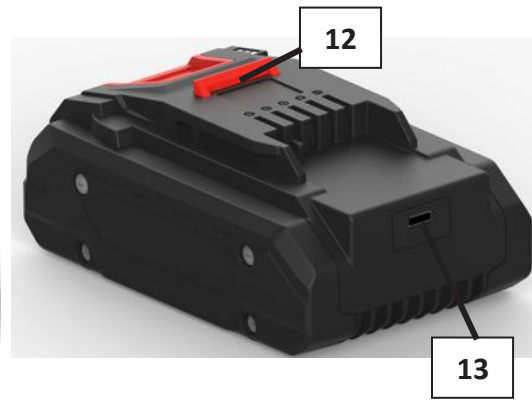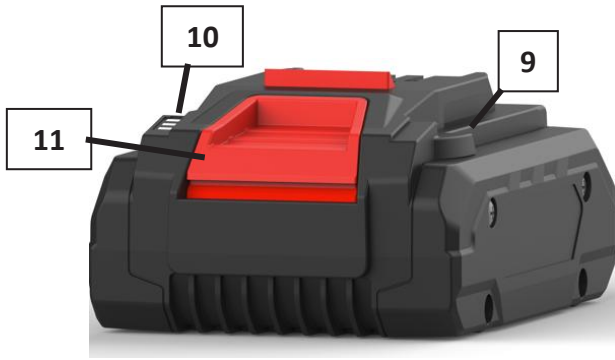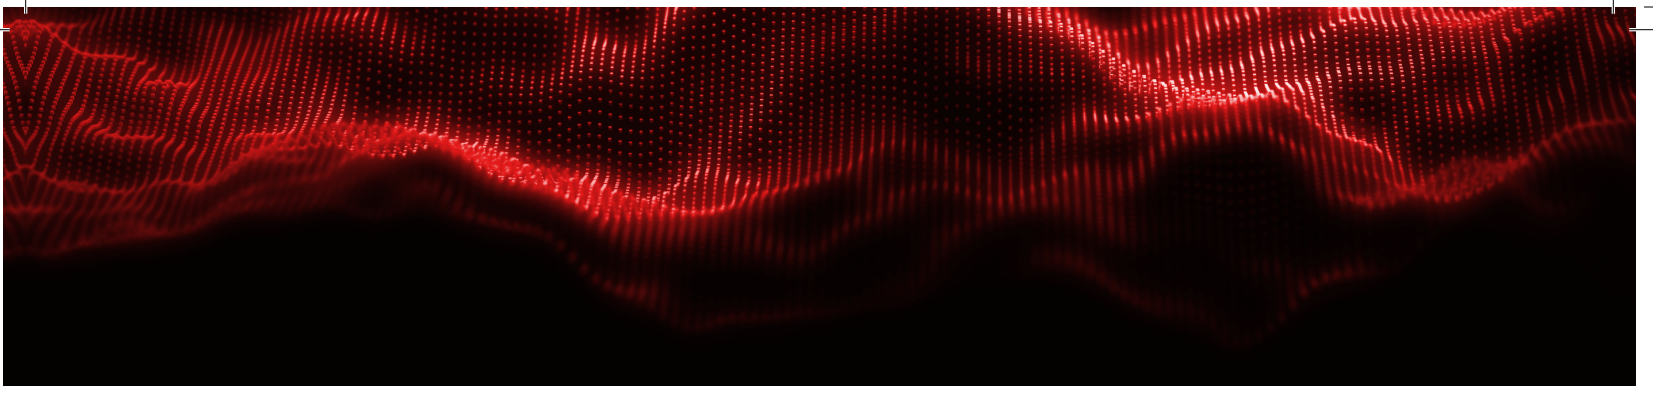

X-SERIES

INSTRUCTION MANUAL

ASSEMBLY



WARNING

In the unlikely event your machine is damaged prior to assembly or operation, do not attempt to operate the machine. Contact your retailer for assistance.

Remove the machine and contents from the carton. Be sure the carton is empty before discarding. If you require assistance regarding the contents of the machine, contact us:

TEL: 01793 333212 - EMAIL: CS@WEBBGARDENPOWER.CO.UK

MONDAY TO FRIDAY – 08:00 TO 17:00 - (CLOSED WEEKENDS, BANK HOLIDAYS & BUSINESS CLOSURES)

If you find parts are missing or damaged, do not use the product but contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.

Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.

NOTE: WEV20X2BCB4X includes the charger and batteries. WEV20X2BCBARE does not include the charger and batteries.



WARNING



Wear protective gloves for this assembly work and always lay the product on a flat and stable surface while assembling. Follow the assembly instructions step-by-step and use the pictures provided as a visual guide to easily assemble the product.

Do not insert the battery, before the power tool is completely assembled or adjusted.

POWER UNIT ASSEMBLY




WARNING

RISK OF INJURY!

Never use the power tool if the product is not completely assembled.

1. Insert the lower shaft into the centre bracket of the upper shaft.
2. Then tighten the red knob of the centre bracket to tighten.

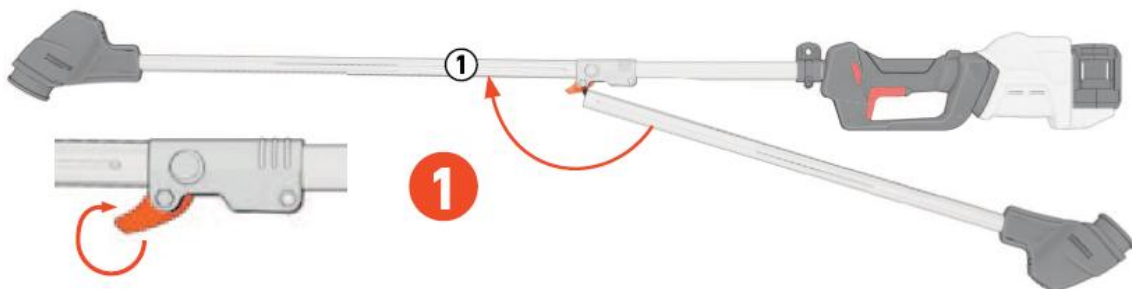

SAFETY GUARD UPPER ASSEMBLY




WARNING RISK OF INJURY!


Never use the power tool without the safety guard upper & lower attached. Severe injury can occur if not fitted.

Excessive strain to product will also occur if safety guard assembly is not fitted. Failure caused by incorrect assembly, is not covered under the manufacturer's warranty.

1. Fit the safety guard upper (4) to the head of the power unit (1).
2. Secure the safety guard upper to the power unit and line up the fixing holes on both components. Using the supplied screws (x2), fit them through the underneath of the safety guard upper, into the power unit fixing holes and tighten. Do not overtighten and cause whitening of the product material.

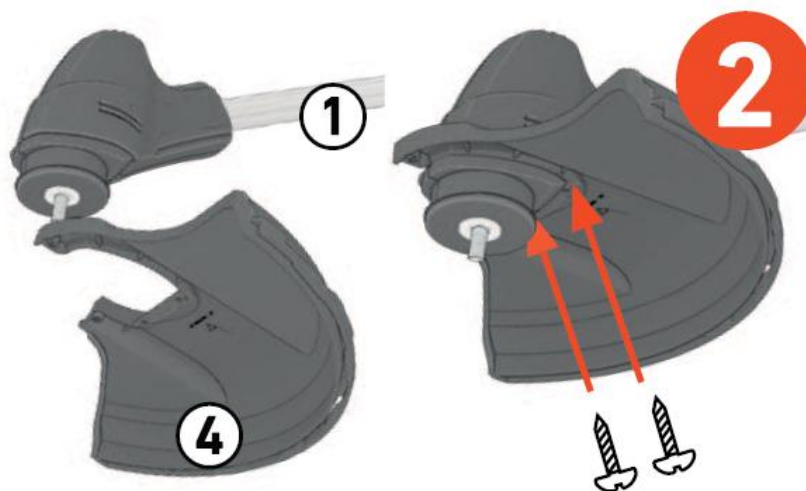

3. Insert the safety guard collar to complete the safety guard upper.
4. Using the supplied screws (x2), fit them through the underneath of the safety guard collar, safety guard upper, into the power unit fixing holes and tighten. Do not overtighten and cause whitening of the product material.

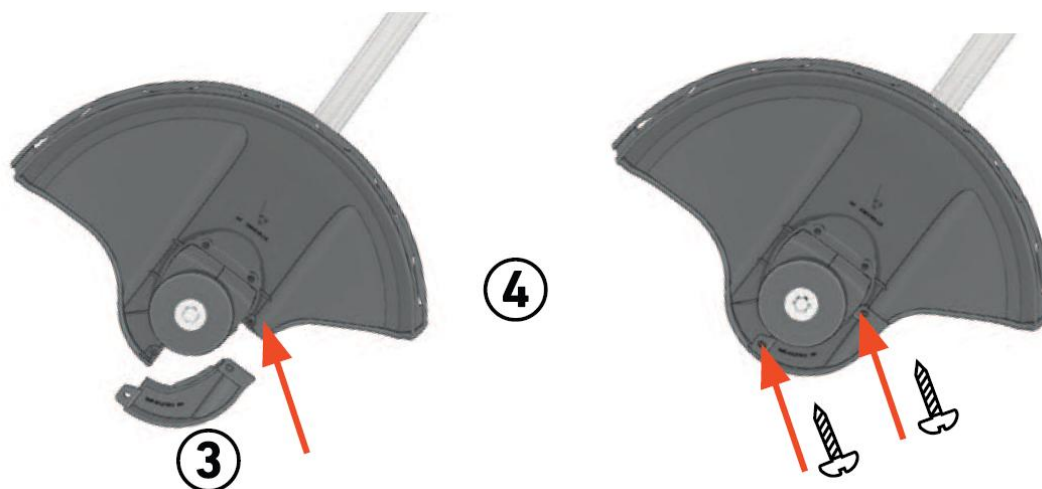

X-SERIES

INSTRUCTION MANUAL


FIT SAFETY GUARD LOWER & KNIFE




WARNING
RISK OF INJURY!

During the assembly of the safety guard curtain & knife, pay attention and wear suitable protective gloves.

1. Secure the knife (5) to the safety guard lower with the supplied fixing screws X2.

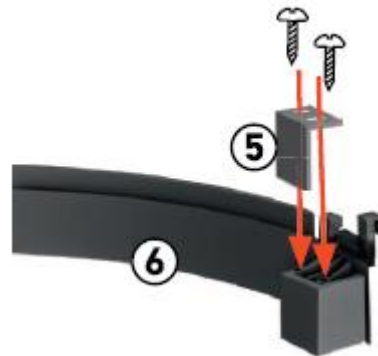

2. Secure the completed safety guard lower (6) to the safety guard upper (4), by inserting the lower into the groove of the upper and slide until it reaches the seated position.

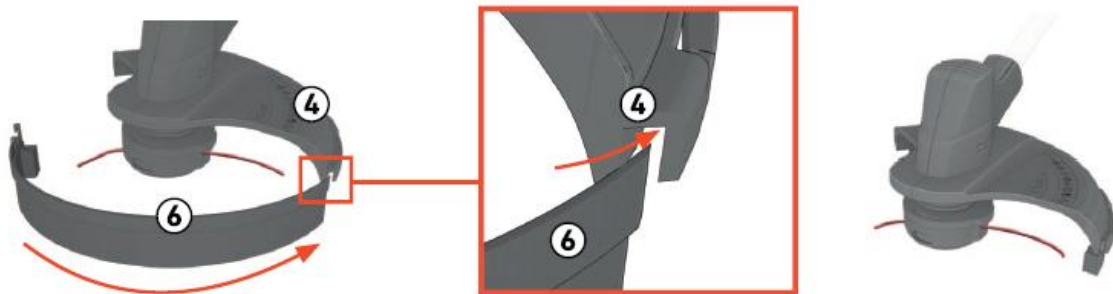


FIT SAFETY HANDLE ASSEMBLY


NOTE: It may be necessary to have a second person close to hand to assist you with this assembly step.

1. Position the safety handle upper (9) onto the upper shaft of the tool.




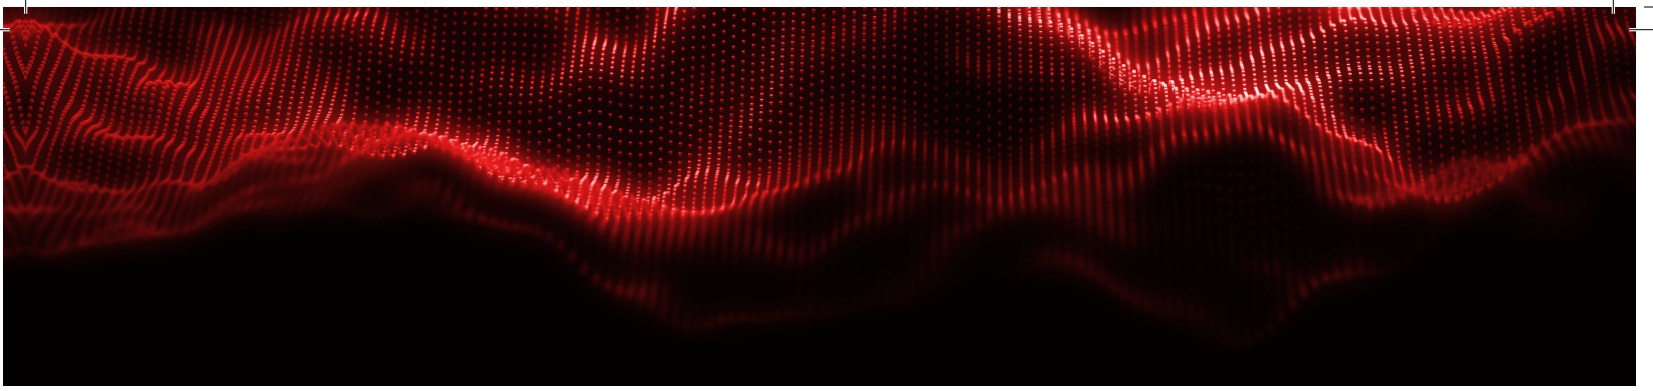

2. Insert the safety handle lower (7) into the safety handle uppers, designated fixing slot.

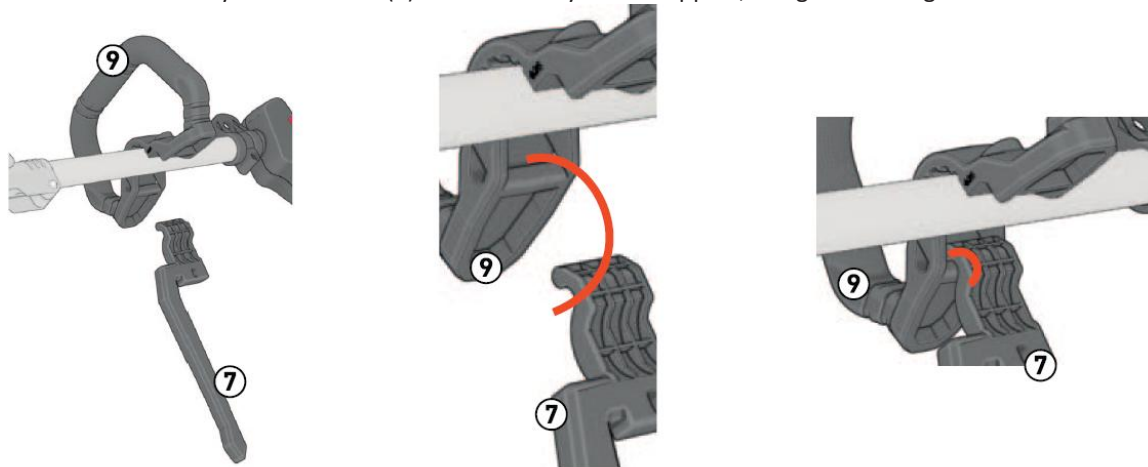

3. Rotate the safety handle lower (7) upwards, and secure with the supplied rotating knob (8).
4. Ensure the safety handle assembly is tight and cannot rotate around the machine shaft.

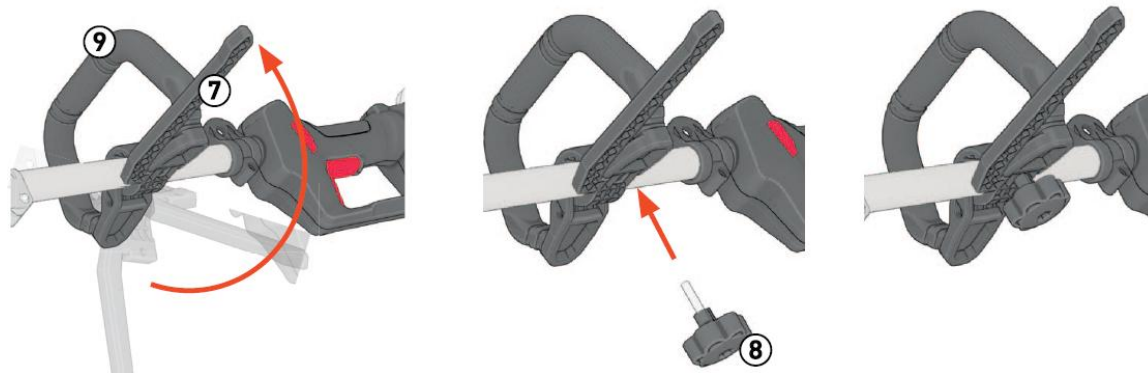

5. Adjust the position of the safety handle assembly to meet your needs, by loosening (not removing) the rotating knob (8) and adjusting the position of the safety handle assembly on the shaft and securing back to the shaft when in a comfortable position.


FIT SHOULDER STRAP

1. For safety and comfort, your tool has been supplied with a shoulder strap.
2. Attach the shoulder strap to the shoulder strap eyelet (10) on the upper shaft.
3. Ensure the strap is secure before operating.




FIT NYLON HEAD

1. Flip the machine upside down and slide the flange washer on to the cutting head shaft.
2. Lock the flange washer by inserting a screwdriver into the flange washer and cutting head shaft holes.
3. Screw the nylon head anti-clockwise onto the cutting head shaft, whilst holding the screwdriver to lock the shaft.

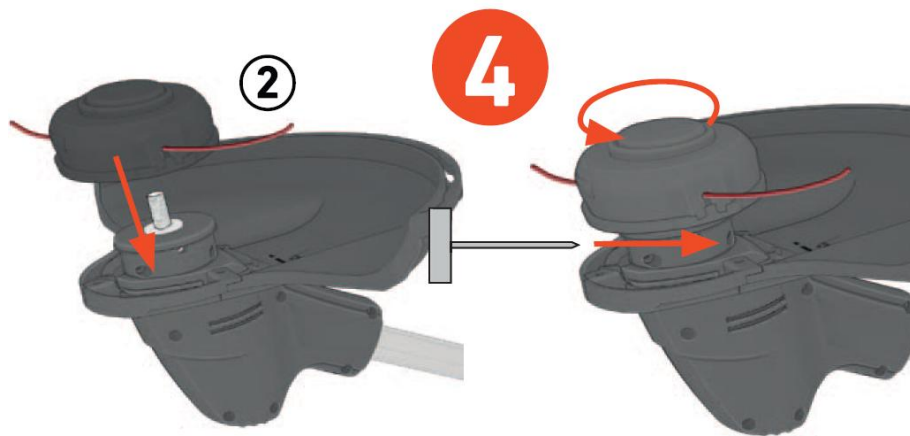

FITTING METAL BLADE

1. Flip the machine upside down and slide the flange washer (1) onto the cutting head shaft.
2. Mount the metal blade (2) onto the shaft, ensuring the blade is locked onto the flange washer.
3. Install the cutter washer (3) onto the blade.
4. Secure with the cup (4) and hex nut (5). Tighten the hex nut to between 13 & 23Nm torque in a clockwise direction.

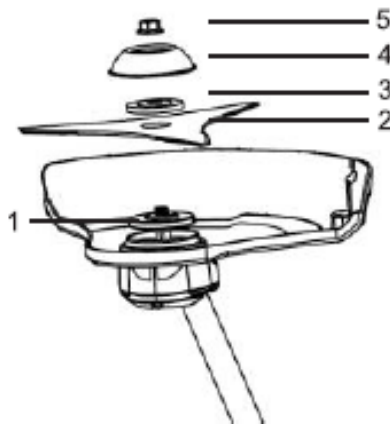

BATTERY & CHARGER

CHARGING BATTERY



WARNING

Use only authorised Webb 20v Lithium-ion batteries.

Batteries are shipped in a low charge condition to prevent possible problems. Therefore, you should charge them prior to use.

NOTE: Batteries will not reach full charge the first time they are charged. Allow several cycles (operating tool followed by recharging batteries) for them to fully charge.

TO CHARGE

1. Use this charger only with Authorised Webb 20v Lithium-ion batteries.
2. Never attempt to charge non-rechargeable batteries.
3. Make sure the power supply is normal UK home voltage, 230 volts, 50 Hz, AC only.
4. Connect the charger to the power supply. The charger light will illuminate GREEN noting that the power is on.
5. Slide the battery onto charger.
6. Press down on battery to be sure contacts on the battery engage correctly with the charger contacts.
7. When the battery and charger are connected correctly, the charger light will be a flickering RED to indicate the battery is charging.
8. A constant GREEN light indicates the battery is fully charged.
9. A minimum charge time of 80 minutes (1x 4Ah battery) or 160 minutes (2x 4Ah battery) is required to recharge a completely discharged battery.
10. The battery will become slightly warm to the touch while charging. This is normal and does not indicate a problem.
11. DO NOT place a charger in an area of extreme heat or cold. It will work best if stored and operated in normal room temperature.
12. Frequently monitor the charger and battery while connected.
13. When the battery is fully charged, unplug your charger from power supply and remove the battery from the charger.
14. Allow the battery to cool completely before attempting to use it.

NOTE: If the battery does not fit properly, disconnect it and confirm that the battery is the correct model for the charger supplied. Do not charge any other battery or any battery that does not securely fit the charger.



CAUTION

When in operation in a tool, the battery will become hot!

Allow the battery to cool down to room temperature for approximately 30 minutes, before attempting to recharge. This will extend the life of your batteries.

X-SERIES

INSTRUCTION MANUAL

INSTALLING / REMOVING BATTERY



CAUTION

Always switch off the machine before installing or removing the battery.
Hold the machine and the battery firmly when installing / removing battery. Failure to hold the machine and battery firmly may cause them to slip out your hands and result in damage to the machine, battery or the operator.

Always install the battery fully until the battery lock cannot be seen. If not, it may accidentally fall out of the machine, causing unreparable damage or cause injury to you or bystanders.

Do not install the battery forcibly. If the battery does not slide in easily, it is not being inserted correctly.

INSTALL BATTERY

1. To install the battery, ensure the battery release button of the battery is at the top and the base of the battery is facing the machine.
2. Align the battery with the groove in the battery housing and slide it into place. Insert it all the way until it locks in place with an audible click.

REMOVE BATTERY

To remove the battery.

1. Press the battery release button and remove the battery.
2. Slide out the battery from the tool.



MACHINE & BATTERY PROTECTION

The tool is equipped with a tool or battery protection system. The system can automatically cut off the power supply to the motor to extend the lifespan of the tool and battery. If the tool or battery is in one of the following conditions, the tool will automatically stop during operation.

OVERLOAD PROTECTION


When a tool or battery operates in a manner that causes it to produce an abnormally high current, the tool automatically shuts down. In this case, shut down the tool and remove the factors that caused the overload. Then turn on the tool to restart.

OVERHEAT PROTECTION

When the tool overheats, it will automatically stop. Let the tool cool down for a minimum period of 15 minutes before attempting to restart. When the battery overheats, the green light will blink and stop the power supply to the tool. The tool automatically stops and restarts after cooling of the battery.

UNDER VOLTAGE PROTECTION

When the battery capacity is low, the tool will automatically stop. If the tool does not start, please remove the battery, and then charge the battery to its full capacity.

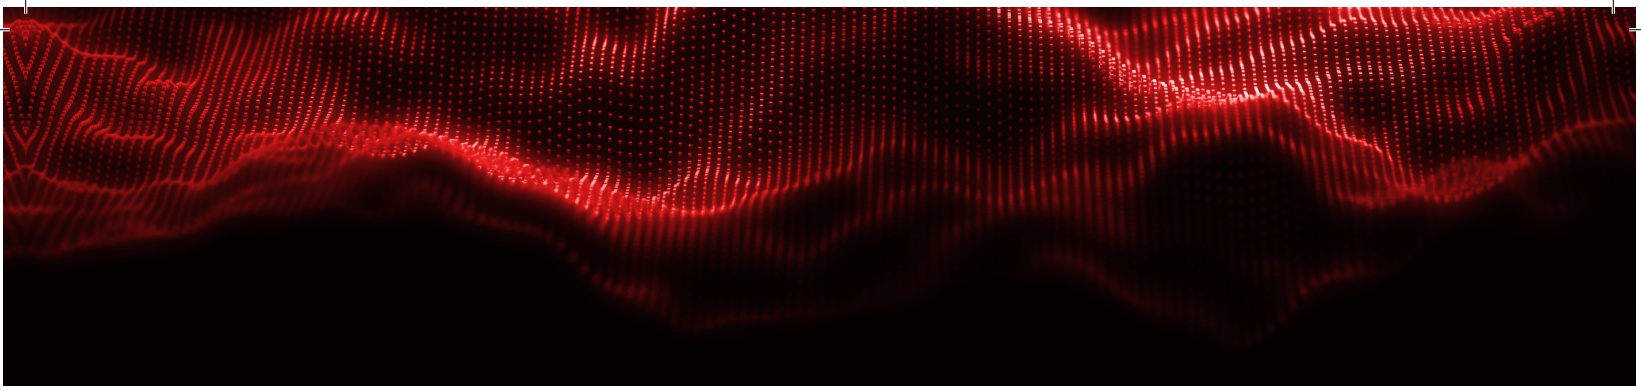

PROTECTION AGAINST OTHER CAUSES

Protection system is also designed for other causes that could damage the tool and allows it to stop automatically. Take all the following steps to clear the causes when the tool has been brought to a temporary halt or stop in operation.

- Turn the tool off and then turn it on again to restart.
- Charge the battery(ies) or replace it/them with recharged battery(ies).
- Let the tool and battery(ies) cool down.

If no improvement can be found by restoring the protection system, contact Webb Garden Power.

NOTE: The timing, at which the battery indicator lights illuminate, depends on the temperature at the work area and the battery conditions.

BATTERY INDICATOR

Press the check Red release button on the battery to indicate the remaining battery capacity. The LED indicator lights will illuminate for a few seconds.



LED LIGHTS	BATTERY CAPACITY
LED 1,2 & 3 on	Full charged (66-100%)
LED 1 & 2 on	Battery is 33%-66% charged
LED 1 on	Battery is depleted (0%-33%). Charge the battery.

NOTE: Depending on the conditions of use and the ambient temperature, the indication may differ slightly from the actual capacity.

NOTE: The green indicator light will blink when the battery protection system works.

X-SERIES

INSTRUCTION MANUAL

OPERATION



WARNING

In the unlikely event your machine is damaged prior to assembly or operation, do not attempt to operate the machine. Contact your retailer for assistance.



DANGER

Risk of injury!

The device may only be put into operation if there are no defects. If a part is defective, it must be replaced before the device is used again.

Before starting work check the area and remove all objects which may be kicked up by the unit.

Check the safety equipment and the safe condition of the power tool.

- Check all parts to make sure they fit tightly.
- Check whether there are visible defects, broken parts, cracks etc.

SWITCHING ON/OFF

- To switch ON the power tool, press the ON/OFF trigger.
- To switch OFF the power tool, press the ON/OFF trigger.

NOTE: Wait for the tool to come to a complete stop before moving or storing it.

NOTE: Please adhere to local rules regarding periods of days for operation.

CLEANING, MAINTENANCE & STORAGE




WARNING

Before undertaking any work on the machine (e.g. maintenance, changing the tool, etc.) as well as during its transport and storage, ensure the safety button is in the off position. There is a danger of injury when the ON/OFF trigger is unintentionally actuated.



WARNING

Failure to identify and replace damaged or worn parts can cause serious personal injury. Inspect the power tool regularly. Regular inspection is the first step to proper maintenance. Follow the guidelines below to maximize safety and satisfaction. Have any damaged or excessively worn parts replaced immediately.

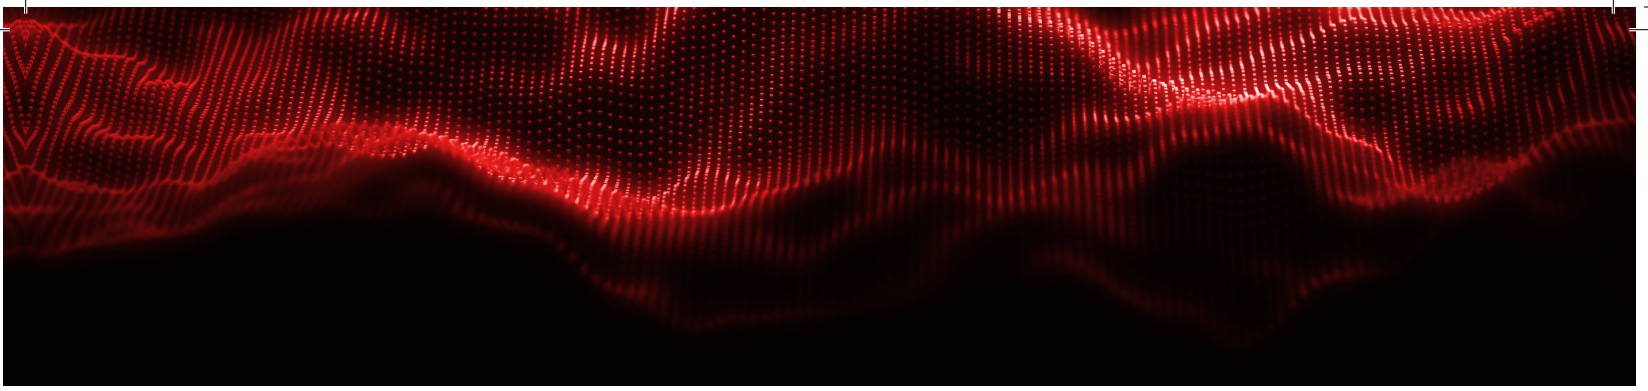

WARNING

Always remove the battery pack and let the product completely cool down before performing cleaning and maintenance work!

Always wear gloves to reduce the risk of injury when operating this unit.

Only perform cleaning and maintenance work according to these instructions! A qualified specialist must perform all further works!

NYLON LINE REPLACEMENT

1. Remove the spool cap (3) by pressing the two side buttons.
2. Lift off the spool cover.
3. Cut the required length of nylon line, fold in half for two even lengths.
4. Thread the mid-section of the nylon line through the gap of the inner spool (4)



5. Wind the two lengths of nylon line around the upper and lower sections of the inner spool in a clockwise direction.
6. Once you have the required length of nylon line, feed through the holes of the spool cap (3).
7. Reinstall the spool and spool cap back onto the spool lower, fitted to the shaft of your tool.



NYLON LINE LENGTH

To adjust the nylon line length,

1. Hold the machine in the operating position.
2. Start the motor and the spool will begin to rotate.
3. Tap the nylon head on the ground. The rotation of the nylon head will feed extra nylon line. Do not over tap the nylon head, the cutting knife will cut off any excess and adjust the correct length for optimized operation. until it is contact the

X-SERIES

INSTRUCTION MANUAL

CLEANING



WARNING

Before performing any work, make sure the tool has stopped running.
Ensure the battery is removed.
Always wear protective gloves when using, adjusting or cleaning the machine.

THOROUGHLY CLEAN THE MACHINE AT THE END OF EACH USE.

- Brush off coarse dirt.
- Wipe down the device with a slightly damp cloth.

IMPORTANT

Never clean the tool under running water and particularly never with high pressure, because of the potential danger to persons and property. Keep your machine in a dry and frost proof place. Choose a place that children are unable to enter.

MAINTENANCE



DANGER

Never clean the machine in water (especially running water), as there is a risk of personal injury and damage to the shears.



WARNING

There are no user serviceable parts inside the battery. Do not disassemble.

STORAGE

- Remove the battery from the power tool.
- Clean power tool thoroughly as described above.
- Store in a dry place.
- Keep out of reach of children or pets.
- We recommend using the original packaging for storage or covering the product with a suitable cloth or enclosure to protect it against dust.

NOTE: To prolong battery life, never store battery in a completely discharged condition. Make sure the battery is charged once per year or when the battery indicator shows only one light.

TRANSPORT

- Remove battery from the power tool.
- Tools can shift during transport. Ensure the tool is secure and cannot fall or move into contact with people or property.

DISPOSAL

SAFE DISPOSAL OF BATTERIES



Li-ion

Our batteries are designed according to the latest state of technology and optimised for the use in electric tools. Lithium ion cells contain hazardous substances and may therefore not be disposed off with normal household waste. Our batteries are lithium-ion cells and are therefore subject to special disposal regulations. Bring defective batteries to your specialist dealer. Before disposing of the tool, remove the battery. We wish to encourage users to act in an environmentally friendly manner.

DISPOSAL OF THE TOOL



A crossed-out wheelie bin icon means: Batteries and rechargeable batteries, electrical or electronic devices must not be disposed of with household waste. They may contain substances that are harmful to the environment and human health.

Consumers must dispose of waste electrical devices, spent portable batteries and rechargeable batteries separately from household waste at an official collection point to ensure that these items are processed correctly. The product can be returned free of charge in accordance with the legal requirements, for example through a municipal waste disposal company or a dealer.



Batteries, rechargeable batteries and lamps that are not permanently installed in waste electrical equipment and can be removed in a non-destructive way must be removed and disposed of separately before disposal of the equipment. Lithium batteries and rechargeable battery packs of all systems are only to be handed in to the waste collection points in a discharged state. The batteries must always be protected against short circuits by taping off the poles.

All end users are responsible for deleting any personal data stored on waste devices prior to their disposal.

DISPOSAL OF PACKAGING



The packaging consists of cardboard and correspondingly marked plastics that can be recycled.
– Make these materials available for recycling.

TROUBLE SHOOTING

Suspected malfunctions are often due to causes that the users can fix themselves. Therefore, check the product using this section. In most cases the problem can be solved quickly.



Switch off the line trimmer and remove the battery before inspecting, cleaning or working on machine.

Problem	Possible Cause	Solution
The tool fails to start	<ol style="list-style-type: none"> 1. The battery is depleted. 2. The battery is not attached to the tool. 3. Battery or tool circuitry is too hot. 4. Tool cutting head or nylon line jammed with debris. 5. Battery temperature is too high or too low. 	<ol style="list-style-type: none"> 1. Charge the battery. 2. Attach the battery to the line trimmer. 3. Allow the battery or line trimmer to cool down. 4. Clean the tool and make certain that the nylon line or blade has freedom of movement. 5. Allow the device to cool or warm up and if necessary, clean the ventilation slots.
Automatic line adjustment does not work.	<ol style="list-style-type: none"> 1. The line spool is empty. 2. The line spool is dirty. 3. The line has torn off and is pulled into the line spool. The line has become caught in the spool. 4. The line is melted onto the spool. 	<ol style="list-style-type: none"> 1. Replace the line spool. 2. Use a brush to remove dirt from the parts. 3. Take off the line spool; if necessary, rewind the line by gently pulling, and then insert the spool. 4. Remove the melted line part; if necessary, rewind the line by gently pulling and insert the spool.
The nylon line breaks off too frequently.	<ol style="list-style-type: none"> 1. The line comes into contact too frequently with fixed objects, e.g. fences, trees, etc. 	<ol style="list-style-type: none"> 1. Use the plant protection guard.
Excessive vibration	<ol style="list-style-type: none"> 1. Device fasteners have come loose. 2. Bent motor shaft. 3. Metal blade is damaged 	<ol style="list-style-type: none"> 1. Take to Approved Service Dealer or local garden machinery specialist. 2. Contact your local Approved Service Dealer. 3. Contact your local Approved Service Dealer.

If you can't fix the fault yourself, contact your local Approved Service Dealer. Please be aware that any improper repairs will also invalidate the warranty and additional costs may be incurred.

X-SERIES

INSTRUCTION MANUAL

PARTS LIST – WEV20X2BCB4X & WEV20X2BCBARE (1938382001)

NOTE: WEV20X2BCB4X includes the charger and batteries. WEV20X2BCBARE does not include the charger and batteries.

Item No	Webb Part No.	Webb Description	Qty
1	WE266-2207J10101	Cable Clamp	1
2	WE135-J0010001590R	Screw ST4X16	31
3	WE266-3	Controller	1
4	WE266-3038A22801	Left Housing	1
5	WE266-2078A11901	Indicator Display	2
6	WE266-1548A22802	Battery Volume Indicator	1
7	WE266-2938A23202	Trigger Lock	1
8	WE266-3447A61002	Lock Spring	2
9	WE266-2978A23205	Left Handle	1
10	WE266-1398A11001	Microswitch	1
11	WE266-3448A20104	Trigger Spring	1
12	WE266-2968A23202	Trigger	1
13	WE266-3038A22802	Right Housing	1
14	WE266-2978A23206	Right Handle	1
15	WE266-2548A20802	Aluminium Tube Upper	1
16	WE266-3132B0504R	M5 Locknut	1
17	WE266-2797A21001	Hook	1
18	WE266-1277A21001	Ring Brackett	1
19	WE266-3131KCDD051601R	Hex Screw M5x16	1
20	WE266-2607A20503	Aluminium Connector	1
21A	M-M5X15MM	Hex Screw M5x12 & Washer	1
21B	M-M5FLATWASHER		
22	WE266-2548A20803	Aluminium Tube Lower	1
23	WE266-2958A21301	Handle Knob	1
24	M-M6X45	M6x45 Hex Bolt	1
25	WE266-2318A21301	Leg Guard	1
26	WE266-2998A21301	Front Handle	1
27	M-M6PLAINNUT	M6 Hex Nut	1
28	WE266-3038A21303	Motor Housing	1
29	WE266-1178A21301	Stator	1
30	WE266-2188A21301	Windshield Ring	1
31	WE266-369A00060601	Bearing 606 $\phi 6 \times \phi 17 \times 6$	1
32	WE266-1158A21302	Rotor	1
33	WE266-369A00060810	Bearing 608 $\phi 8 \times \phi 22 \times 7$	1

If you wish to purchase Spare Parts, please visit www.webbgardenpower.co.uk and enter your chosen part number in the search bar. If the part is not listed, please contact our Spares Team on **01793 333212 option 2** or email spares@webbgardenpower.co.uk with your requirements, model and part number details (found on the front cover of this instruction manual).

PARTS LIST – WEV20X2BCB4X & WEV20X2BCBARE (1938382001)

NOTE: WEV20X2BCB4X includes the charger and batteries. WEV20X2BCBARE does not include the charger and batteries.

Item No	Webb Part No.	Webb Description	Qty
34	WE266-3598A21301	Small Gear	1
35	WE266-2878A20801	Aluminium Bracket	1
36	WE266-369A00060702	Bearing 607 $\phi 6 \times \phi 19 \times 6$	1
37	WE266-130G1001	Axial Retaining Ring	1
38	WE266-3598A21302	Large Gear	1
39	WE266-3348A20802	Spline Shaft	1
40	WE266-2327E41001	Half-Round Key 3x10	1
41	WE266-369A00600201	Bearing 602 $\phi 15 \times \phi 32 \times 9$	1
42	WE266-3038A20803	Left Head Cover	1
43	WE266-3038A20804	Right Head Cover	1
44	WE266-2207A21002	Lower Pressure Plate	1
45	WE266-3178A20801	Shield Assembly	1
46	WE266-131ABAD5014	Self-Tapping Screw ST5x14	2
47	WE266-3858A20801	Guard	1
48	WE266-131ABDD0410	Large Flat Head Screw M4x10	2
49	WE266-2488A20501	Guard Extension	1
50	WE266-1838A20101	Cutting Knife	1
51	WE266-1298A20801	Isolation Gasket	1
52	WE266-2207A21001	Upper Press Plate	1
53	WE266-313-8A20801	Protective Cover	1
54	WE266-132M1001	Left Tooth Nut M10	1
55	WE266-3748J30101	Belt GJ155	1
56	WE266-1748A20802	Spring Wire	1
57	WE266-1738A20803	Connection Line 3	2
58	WE266-2817A20501	Allen Key 4mm	1
59	WE266-2817A20502	Spanner	1
60	WE266-2648A20801	Line Trimmer Head	1
61	WE266-1837A20501	Brush Cutter Blade	1
62	WE266-2468A51139	Left Battery Housing	1
63	WE266-2468A51141	Plug Holder	2
64	WE266-1570010	Wiring Lead	1
65	WE266-1738A21302	Terminal Wire	2
66	WE266-2468A51140	Right Battery Holder	1
67	WE135-J0010001590R	Screw ST4X16	2

If you wish to purchase Spare Parts, please visit www.webbgardenpower.co.uk and enter your chosen part number in the search bar. If the part is not listed, please contact our Spares Team on **01793 333212 option 2** or email spares@webbgardenpower.co.uk with your requirements, model and part number details (found on the front cover of this instruction manual).

Webb **eco**

X-SERIES

INSTRUCTION MANUAL



DECLARATION OF CONFORMITY

We Handy Distribution Ltd - SN3 5HY (Importer) declare that the product:

Designation: Cordless Lithium Grass Trimmer & Brush Cutter

Model(s): WEV20X2BCB4X/WEV20X2BCBARE

Product Number: 1938382001

Type/Serial No. As per rating label on machine

Protection: Class III - IPX0

Rated Voltage: 36V d.c – Max 40V d.c

Rated No Load Speed 5500-7500/min

This machine conforms to EU Directives, to which this declaration relates & corresponds to the relevant basic safety and health requirements of Directive:

Machinery Directive 2006/42/EC

EMC Directive 2014/30/EU

RoHS Directive 2011/65/EU & (EU) 2015/863

Noise Directive 2000/14/EC

For the relevant implementation of the safety and health requirements mentioned in the Directives, the following standards and/or technical specification(s) have been respected:

EN 60335-1:2012/A15:2021 – EN 50636-2-91:2014 – EN ISO 11806-1:2022 – EN 62233:2008

EN IEC 55014-1:2021 – EN IEC 55014-2:2021

Guaranteed Sound Power Level: $L_{WA} = 96 \text{ dB(A)}$

Vibration Level: $a_h =$ Trimmer: 2.0 m/s^2 - Brush Cutter: 2.92 m/s^2 - Uncertainty (K): 1.5 m/s^2

Notified Bodies:

TÜD SÜD Certification and Testing (China) Co Ltd

Authorised signatory and technical file holder

Date: 12/12/2025


Name: Mr Simon Belcher

Signature:

A handwritten signature in black ink, appearing to read 'S Belcher', written over a horizontal line.

Position: Chairman

Company: Handy - **Address:** Murdock Rd, Swindon, Wiltshire, SN3 5HY.

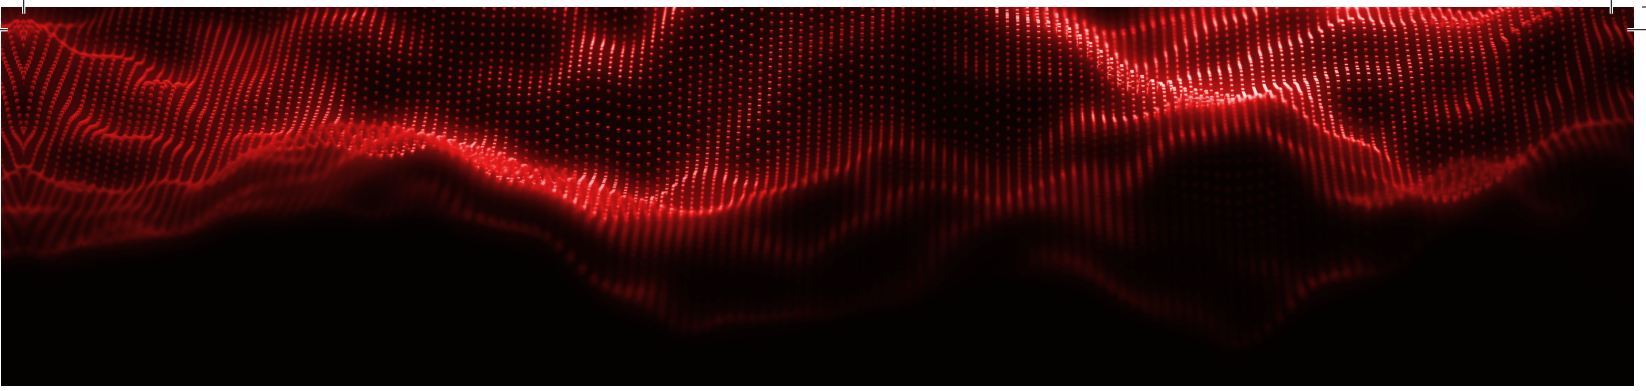

This Service Book is provided with your Webb, to help you look after your purchase to our recommendations and enable you to take advantage of the conditional manufacturer domestic warranty*.

Present this service book to your authorised Webb repair dealer, whenever a service or a warranty appraisal is required.

The booklet is applicable to the following products, in the UK only:

- Ride On Lawn Tractors
- Cylinder Lawnmowers
- Petrol Rotary Lawnmowers
- Petrol Hand Held Range

Please register your machine using the following pages or at www.webbgardenpower.co.uk. By registering your machine, you agree to maintain the machine in accordance with the service schedules specified in this manual and services duly recorded. (Not applicable for Webb electric handheld machines). You may be asked to produce this booklet as proof of servicing in the event of a claim. Proof of purchase should also be kept as a reference.

Ensure you have the following information available from your machine product label. The two examples below can be found on your machine:



1. Model Number

2. Serial & Product Number

Please complete using BLOCK CAPITALS.
Sections marked* must be completed to validate Warranty.



X-SERIES

INSTRUCTION MANUAL

Users Statement of Warranty

Each new machine is warranted against defective material or assembly of material under normal usage. The warranty applies to the original purchaser and covers faulty parts and the labour involved in replacing and repairing those parts, which are of original manufacture.

All claims must be accompanied by evidence of the date of purchase, such as a Sales Receipt showing that the product has been purchased from an approved retailer, it was brand new at time of purchase, which is within the warranty time period.

Period of Warranty


Webb (Green Products)

- a) 3 years from the original date of sale to the first domestic user. (2 years batteries & chargers)
- b) 90 days from the original date of sale to the professional/commercial user.
- c) 90 days from the original date of sale when used for hire.
- d) A reduced warranty period of 90 days applies to those items which are subject to normal wear and tear (e.g. but not limited to wheels, tyres, cutter bars, cylinders, cutting blades, blade boss, belts, cables, nylon line & spool, collection bags, engine spark plugs, electric plug fuses).
- e) Engines are supplied with a separate warranty to the machine. The engine manufacturers warranty statement which will be supplied within the engine instruction manual. All enquiries and warranty repairs should be discussed with the engine manufacturer or approved warranty repair dealer.
- f) 90 days from the original date of purchase for Replacement Spare Parts (unless normal wear & tear component, which are covered for 30 days).
- g) All machines' must be serviced within the first 12 & 24 months from the original date of purchase to comply with the warranty (if applicable), failure to do so will invalidate the 2nd & 3rd years of the warranty.

All warranty repairs must be undertaken by an authorised service dealer. These dealers have been accredited by GJ Handy (Trading) Ltd and agree to only use genuine parts and follow our repair procedures.

Not covered by this warranty

- a) Error in assembly by user in accordance with manufacturers instructions.
- b) Incorrect operation of product in accordance with manufacturers instructions.
- c) The defect is due to accident, misuse, unauthorised modification or inexpert repair.
- d) The warranty policy does not cover any depreciation or damages caused by ordinary wear, rusting or corrosion, lack of correct maintenance or operation, misuse, abuse, lack of transportation or accident.
- e) The warranty policy does not cover any costs necessary for the standard periodic maintenance services instructed by the operator's manual, or service parts replacement which would include oil, filters, tyres, belts, brake linings, fuses, blades, seals and other service parts unless it can be proven that the item has evidence of faulty manufacture.
- f) The warranty policy will not cover failure or damage caused as a result of parts or accessories being modified without the written approval of GJ Handy (Trading) Ltd.
- g) The warranty policy will not cover the unit if non-genuine parts have been fitted and as a result damage has occurred to the unit.

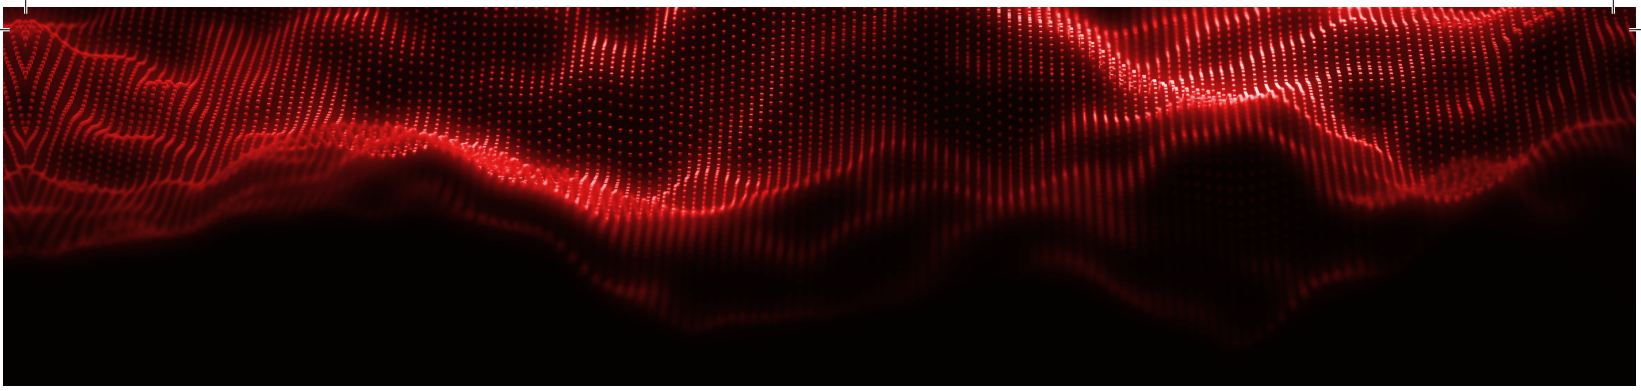

- a) The warranty policy is non-transferable and is only applicable to the original purchaser.

Disclaimer

- a) This warranty is only a remedy for defect of products. GJ Handy (Trading) Ltd will never warranty in terms of the merchantability or the fitness for a particular purpose.
- b) No person is authorised to make any warranties, representations or promises, expressed or implied, on behalf of GJ Handy (Trading) Ltd, or to modify the terms conditions or limitation of this warranty policy in any way.
- c) Neither GJ Handy (Trading) Ltd nor any company affiliated with GJ Handy (Trading) Ltd shall be liable in any event or manner whatsoever for incidental or consequential damages or injuries, including, but not limited to, loss of crops, loss of profit, out of pocket expenses or profits, rental of substitute equipment or other commercial losses.

General

- a) Most warrantable failures show up within the first few weeks of use. These failures are usually straightforward and warranty assessment is relatively easy.
- b) Failures relating to cutter decks and belts need careful investigation, as the cause may not always be straightforward. Look for damage to blades and pulleys especially when the cutter belt or blade boss have snapped or cracked as this could be due to impact damage.
- c) Customers should always refer to the operator/instruction manual when any disputed problem arises, you will find most areas covered within the manual.

Protecting your machine

Maintenance

Regular maintenance of your Webb machine is essential to ensure it operates, safely, efficiently and therefore reducing the environmental impact.

It is the owner's responsibility to ensure that their Webb machine is maintained at specific intervals. Any approved Webb service dealer can undertake a service, which are specialised in our products and will be aware of your particular machine and any technical updates which will save valuable time & money.

If you are using your machine in dry, dusty or high temperatures, you will need to service the machine more regularly.

Fuel (if applicable)

Due to ongoing efforts by fuel companies to reduce emissions, unleaded petrol will oxidize & deteriorate in storage overtime, leaving residue from detergent components.

Fuel deterioration problems may occur when petrol is stored for over 30 days. If you are planning to store fuel for over 30 days, we recommend you add Handy Parts Sure-Start fuel stabilizer to fresh fuel after purchasing. Sure-Start cannot reconstitute stale fuel.

Storage

When storing your machine for an extended period, we do recommend that you follow the instructions of engine instruction manual.

Always store the fuel in a clean, approved and sealed container. If the container is steel, ensure it is not corroded. If the container is not filled to its recommended capacity, air can accelerate fuel deterioration.

Always store fuel away from direct sunlight, in a dark, cool environment.

Webb **elo**

X-SERIES

INSTRUCTION MANUAL

Your servicing Webb approved dealer will stamp & date the below relevant sections, when the correct service actions have been completed.

PLEASE ENSURE THE SERVICE BOOK IS AVAILABLE FOR THE DEALER, DURING SERVICE WORK.

1st Service

This must be stamped by an approved service dealer to qualify for a free second year warranty.

(Excluding the Webb Electric Handheld machines)

12 Months


Date

24 Months


Date

36 Months


Date

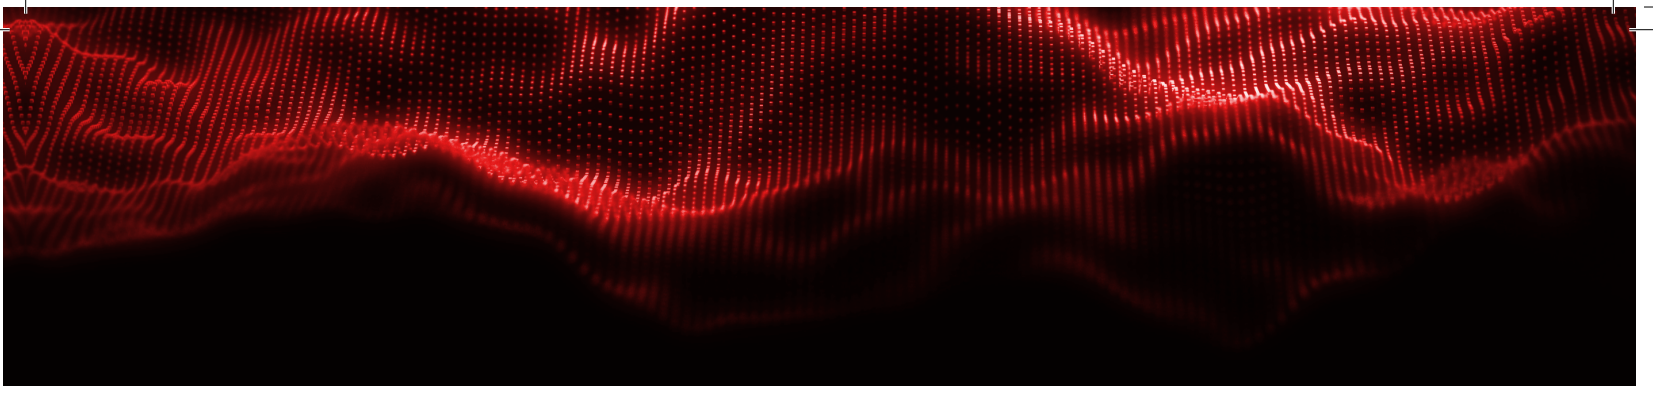


48 Months

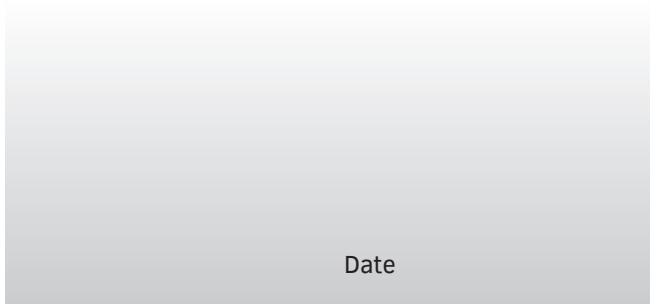


60 Months

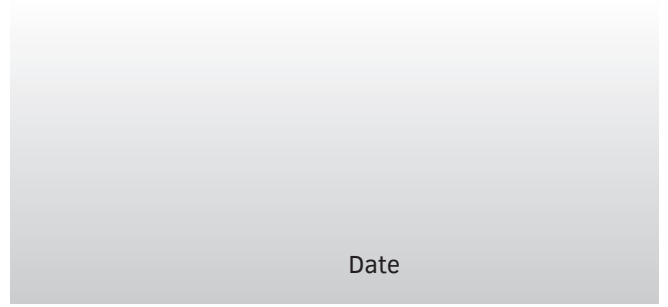


72 Months

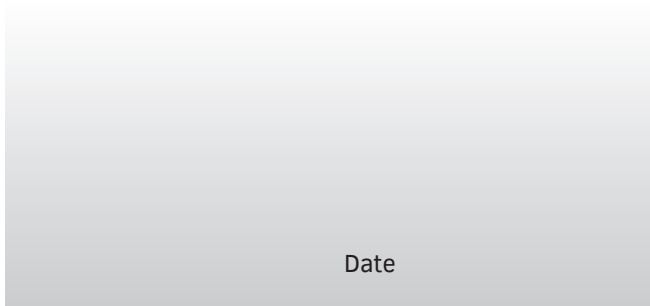


84 Months

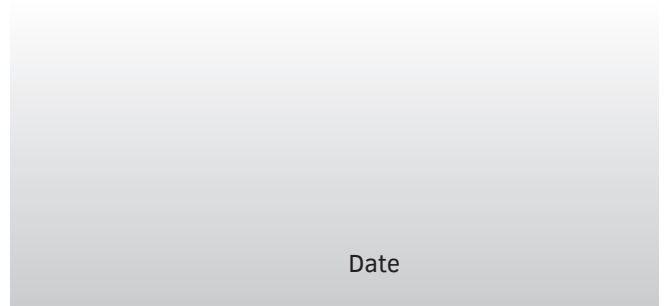


96 Months

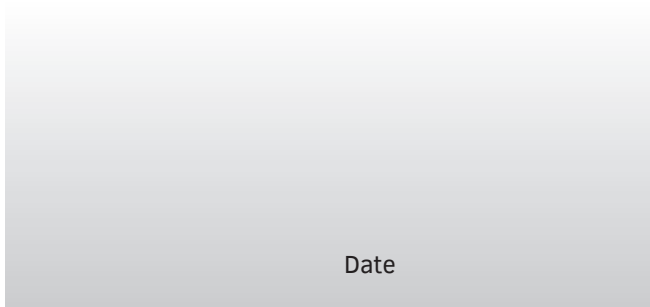


108 Months

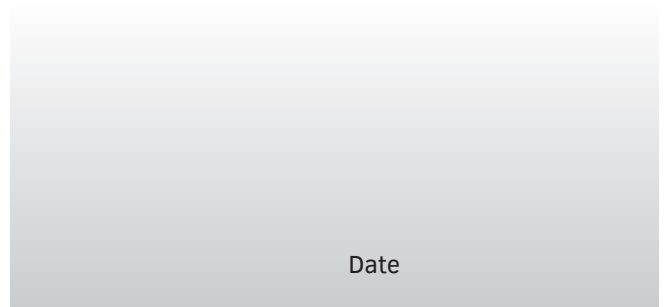

120 Months

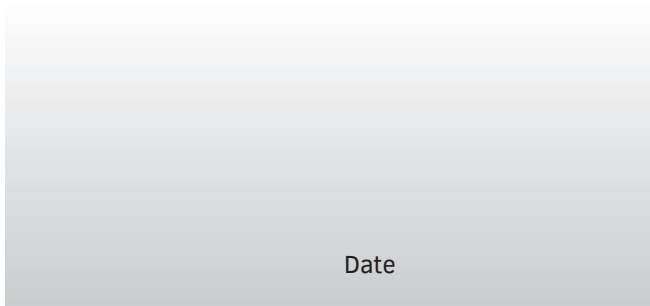

132 Months

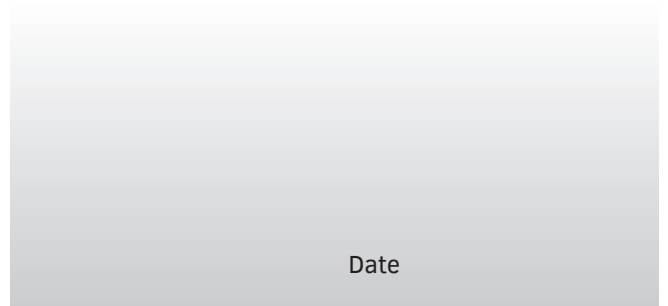



X-SERIES

INSTRUCTION MANUAL

If you have registered online, this form is not necessary.
PLEASE POST THIS COPY TO THE ADDRESS OVERLEAF

Product Information (* Compulsory)

*Model No:	
*Product No:	
*Serial No:	
*Date of Purchase:	

Personal Information (* Compulsory)

*Title		*Forename		*Surname	
*House Number		*House Name			
*Address 1					
*Address 2					
*Town					
*County					
*Postcode					
Home Tel				Mobile Tel	
Email					

Age	18 to 25	26 to 35	36 to 45	46 to 60	61 to 80	81 & over
*Usage	Domestic Use		Commercial/Professional/Hire Use			

*Dealer Stamp (if available)



*Selling Retailer (If dealer stamp not available)

*Dealer Name	
*Dealer Address	
*Date of Purchase	

Webb Lawnmowers privacy commitment to machine owners.

The information supplied, helps us to improve the products & services we provide, including information that we believe is relevant to your and/or your machine. We value your trust by giving us this information about yourself and we are committed to protecting your privacy.

Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding **PRODUCT RECALLS** specific to your machine. Please advise how you wish to be contacted for this specific reason only:

Post Telephone Email

From time to time Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding our products, services, offers or just opinions, which may be used for marketing, research or analysis purposes.

If you wish to be contacted by any of the following methods, please tick the relevant boxes:

Post Telephone Email

You may give Webb Lawnmowers notice in writing at any time that you no longer wish to receive direct marketing communications

Webb[®] **eco**

X-SERIES

Service & Support: cs@webbgardenpower.co.uk

Webb, Murdock Road, Dorcan
Swindon, Wiltshire SN3 5HY

New cordless garden machinery range from

Webb[®]

ADVANCED 40V BATTERY TECHNOLOGY