

Webb **eco**

X-SERIES

WEV20X2BVB/WEV20X2BVB4X

40V CORDLESS BRUSHLESS BLOW VACUUM

Product Number: 1938383001

en - ORIGINAL INSTRUCTIONS

ASSEMBLY REQUIRED
MINIMUM TWO PERSONS

Service & Support: 01793 333212

Before use please read & understand this manual; paying particular attention to the safety instructions before use.
Incorrect use of the product could put the operator or machine in danger.

Whilst every effort has been made to ensure the accuracy of information contained in this manual, our policy of continuous improvement determines the right to make modifications without prior warning.
Images are used for illustration purposes only.

ADVANCED 40V BATTERY TECHNOLOGY

The logo for Webb eco, with 'Webb' in white and 'eco' in green, both inside a white rounded rectangle.

X-SERIES

INSTRUCTION MANUAL

Copyright Notice

Copyright © Handy Distribution

Permission is granted to reproduce this publication for personal & educational use only.

Commercial copying, redistribution, hiring, or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Handy Distribution.

In all cases this copyright notice must remain intact.



CONTENTS

SPECIFICATION

IMPORTANT INFORMATION

SAFETY INSTRUCTIONS

KNOW YOUR MACHINE

ASSEMBLY

BATTERY & CHARGER

OPERATION

CLEANING, MAINTENANCE & STORAGE

TROUBLE SHOOTING

PARTS LIST

DECLARATION OF CONFORMITY

ASSEMBLY IS REQUIRED

- This product requires assembly before use.
- See “Assembly” section for instructions.
- Inspect all components closely upon receipt to make sure no items are missing or damaged.



WARNING

Read this instruction manual carefully before operating this machine. Make sure that you are familiar with the controls and properly operate the machine. Following these instructions can reduce the risk of personal injury.



SPECIFICATION

The manufacturer reserves the right to change the product specification and livery according to continued product improvements.

| TOOL | |
|------------------------------|---|
| Model | WEV20X2BVBARE/WEV20X2BVB4X |
| Product Number | 1938383001 |
| Rated Voltage | 36VDC – Max: 40VDC |
| RPM | 6000-17000 min ⁻¹ |
| Maximum Air Speed | 150 mph (250 km/h) |
| Maximum Air Flow | 700 m ³ h |
| Collector Capacity | 45 L |
| Mulch Ratio | 12:1 |
| Run Time (2x20v 4Ah) | Up to 240 min on lowest speed |
| Protection | Class III - IPX0 |
| Guaranteed Sound Power Level | 100.0 dB(A) - (K = 3 dB(A)) |
| Vibration ahV | <1.69 m/s ² - (K = 1.5 m/s) |
| CHARGER | |
| Model No. | WEV20X265WCHARGER |
| Product No. | 1938389001 |
| Rating | input: 240V 50/60Hz Type C1 output: 20V – 3.25 A Type C1+Type C2 output: 20V 2.3+1A |
| Protection | IPX0 |
| Charging Time | 1x20v 4Ah Battery = 80 min 2x20v 4Ah Battery = 160 min |
| BATTERY | |
| Model No. | WEV20B4XSERIES |
| Product No. | 1938390001 |
| Technical data | 20V 4Ah 80Wh |
| Recommended Operating Temp | 0-40°C |
| Recommended Storage Temp | 0-40°C |
| Recommended Charging Tep | Charge as instructed in the manual |




WARNING

Only use authorised batteries and chargers.
Use of other branded batteries and chargers may cause injury and/or fire.

NOTE: WEV20X2BVB4X includes the charger and batteries. WEV20X2BVBARE does not include the charger and batteries.

The manufacturer reserves the right to change the product specification and livery according to continued product improvements.

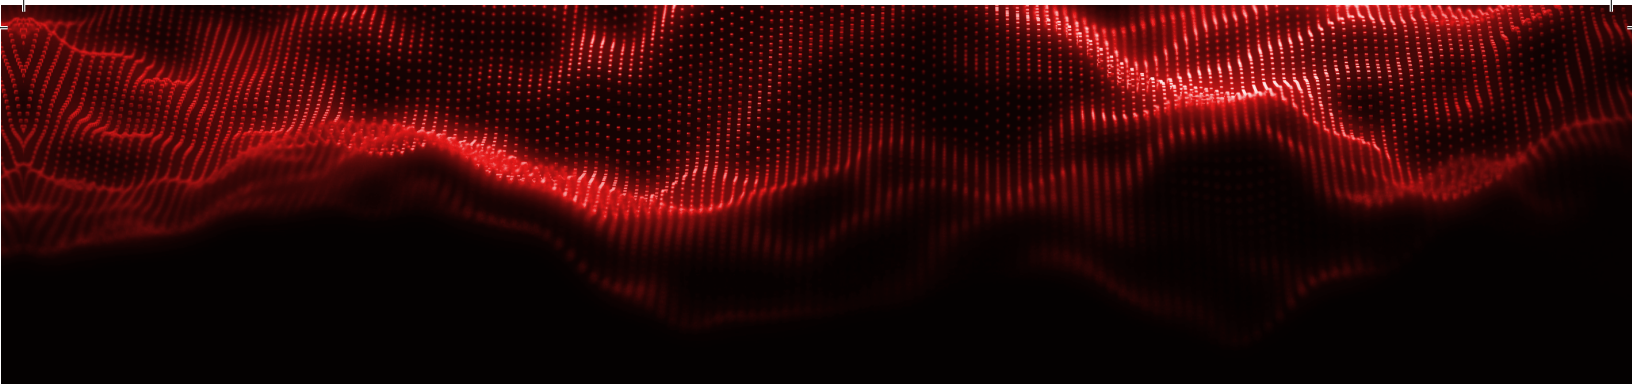

Consistent with our policy of continuous improvement, The Handy reserves the right to change the design and configuration of any of its products without notice or obligation. Therefore, please treat the text and images in this manual for illustrative purposes only. They may in no case serve as a basis for any legal claim. **If you require any assistance with regards to the contents or operation of your machine, please contact us: Tel: 01793 333212 - Email: cs@webbgardenpower.co.uk**
Opening Hours Weekdays: 8:00am - 5:00pm (CLOSED WEEKENDS, BANK HOLIDAYS & COMPANY CLOSURES)

IMPORTANT INFORMATION



WARNING

Read this instruction manual carefully before operating this machine. Make sure that you are familiar with the controls and properly operate the machine. Following these instructions can reduce the risk of fire, electric shock and personal injury.

INTENDED USAGE

The basic version of the equipment is a battery blower & vacuum intended for private use, i.e., for use in home and domestic gardening environments, whose annual operating time generally does not exceed 50 hours. It is designed for the vacuuming and blowing of light and dry materials such as leaves, garden waste, grass, small branches, and small pieces of paper in medium to large sized gardens. Every other use of the machine is a not intended use. Furthermore, a professional use is strictly forbidden. Any use not expressly permitted in this manual may damage the tool or cause danger to the user.

USE CORRECTLY.

The tool is for private use only, whose annual operating time does not exceed 50 hours. Public facilities, sporting facilities and agricultural / forestry applications are excluded. To be used as a domestic garden vacuum and blower.

Please read this entire manual prior to operating the equipment. It instructs you how to safely and easily set up, operate and maintain your machine. Please be sure that you and any other persons who will operate the machine, always carefully follow the recommended safety practices. Failure to do so could result in personal injury or property damage.

During use of the tool the user must arrange for personal protective equipment (PPE) according to the manual and to the named pictograms on the tool. Parts of the intended use are also the details in the manual regarding safety warnings and references for use/maintenance. People/Users who work with the tool or undertake maintenances on it must be familiar with the manual. Only assemble onto the tool, the manufacturers original or approved spare parts.

The user and not the manufacturer are liable for any accident which results from a combination of incorrect intended use or an incorrect construction on the machine.

The chainsaw is only intended for use outdoors.

IF NOT USED PROPERLY THIS MACHINE CAN BE DANGEROUS!

This machine can cause serious injury to the operator and others; the warning and safety instructions must be followed to ensure reasonable safety and efficiency in using this product. The operator is responsible for following the warning and safety instructions in this manual and on the machine. Never use the product unless the components are correctly positioned and operational.

TRAINING

Read the instructions carefully: Be familiar with the controls and the proper use of the equipment. Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the age of the operator. Keep in mind that the operator or user is responsible for accidents or hazards involving the machine that occur to other people or their property.

Webb **eco**

X-SERIES

INSTRUCTION MANUAL

TO THE OWNER

All information in this manual is relative to the most recent product information available at the time of printing. Review this manual frequently to familiarise yourself with the machine, its features and operation. Please be aware that this Instruction Manual may cover a range of product specifications for various models. Characteristics and features discussed and/or illustrated in this manual may not be applicable or exact to all models.

We reserve the right to change product specifications, design, and equipment without notice and without incurring obligation. If you have any problems or questions concerning the machine, phone your local authorised Webb service dealer or ourselves. Throughout this manual, all references to *right* and *left* side of the machine are observed from the operating position.



WARNING












The operator or user is responsible for accidents and injury or damage to third parties.










The equipment is allowed to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user/operator and not the manufacturer will be liable for any damage or injuries of any kind resulting from such misuse.

Please note that our equipment has not been designed for use in commercial, hire, trade, or industrial applications. Our warranty will be 90 days from the original date of sale for commercial, hire, trade, or industrial businesses or for equivalent purposes.









SAFETY INSTRUCTIONS


Read and understand the owner's manual and labels affixed to the machine. Learn its application and limitations as well as the specific potential hazards. Retain these instructions for future reference. The operator is responsible for following the warnings & instructions in this manual and on the product.

| | | | |
|---|--|--|---|
|  | <p>Read & understand operator's manual before using the machine. Failure to follow instructions could result in death or serious injury.</p> |  | <p>Check your machine before turning it on. Keep guards in place & in working order. Frequently check to see that foreign objects are removed from the working area before turning it on. Replace damaged, missing or failed parts before using it.</p> |
|  | <p>Keep all bystanders & animals at least 15 metres away from the machine during operation. Thrown objects can ricochet and result in personal injury or property damage. If approached, stop the machine immediately.</p> |  | <p>When working with the tool:</p> <ul style="list-style-type: none"> • Wear head protection. • Wear eye protection. • Wear ear protection. • Wear protective gloves • Wear respiratory protection. • Wear sturdy shoes |
|  | <p>For the charger: Remove plug from the mains immediately if the cable is damaged or cut. Only re-charge the battery pack indoors</p> |  | <p>Do not expose to rain or damp conditions</p> |
|  | <p>DANGER Keep sufficient distance away from electrical power lines. Use in dry conditions.</p> |  | <p>Risk of injury caused by rotating machine parts</p> |
|  | <p>Risk of injury caused by rotating machine parts!</p> | | |
|  | <p>Do not dispose of battery packs in rivers or immerse in water.</p> |  | <p>Do not dispose of battery packs in fire. They will explode and cause injury.</p> |

| | | | |
|--|--|--|---|
|  | Do not dispose of a battery pack with the household waste! |  | Use and store the battery within an temperature below 122°F(50°C). |
|  | Do not disassemble, crush, heat above 212°F(100°C); Never expose the battery to microwaves or high pressures. |  | Safety alert symbol. Used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury. |
|  DANGER | Indicates an imminently hazardous situation which, if not avoided, will result in serious injury. |  WARNING | Indicates a potentially hazardous situation which, if not avoided, could result in serious injury. |
|  CAUTION | Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. | CAUTION | Used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, may result in property damage. |
|  | Sound Power Level (Image used for illustration purposes only, check machine and Declaration of Conformity for actual reading) |  Li-ion | Battery Li-ion: Recyclable |

 CHARGER

| | | | |
|---|---|--|--|
|  | Read & understand operator's manual before using the machine. Failure to follow instructions could result in death or serious injury. Please keep in a safe place for future reference. |  WARNING | Indicates a potentially hazardous situation which, if not avoided, could result in serious injury. |
|  | For indoor use only. |  | Double Insulation |
|  | Fuse |  | Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice. |
|  | Positive Terminal |  | Negative Terminal |

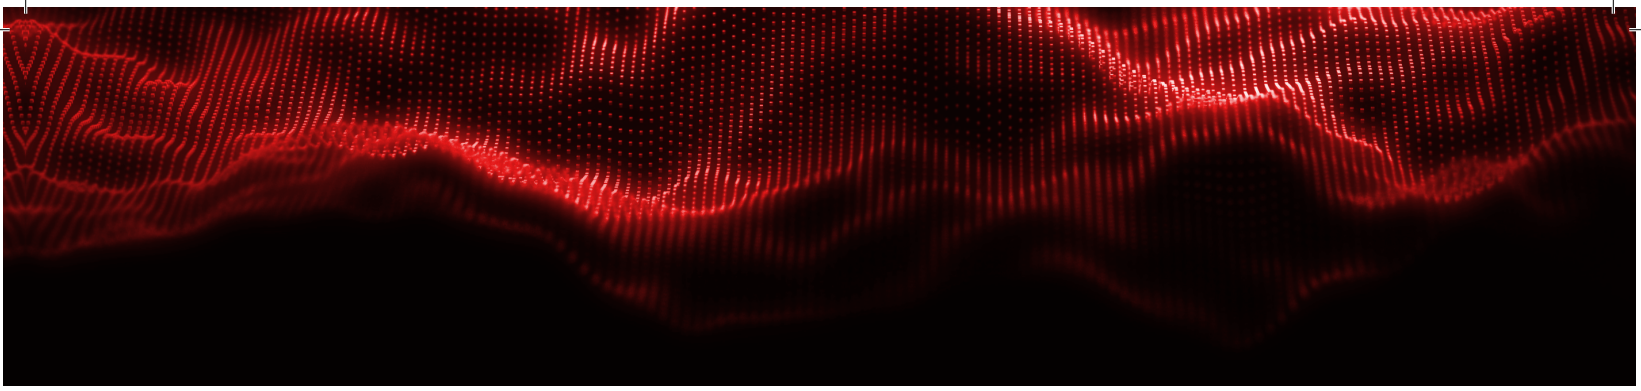

NOISE

Tested to fulfill all relevant provisions of Noise Emission Directive 2000/14/EC amended by 2005/88/EC:
Guaranteed Sound Power Level (L_{WA}): 100.0 dB(A)

NOTE: The declared noise emission value(s) has been measured in accordance with a standard test method and may be used for comparing one tool with another.

NOTE: The declared noise emission value(s) may also be used in a preliminary assessment of exposure.



WARNING

Wear ear protection

The noise emission during actual use of the power tool can differ from the declared value(s) depending on the ways in which the tool is used especially what kind of workpiece is processed.

Be sure to identify safety measures to protect the operators that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time).

VIBRATION

The vibration total value (tri-axial vector sum) determined according to EN 62841-1, EN 62841-4-2:
Vibration emission (a_h): $< 1.69 \text{ m/s}^2$ - Uncertainty (K): 1.5 m/s^2 .

NOTE: The declared vibration total value(s) has been measured in accordance with a standard test method and may be used for comparing one tool with another.

NOTE: The declared vibration total value(s) may also be used in a preliminary assessment of exposure.



WARNING

The vibration emission during actual use of the power tool can differ from the declared value(s) depending on the ways in which the tool is used especially what kind of workpiece is processed.

Be sure to identify safety measures to protect the operators that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time).

GENERAL SAFETY RULES



WARNING

Before you put the machine into operation, you must read this instruction manual.

When using this machine, observe the following safety instructions to remove the risk of personal injury or material damage. Please also observe the special safety instructions in the respective chapters. Where applicable, follow the legal directives or regulations for the prevention of accidents in relation to the use of this machine.

When using electric/battery tools, basic safety precautions, including the following, should always be followed to reduce the risk of serious personal injury and/or damage to the unit.

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference. The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

WORK AREA SAFETY

- **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

ELECTRICAL SAFETY


- **Charger plugs must match the outlet. Never modify the plug in any way. Do not use adaptor plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- **Do not expose chargers to rain/wet conditions.** Water entering a charger will increase the risk of electric shock.
- **Do not abuse the charger cable. Never use the charger cable for carrying, pulling or unplugging the charger.** Keep cable away from heat, oil, sharp edges or moving parts. Damaged or entangled cables increase the risk of electric shock.
- **When operating a charger outdoors, use an extension cable suitable for outdoor use.** Use of a charger suitable for outdoor use reduces the risk of electric shock.
- **If operating a charger in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

PERSONAL SAFETY

- **Stay alert, watch what you are doing and use common sense when operating a power tool.** Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes or hearing protection for conditions will reduce personal injuries.
- **Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

POWER TOOL USE AND CARE

- **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- **Disconnect the plug from the power source and/or the battery from the power tool before making any adjustments, changing accessories, or storing.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- **Store idle power tools out of the reach of children, do not allow persons unfamiliar with the power tool or instructions to operate the power tool.** They are dangerous in the hands of untrained users.
- **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and**

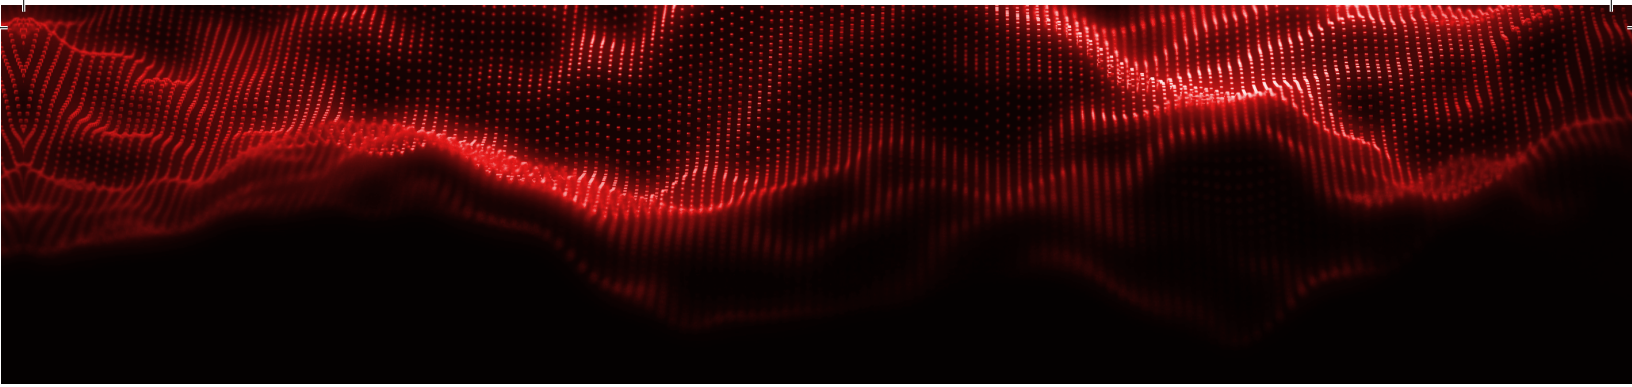

any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

- **Keep cutting tools sharp and clean.** Properly maintained tools with sharp cutting edges are less likely to bind and are easier to control.
- **Use the power tool and any accessories in accordance with these instructions, considering the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

BATTERY TOOL USE AND CARE

- **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- **Use power tools only with specifically designated batteries.** Use of any other battery may create a risk of injury and fire.
- **When battery is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- **Under abusive conditions, liquid may be ejected from the battery; avoid contact.** If contact accidentally occurs, flush body air with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

SERVICE

- **Have your power tool serviced by an approved Webb service dealer, a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

VIBRATION AND NOISE REDUCTION



CAUTION

Risk of injury due to vibrations!

Vibrations may, for persons with circulation problems, cause damage to blood vessels and/or nerves. If you notice any of the following symptoms, stop working immediately and consult a doctor. Numbness of body parts, loss of sense of feeling, itching, pins and needles, pain, changes in skin colour.

The vibration values specified in the technical data represent the main uses of the device. The actual existing vibrations during use may deviate from these because of the following factors:

- Incorrect use of the product.
- Unsuitable tools inserted.
- Unsuitable material.
- Insufficient maintenance.

You can reduce the risks by following the tips below:

- Maintain the device in accordance with the instructions in the operating instructions.
- Avoid working at low temperatures.
- When it is cold, make sure your body and hands, are kept warm.
- Take regular breaks and move your hands at the same time to promote circulation.

HANDLING RECHARGEABLE DEVICES

- **Danger of fire!** Only use batteries approved by the manufacturer. Only use chargers approved by the manufacturer. Keep batteries away from metal objects that could cause short circuiting when not in use. There is a risk of injuries and fire.
- Prior to connecting the charger, verify that the power supply connection corresponds with the connecting data of the device.
- The fuse must be a residual current circuit breaker with a measured residual current of no more than 30 mA.
- Only charge the battery in enclosed rooms.
- Ensure that the device is switched off before installing the battery.
- Fluid can escape from the battery when used incorrectly. Battery fluid may result in skin irritations and burns. Avoid contact! In the event of accidental contact, rinse thoroughly with water. Immediately seek the aid of a physician in the event of eye contact.

TOOL SPECIFIC SAFETY INSTRUCTIONS

- When working with the tool, always maintain a safe distance and natural body position.
- Always hold the tool firmly in both hands.
- Before starting to work, check the working area for animals and objects. Remove all objects that may be slung away or become jammed in the cutting tool.
- Do not attempt to remove materials to be vacuumed or to hold material already vacuumed when the motor is running. Only remove any jammed material to be vacuumed when the tool is switched off.
- No other persons or animals may be present within an area of 15m around the vacuuming area, as they may otherwise be injured by objects being slung away.
- Only work in good light and vision conditions.
- Do not work above head height! Do not lean forward or back!
- The operator must wear tightly fitting clothing. Avoid wearing loose clothing. Wear sturdy shoes and long trousers.
- Take care when walking backwards. Danger of stumbling!
- Never work in the rain.
- Vacuuming, blowing of heavy materials such as metal, stones, branches, fir cones or broken glass is expressly forbidden.
- Keep all parts of your body away from the vacuum opening.
- When working with the device, ensure that there is sufficient lighting.
- Always wear the required personal protective equipment.
- Be careful of the dust you have raised and flying objects. Especially dangerous is the rebound effect on walls when blowing.
- Do not direct the device at people or animals when vacuuming or blowing.
- Before starting to blow, loosen foreign bodies with a rake or broom.
- The machine may only be operated during sensible hours – not too early in the morning or too late in the evening, as it may disturb other people.
- The operation times listed by the local authorities must be adhered to.
- The whole blower nozzle must be used so that the airstream can work close to the ground.
- Heed children, pets, open windows, and blow the foreign bodies safely away.
- Remember that moving parts may also be located behind ventilation and venting slots.
- Symbols which are on your tool may not be removed or covered. Notes on the device which are no longer legible must be replaced immediately.

EMERGENCY

Familiarise yourself with the use of this product by means of this instruction manual. Memorise the safety directions and follow them to the letter. This will help to prevent risks and hazards.

- Always be alert when using this product, so that you can recognise and handle risks early. Fast intervention can prevent serious injury and damage to property.
- Switch off the product and remove the battery pack if there are malfunctions. Have the product checked by an Approved Webb Service Dealer, qualified professional and repaired, if necessary, before you operate it again.



WARNING

**This product produces an electromagnetic field during operation! This field may under some circumstances interfere with active or passive medical implants!
To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their doctor and the medical implant manufacturer before operating this product!**



WARNING

Injuries may be caused, or aggravated, by prolonged use of a tool. When using any tool for prolonged periods, ensure you take regular breaks.



DANGER OF FIRE OR EXPLOSION

**Never charge batteries in the vicinity of acids or easily flammable materials.
Charge battery only at a temperature between 10 - 45 °C. After a heavy load, first allow the battery to cool.
Protect the device from direct exposure to heat and fire.
Do not place on heating units or expose to strong sunlight for an extended period.
Operate the device only at temperatures between 0°C to 45°C.**



RISK OF SHORT CIRCUIT



**For disposal, transport or storage, pack the battery in a plastic bag or a cardboard box, or isolate the contacts with adhesive tape.
Do not open the battery.**

KNOW YOUR MACHINE

NOTE: WEV20X2BVB4X includes the charger and batteries. WEV20X2BVBARE does not include the charger and batteries.

| | | |
|-------------------------|--------------------------|---|
| 1. Blower Tube | 2. Main Handle | 3. Suction Cover |
| 4. Vacuum Tube | 5. Adjustable Top Handle | 6. Collection Bag |
| 7. Battery Indicator | 8. Air Speed Indicator | 9. Turbo Button |
| 10. On/Off Button | 11. Speed Regulator | 12. 20v Battery |
| 13. Indicator Lights | 14. Lock Button | 15. Battery Lock |
| 16. Charger Cable Input | 17. Charger – BS 3-Pin | 18. Charger - Type C x2 & USB A Outlets |



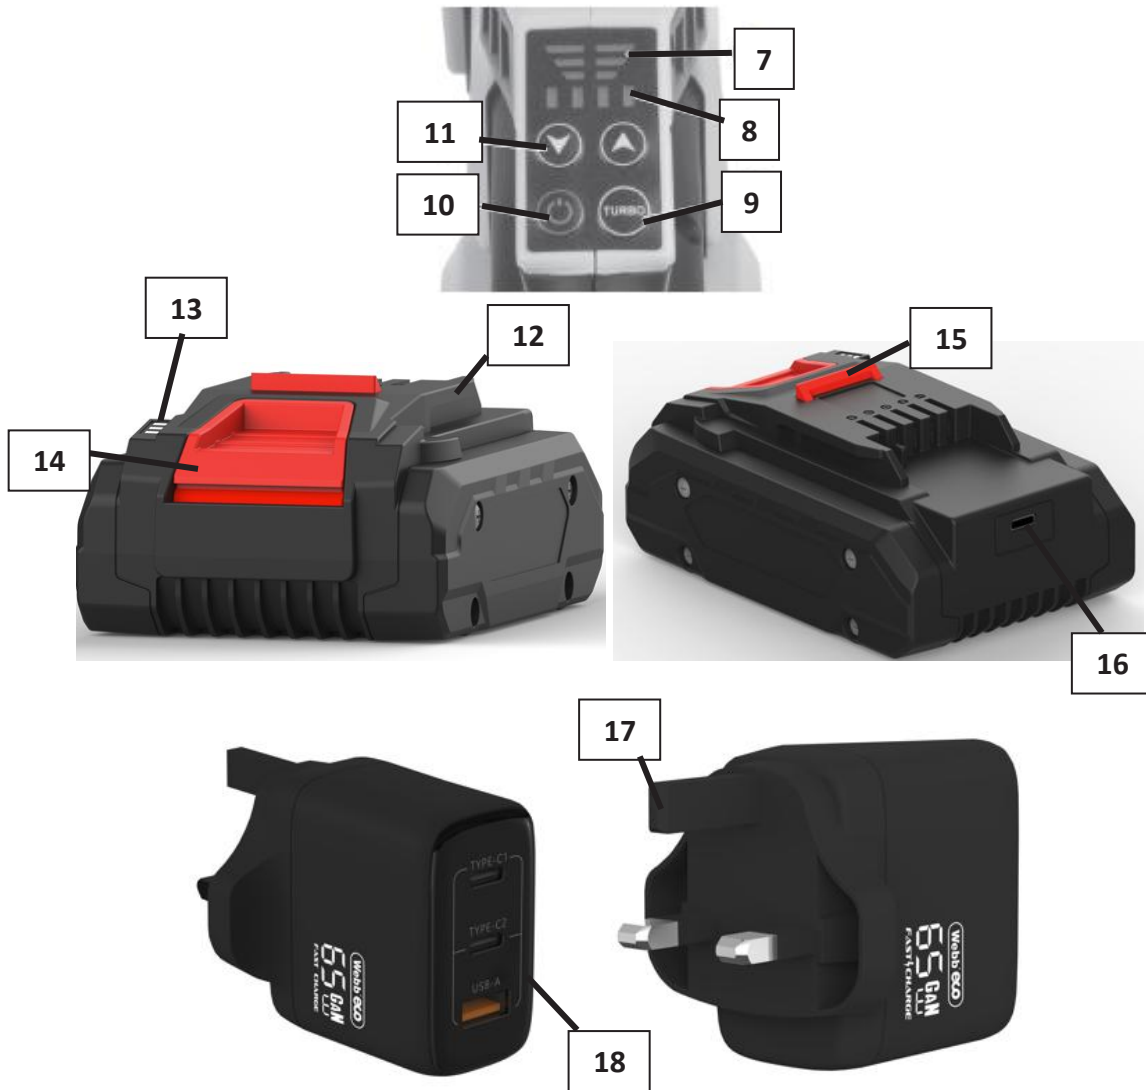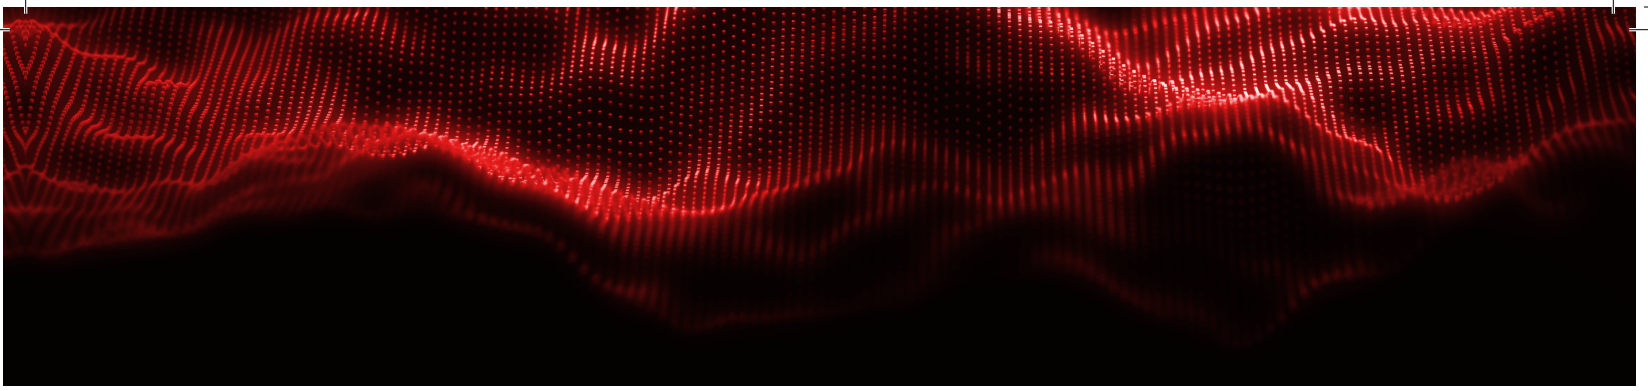

ASSEMBLY



WARNING

In the unlikely event your machine is damaged prior to assembly or operation, do not attempt to operate the machine. Contact your retailer for assistance.

Remove the machine and contents from the carton. Be sure the carton is empty before discarding. If you require assistance regarding the contents of the machine, contact us:

TEL: 01793 333212 - OPTION 2

EMAIL: CS@WEBBGARDENPOWER.CO.UK

MONDAY TO FRIDAY – 08:00 TO 17:00 - (CLOSED WEEKENDS, BANK HOLIDAYS & BUSINESS CLOSURES)

If you find that parts are missing or show damage do not use the product but contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.

Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.

NOTE: WEV20X2BVB4X includes the charger and batteries. WEV20X2BVBARE does not include the charger and batteries.

X-SERIES

INSTRUCTION MANUAL



WARNING

Wear protective gloves for this assembly work and always lay the product on a flat and stable surface while assembling. Follow the assembly instructions step-by-step and use the pictures provided as a visual guide to easily assemble the product.

Do not insert the battery, before the power tool is completely assembled or adjusted.

BLOWER ASSEMBLY



WARNING


RISK OF INJURY!

Never use the power tool with only one section of the tube assembly attached.

1. Assembly the three sections of the blow tube (1) together. Snap them securely together.
2. Push the blow tube assembly (1) onto the blower exit on the power unit, until the release button (A) engages.
3. Close the suction cover (3).

NOTE: The power tool cannot be switched on if the suction cover (3) is not completely closed.

4. To remove the blower tube, press the release button (A) and pull the nozzle assembly away from the tool.

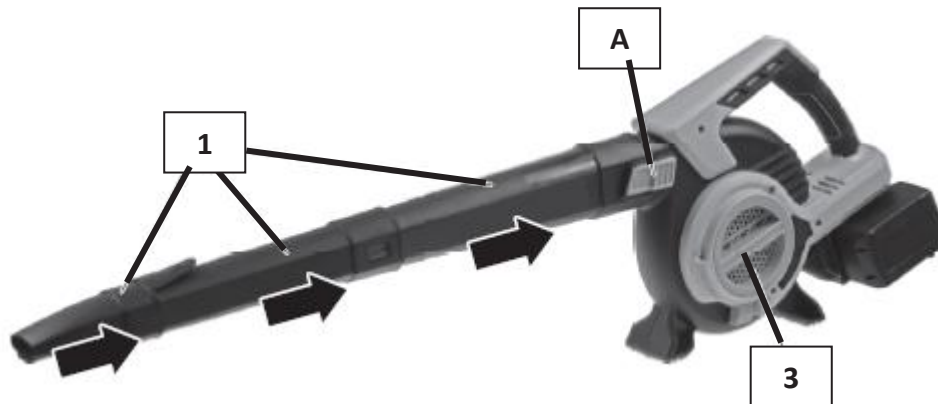

VACUUM ASSEMBLY




WARNING
RISK OF INJURY!

Never use the power tool with only one section of the tube assembly attached.

NOTE: RISK OF DAMAGE TO THE TOOL! After the three-piece suction pipe has been joined together, it must not be disassembled again.

1. Join the three sections of the suction tube (4) together. Ensure they are engaged fully.
2. Push the collection bag (6) assembly onto the blower opening, until the release button (A) engages.
3. Press the release button anti-clockwise (B) and open the cover of the intake opening (3).
4. Insert vacuum tube assembly to intake opening (3) of the power unit, until the release button (B) engages.

NOTE: The vacuum tube assembly must be fully engaged to the power tool. If fitted incorrectly, the power tool will not turn on.

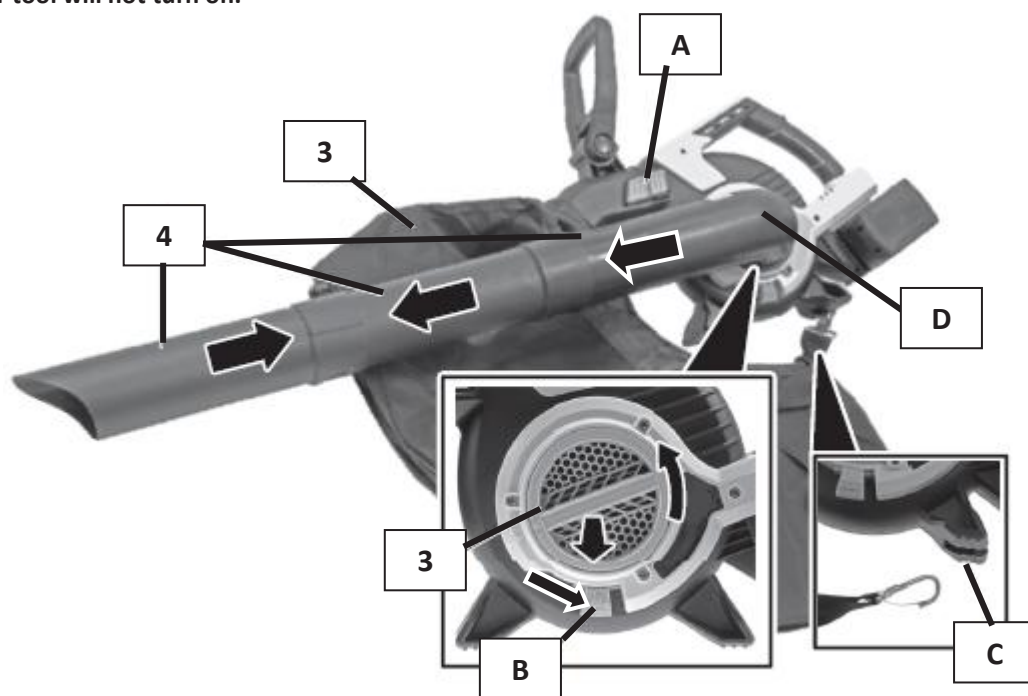

5. Hook the collection bag onto the tool eyelet (C).
6. To remove the collection bag (3), press the release button (A) and pull off the collection bag.
7. To remove the vacuum tube assembly, press the release button (B) and pull the tub assembly away from the power tool.

X-SERIES

INSTRUCTION MANUAL

BATTERY & CHARGER



WARNING

Use only authorised Webb 20v lithium-ion batteries.

CHARGING BATTERY



CAUTION

Use only authorised Webb 20v Lithium-ion batteries.

Batteries are shipped in a low charge condition to prevent possible problems. Therefore, you should charge them prior to use.

NOTE: Batteries will not reach full charge the first time they are charged. Allow several cycles (operating tool followed by recharging batteries) for them to fully charge.

TO CHARGE

1. Use this charger only with Authorised Webb 20v Lithium-ion batteries.
2. Never attempt to charge non-rechargeable batteries.
3. Make sure the power supply is normal UK home voltage, 230 volts, 50 Hz, AC only.
4. Connect the charger to the power supply. The charger light will illuminate GREEN noting that the power is on.
5. Slide the battery onto charger.
6. Press down on battery to be sure contacts on the battery engage correctly with the charger contacts.
7. When the battery and charger are connected correctly, the charger light will be a flickering RED to indicate the battery is charging.
8. A constant GREEN light indicates the battery is fully charged.
9. A minimum charge time of 80 minutes (1x 4Ah battery) or 160 minutes (2x 4Ah battery) is required to recharge a completely discharged battery.
10. The battery will become slightly warm to the touch while charging. This is normal and does not indicate a problem.
11. DO NOT place a charger in an area of extreme heat or cold. It will work best if stored and operated in normal room temperature.
12. Frequently monitor the charger and battery while connected.
13. When the battery is fully charged, unplug your charger from power supply and remove the battery from the charger.
14. Allow the battery to cool completely before attempting to use it.

NOTE: If the battery does not fit properly, disconnect it and confirm that the battery is the correct model for the charger supplied. Do not charge any other battery or any battery that does not securely fit the charger.



CAUTION

**When in continuous operation in a tool, the battery will become hot!
Allow the battery to cool down to room temperature for approximately 30 minutes, before attempting to recharge. This will extend the life of your batteries.**

INSTALLING / REMOVING BATTERY



CAUTION

Always switch off the machine before installing or removing the battery.
Hold the machine and the battery firmly when installing / removing battery. Failure to hold the machine and battery firmly may cause them to slip out your hands and result in damage to the machine, battery or the operator.

Always install the battery fully until the battery lock cannot be seen. If not, it may accidentally fall out of the machine, causing unreparable damage or cause injury to you or bystanders.

Do not install the battery forcibly. If the battery does not slide in easily, it is not being inserted correctly.

INSTALL BATTERY

1. To install the battery, ensure the battery release button of the battery is at the top and the base of the battery is facing the front of the machine.
2. Align the battery with the groove in the battery housing and slide it into place. Insert it all the way until it locks in place with an audible click.

REMOVE BATTERY

To remove the battery.

1. Press the battery release button and remove the battery.
2. Slide out the battery from the tool.

BATTERY RELEASE
BUTTON



MACHINE & BATTERY PROTECTION

The tool is equipped with a tool or battery protection system. The system can automatically cut off the power supply to the motor to extend the lifespan of the tool and battery. If the tool or battery is in one of the following conditions, the tool will automatically stop during operation.

OVERLOAD PROTECTION

When a tool or battery operates in a manner that causes it to produce an abnormally high current, the tool automatically shuts down. In this case, shut down the tool and remove the factors that caused the overload. Then turn on the tool to restart.

OVERHEAT PROTECTION

When the tool overheats, it will automatically stop. Let the tool cool down for a minimum period of 15 minutes before attempting to restart. When the battery overheats, the green light will blink and stop the power supply to the tool. The tool automatically stops and restarts after cooling of the battery.

UNDER VOLTAGE PROTECTION

When the battery capacity is low, the tool will automatically stop. If the tool does not start, please remove the battery, and then charge the battery to its full capacity.

X-SERIES

INSTRUCTION MANUAL

PROTECTION AGAINST OTHER CAUSES

Protection system is also designed for other causes that could damage the tool and allows it to stop automatically. Take all the following steps to clear the causes when the tool has been brought to a temporary halt or stop in operation.


- Turn the tool off and then turn it on again to restart.
- Charge the battery(ies) or replace it/them with recharged battery(ies).
- Let the tool and battery(ies) cool down.

If no improvement can be found by restoring the protection system, contact Webb Garden Power.

NOTE: The timing, at which the battery indicator lights illuminate, depends on the temperature at the work area and the battery conditions.

BATTERY INDICATOR

Press the check Red release button on the battery to indicate the remaining battery capacity. The LED indicator lights will illuminate for a few seconds.

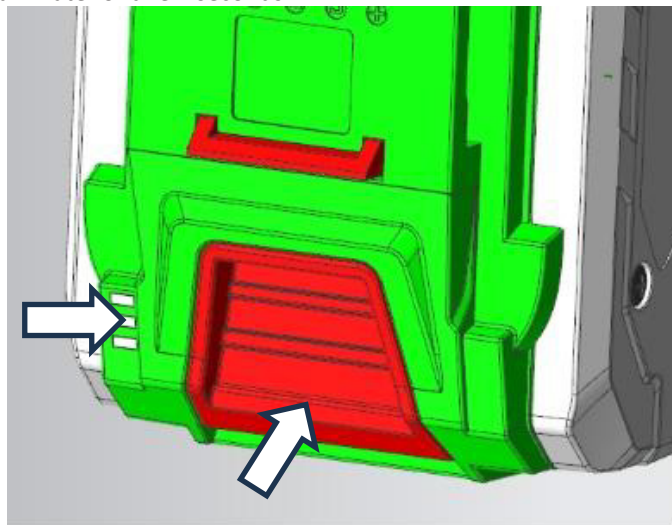

| LED LIGHTS | BATTERY CAPACITY |
|----------------|--|
| LED 1,2 & 3 on | Full charged (66-100%) |
| LED 1 & 2 on | Battery is 33%-66% charged |
| LED 1 on | Battery is depleted (0%-33%). Charge the battery. |

NOTE: Depending on the conditions of use and the ambient temperature, the indication may differ slightly from the actual capacity.

NOTE: The green indicator light will blink when the battery protection system works.

OPERATION



WARNING

In the unlikely event your machine is damaged prior to assembly or operation, do not attempt to operate the machine. Contact your retailer for assistance.



DANGER


Risk of injury!

The device may only be put into operation if there are no defects. If a part is defective, it must be replaced before the device is used again.

Before starting work check the area and remove all objects which may be kicked up by the unit.

Check the safety equipment and the safe condition of the power tool.

- Check all parts to make sure they fit tightly.
- Check whether there are visible defects, broken parts, cracks etc.

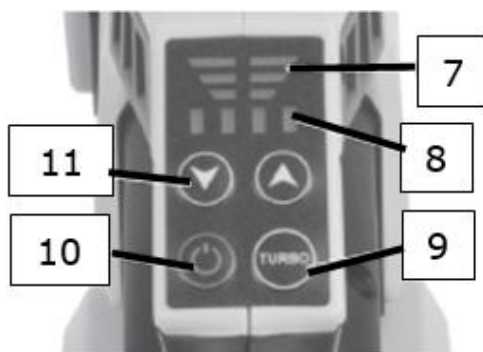

SWITCHING ON / OFF

- To switch ON the power tool, press the on/off button (10)
- To switch OFF the power tool, press the on/off button (10)

NOTE: Please adhere to local rules regarding periods of days for operation.

SETTING THE BLOWER OR VACUUM SPEED

NOTE: A lower power level is sufficient for many jobs. We recommend starting the work in a low setting and increasing the power accordingly if necessary. A lower setting can significantly reduce the volume.

- Set the speed regulator (11) to the required speed.

TURBO

- The turbo button (9) to increase the airflow is only used when leaves and litter have become trapped or when the normal airflow is insufficient. In most cases, the normal airflow is sufficient. Increasing the airflow is mainly used for short, quick bursts.

X-SERIES

INSTRUCTION MANUAL

CLEANING, MAINTENANCE & STORAGE



WARNING

Before undertaking any work on the machine (e.g. maintenance, changing the tool, etc.) as well as during its transport and storage, ensure the safety button is in the off position. There is a danger of injury when the On/Off trigger is unintentionally actuated.



WARNING

Failure to identify and replace damaged or worn parts can cause serious personal injury. Inspect the power tool regularly. Regular inspection is the first step to proper maintenance. Follow the guidelines below to maximize safety and satisfaction. Have any damaged or excessively worn parts replaced immediately.



WARNING

Always remove the battery pack and let the product completely cool down before performing cleaning and maintenance work!

Always wear gloves to reduce the risk of injury when operating this unit.

Only perform cleaning and maintenance work according to these instructions! A qualified specialist must perform all further works!

CLEANING



WARNING

Before performing any work, make sure the tool has stopped running.

Ensure the battery is removed.

Always wear protective gloves when using, adjusting or cleaning the machine.

THOROUGHLY CLEAN THE MACHINE AT THE END OF EACH USE.

- Brush off coarse dirt.
- Wipe down the device with a slightly damp cloth.

SUCTION & BLOWER TUBES

- It is advisable to remove the tubes from the machine regularly for cleaning.
- Use soapy water to remove any dirt or grime.

COLLECTION BAG

- Remove the collection bag.
- Shake out the collection bag thoroughly, turn it inside out and brush the bag out.
- You may wash the bag with a very mild detergent **BY HAND**, but ensure it is completely dry before attaching to the machine and use.
- Regularly check the bag for rips, tears or holes and replace immediately if damaged.

CLOGGING

- Remove the vacuum tubes and collector.
- Remove any blockage within the fan housing.
- Reattach the vacuum tubes and collector.
- Restart the machine.
- If the problem continues, contact your local approved Webb service dealer. Any repairs caused by a 3rd party object will not be covered under warranty and any costs incurred are the operator/owner's responsibility.

IMPORTANT

Never clean the tool under running water - and particularly never with high pressure - because of the potential danger to persons and property. Keep your cordless pruner in a dry and frost proof place. Choose a place that children are unable to enter.

MAINTENANCE



DANGER

Never clean the machine in water (especially running water), as there is a risk of personal injury and damage to the shears.



WARNING

There are no user serviceable parts inside the battery. Do not disassemble.

STORAGE

- Remove the battery from the power tool.
- Clean power tool thoroughly as described above.
- Store in a dry place.
- Keep out of reach of children or pets.
- We recommend using the original packaging for storage or covering the product with a suitable cloth or enclosure to protect it against dust.

NOTE: To prolong battery life, never store battery in a completely discharged condition. Make sure the battery is charged once per year or when the battery indicator shows only one light.

TRANSPORT

- Remove battery from the power tool.
- Tools can shift during transport. Ensure the tool is secure and cannot fall or move into contact with people or property.

DISPOSAL

SAFE DISPOSAL OF BATTERIES



Li-ion

Our batteries are designed according to the latest state of technology and optimised for the use in electric tools. Lithium ion cells contain hazardous substances and may therefore not be disposed off with normal household waste. Our batteries are lithium-ion cells and are therefore subject to special disposal regulations. Bring defective batteries to your specialist dealer. Before disposing of the tool, remove the battery. We wish to encourage users to act in an environmentally friendly manner.

DISPOSAL OF THE TOOL



A crossed-out wheellie bin icon means: Batteries and rechargeable batteries, electrical or electronic devices must not be disposed of with household waste. They may contain substances that are harmful to the environment and human health.

Consumers must dispose of waste electrical devices, spent portable batteries and rechargeable batteries separately from household waste at an official collection point to ensure that these items are processed correctly. The product can be returned free of charge in accordance with the legal requirements, for example through a municipal waste disposal company or a dealer.



Batteries, rechargeable batteries and lamps that are not permanently installed in waste electrical equipment and can be removed in a non-destructive way must be removed and disposed of separately before disposal of the equipment. Lithium batteries and rechargeable battery packs of all systems are only to be handed in to the waste collection points in a discharged state. The batteries must always be protected against short circuits by taping off the poles.

All end users are responsible for deleting any personal data stored on waste devices prior to their disposal.

DISPOSAL OF PACKAGING



The packaging consists of cardboard and correspondingly marked plastics that can be recycled.

– Make these materials available for recycling.


TROUBLE SHOOTING

Suspected malfunctions are often due to causes that the users can fix themselves. Therefore, check the product using this section. In most cases the problem can be solved quickly.

| Fault | Cause | Resolution |
|---|---|--|
| Will not start | No mains power (power failure). | Check fuse |
| | Motor or switch defect. | Contact your retailer or approved Webb service dealer. |
| Material is not being vacuumed properly | Suction tubes clogged or blocked. | Switch off, remove batteries and check for blockages. |
| | Collection bag is full | Empty the collection bag. |
| Machine is vibrating abnormally | The fan has become unbalanced due to the impact of a foreign object e.g. a stone or gravel. | The fan needs to be replaced by an approved service dealer. Please note that this will not be covered under the warranty, as the warranty does not cover wear and tear or machines that are damaged by the user. |

PARTS DIAGRAM – WEV20X2BVBARE & WEV20X2BVB4X (1938383001)

NOTE: WEV20X2BVB4X includes the charger and batteries. WEV20X2BVBARE does not include the charger and batteries.

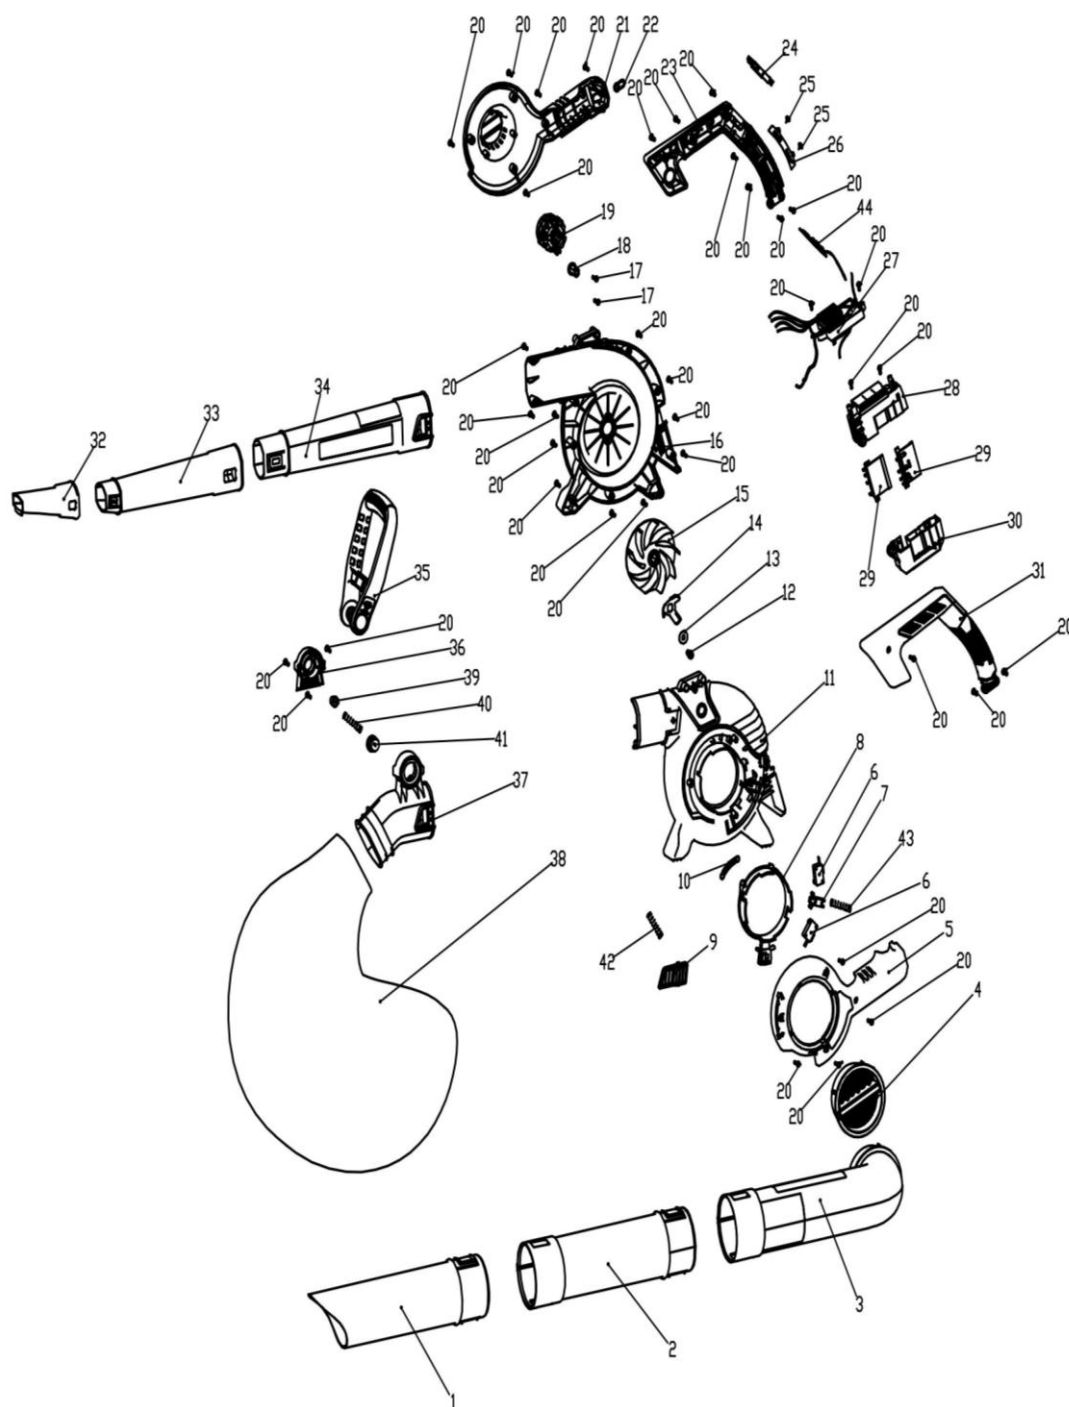

PARTS LIST – WEV20X2BVBARE & WEV20X2BVB4X (1938383001)

NOTE: WEV20X2BVB4X includes the charger and batteries. WEV20X2BVBARE does not include the charger and batteries.

| Item No | Webb Part No. | Webb Description | Qty |
|---------|-----------------------|----------------------------|-----|
| 1 | WE265-2548A50804 | Lower Suction Tube | 1 |
| 2 | WE265-2548A50805 | Mid Suction Tube | 1 |
| 3 | WE265-2548A51202 | Top Suction Tube | 1 |
| 4 | WE265-3188A51201 | Inlet Cover | 1 |
| 5 | WE265-3138A51201 | Left Casing Cover | 1 |
| 6 | WE265-1398J30901 | Microswitch | 2 |
| 7 | WE265-2948A50802 | Push Button Switch | 1 |
| 8 | WE265-1278A51201 | Rotation Circle | 1 |
| 9 | WE265-2938A50801 | Hose Lock Button | 1 |
| 10 | WE265-3458A50801 | Spring | 1 |
| 11 | WE265-3038A51201 | Left Casing | 1 |
| 12 | WE60060520000 | Hex Flange Bolt 6x12 | 1 |
| 13 | WE265-3129A0604R | Flat Washer 6x18x1.5mm | 1 |
| 14 | WE265-1838A50801 | Blade | 1 |
| 15 | WE265-1168A50801 | Fan | 1 |
| 16 | WE265-3038A51202 | Right Casing | 1 |
| 17 | WE03020020051 | Screw M5x12 | 2 |
| 18 | WE265-1988A50801 | Shaft Sleeve | 1 |
| 19 | WE265-1148A50801 | Motor Assembly | 1 |
| 20 | WE135-J0010001590R | Screw ST4x16 | 39 |
| 21 | WE265-3138A51202 | Right Cover | 1 |
| 22 | WE265-4317A21401 | Strap Hook | 1 |
| 23 | WE265-2978A51202 | Right Handle | 1 |
| 24 | WE265-2168A50803 | Panel | 1 |
| 25 | WE265-3131NBCD301001R | Flange Screw ST3x10 | 2 |
| 26 | WE265-2168A50802 | Anti-static Guide Plate | 1 |
| 27 | WE265-3248A51201 | Controller Component | 1 |
| 28 | WE265-2468A51101 | Upper Battery Holder | 1 |
| 29 | WE265-2468A20101 | Battery Base Insert | 2 |
| 30 | WE265-2468A51102 | Lower Battery Holder | 1 |
| 31 | WE265-2978A51201 | Left Handle | 1 |
| 32 | WE265-2548A50803 | Blower Nozzle | 1 |
| 33 | WE265-2548A50802 | Blower Lower Tube | 1 |
| 34 | WE265-2548A51203 | Blower Top Tube | 1 |
| 35 | WE265-2977A22203 | Adjustable Handle | 1 |
| 36 | WE265-2498A51202 | Support Base | 1 |
| 37 | WE265-2548A51201 | Collector Bag Sleeve | 1 |
| 38 | WE265-4618A51201 | Collector Bag | 1 |
| 39 | WE265-2937A22203 | Safety Button | 1 |
| 40 | WE265-3447A22201 | Front Handle Button Spring | 1 |
| 41 | WE265-2937A22202 | Front Handle Button | 1 |
| 42 | WE265-3448A50802 | Spring | 1 |
| 43 | WE265-3447J50501 | Spring | 1 |
| 44 | WE265-2168A51201 | Display Panel | 1 |

If you wish to purchase Spare Parts, please visit www.webbgardenpower.co.uk and enter your chosen part number in the search bar. If the part is not listed, please contact our Spares Team on **01793 333212 option 2** or email spares@webbgardenpower.co.uk with your requirements, model and part number details (found on the front cover of this instruction manual).



DECLARATION OF CONFORMITY

We Handy Distribution Ltd - SN3 5HY (Importer) declare that the product:

Designation: Cordless Lithium Battery Leaf Blower Vacuum

Model(s): WEV20X2BVBARE/WEV20X2BVB4X

Product Number: 1938383001

Type/Serial No. As per rating label on machine

Protection: Class III - IPX0

Rated Voltage: 36V d.c – Max 40V d.c

Motor Speed: 6000-17000/min

This machine conforms to EU Directives, to which this declaration relates & corresponds to the relevant basic safety and health requirements of Directive:

Machinery Directive 2006/42/EC

EMC Directive 2014/30/EU

RoHS Directive 2011/65/EU & (EU) 2015/863

Noise Directive 2000/14/EC

For the relevant implementation of the safety and health requirements mentioned in the Directives, the following standards and/or technical specification(s) have been respected:

EN 60335-1:2012/A15:2021 – EN 50636-2-100:2014 – EN ISO 12100:2010 – EN 62233:2008

EN IEC 55014-1:2021 – EN IEC 55014-2:2021

EN 55014-1:2017 updated to EN IEC 55014-1:2021 – EN 55014-2:2015 updated to EN IEC 55014-2:2021

Guaranteed Sound Power Level: $L_{WA} = 100$ dB(A)

Vibration Level: Handle $a_h = < 1.69$ m/s² - Uncertainty K: 1.5 m/s²

Notified Bodies:

TÜD SÜD Certification and Testing (China) Co Ltd

Authorised signatory and technical file holder

Date: 03/12/2025

Name: Mr Simon Belcher

Signature:

Position: Chairman

Company: Handy Distribution Ltd

Address: Murdock Rd, Swindon, Wiltshire, SN3 5HY.



X-SERIES

INSTRUCTION MANUAL

This Service Book is provided with your Webb, to help you look after your purchase to our recommendations and enable you to take advantage of the conditional manufacturer domestic warranty*.


Present this service book to your authorised Webb repair dealer, whenever a service or a warranty appraisal is required.

The booklet is applicable to the following products, in the UK only:

- Ride On Lawn Tractors
- Cylinder Lawnmowers
- Petrol Rotary Lawnmowers
- Petrol Hand Held Range

Please register your machine using the following pages or at www.webbgardenpower.co.uk. By registering your machine, you agree to maintain the machine in accordance with the service schedules specified in this manual and services duly recorded. (Not applicable for Webb electric handheld machines). You may be asked to produce this booklet as proof of servicing in the event of a claim. Proof of purchase should also be kept as a reference.


Ensure you have the following information available from your machine product label. The two examples below can be found on your machine:

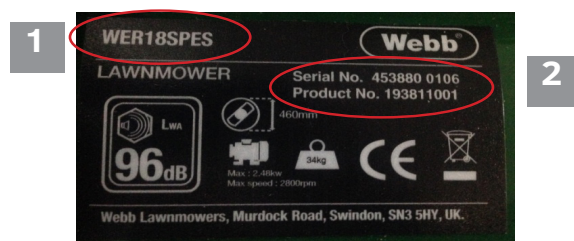

1. Model Number

2. Serial & Product Number

Please complete using BLOCK CAPITALS.
Sections marked* must be completed to validate Warranty.

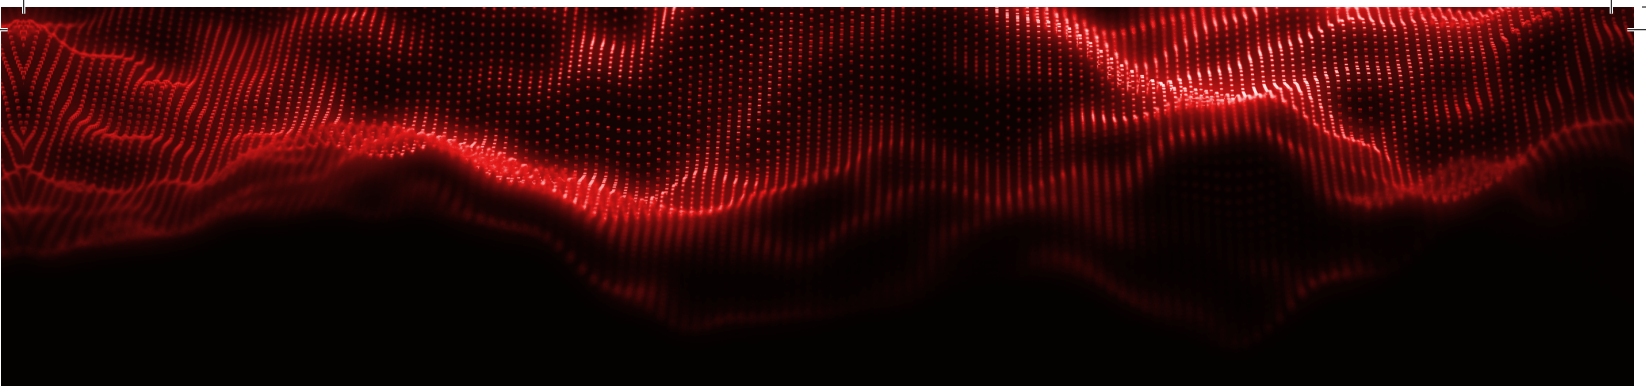

Users Statement of Warranty

Each new machine is warranted against defective material or assembly of material under normal usage. The warranty applies to the original purchaser and covers faulty parts and the labour involved in replacing and repairing those parts, which are of original manufacture.

All claims must be accompanied by evidence of the date of purchase, such as a Sales Receipt showing that the product has been purchased from an approved retailer, it was brand new at time of purchase, which is within the warranty time period.

Period of Warranty

Webb (Green Products)

- a) 3 years from the original date of sale to the first domestic user. (2 years batteries & chargers)
- b) 90 days from the original date of sale to the professional/commercial user.
- c) 90 days from the original date of sale when used for hire.
- d) A reduced warranty period of 90 days applies to those items which are subject to normal wear and tear (e.g. but not limited to wheels, tyres, cutter bars, cylinders, cutting blades, blade boss, belts, cables, nylon line & spool, collection bags, engine spark plugs, electric plug fuses).
- e) Engines are supplied with a separate warranty to the machine. The engine manufacturers warranty statement which will be supplied within the engine instruction manual. All enquiries and warranty repairs should be discussed with the engine manufacturer or approved warranty repair dealer.
- f) 90 days from the original date of purchase for Replacement Spare Parts (unless normal wear & tear component, which are covered for 30 days).
- g) All machines' must be serviced within the first 12 & 24 months from the original date of purchase to comply with the warranty (if applicable), failure to do so will invalidate the 2nd & 3rd years of the warranty.

All warranty repairs must be undertaken by an authorised service dealer. These dealers have been accredited by GJ Handy (Trading) Ltd and agree to only use genuine parts and follow our repair procedures.

Not covered by this warranty

- a) Error in assembly by user in accordance with manufacturers instructions.
- b) Incorrect operation of product in accordance with manufacturers instructions.
- c) The defect is due to accident, misuse, unauthorised modification or inexpert repair.
- d) The warranty policy does not cover any depreciation or damages caused by ordinary wear, rusting or corrosion, lack of correct maintenance or operation, misuse, abuse, lack of transportation or accident.
- e) The warranty policy does not cover any costs necessary for the standard periodic maintenance services instructed by the operator's manual, or service parts replacement which would include oil, filters, tyres, belts, brake linings, fuses, blades, seals and other service parts unless it can be proven that the item has evidence of faulty manufacture.
- f) The warranty policy will not cover failure or damage caused as a result of parts or accessories being modified without the written approval of GJ Handy (Trading) Ltd.
- g) The warranty policy will not cover the unit if non-genuine parts have been fitted and as a result damage has occurred to the unit.

Webb *eco*

X-SERIES

INSTRUCTION MANUAL

- a) The warranty policy is non-transferable and is only applicable to the original purchaser.

Disclaimer

- a) This warranty is only a remedy for defect of products. GJ Handy (Trading) Ltd will never warranty in terms of the merchantability or the fitness for a particular purpose.
- b) No person is authorised to make any warranties, representations or promises, expressed or implied, on behalf of GJ Handy (Trading) Ltd, or to modify the terms conditions or limitation of this warranty policy in any way.
- c) Neither GJ Handy (Trading) Ltd nor any company affiliated with GJ Handy (Trading) Ltd shall be liable in any event or manner whatsoever for incidental or consequential damages or injuries, including, but not limited to, loss of crops, loss of profit, out of pocket expenses or profits, rental of substitute equipment or other commercial losses.

General

- a) Most warrantable failures show up within the first few weeks of use. These failures are usually straightforward and warranty assessment is relatively easy.
- b) Failures relating to cutter decks and belts need careful investigation, as the cause may not always be straightforward. Look for damage to blades and pulleys especially when the cutter belt or blade boss have snapped or cracked as this could be due to impact damage.
- c) Customers should always refer to the operator/instruction manual when any disputed problem arises, you will find most areas covered within the manual.

Protecting your machine

Maintenance

Regular maintenance of your Webb machine is essential to ensure it operates, safely, efficiently and therefore reducing the environmental impact.

It is the owner's responsibility to ensure that their Webb machine is maintained at specific intervals. Any approved Webb service dealer can undertake a service, which are specialised in our products and will be aware of your particular machine and any technical updates which will save valuable time & money.

If you are using your machine in dry, dusty or high temperatures, you will need to service the machine more regularly.

Fuel (if applicable)

Due to ongoing efforts by fuel companies to reduce emissions, unleaded petrol will oxidize & deteriorate in storage overtime, leaving residue from detergent components.


Fuel deterioration problems may occur when petrol is stored for over 30 days. If you are planning to store fuel for over 30 days, we recommend you add Handy Parts Sure-Start fuel stabilizer to fresh fuel after purchasing. Sure-Start cannot reconstitute stale fuel.

Storage

When storing your machine for an extended period, we do recommend that you follow the instructions of engine instruction manual.

Always store the fuel in a clean, approved and sealed container. If the container is steel, ensure it is not corroded. If the container is not filled to its recommended capacity, air can accelerate fuel deterioration.

Always store fuel away from direct sunlight, in a dark, cool environment.

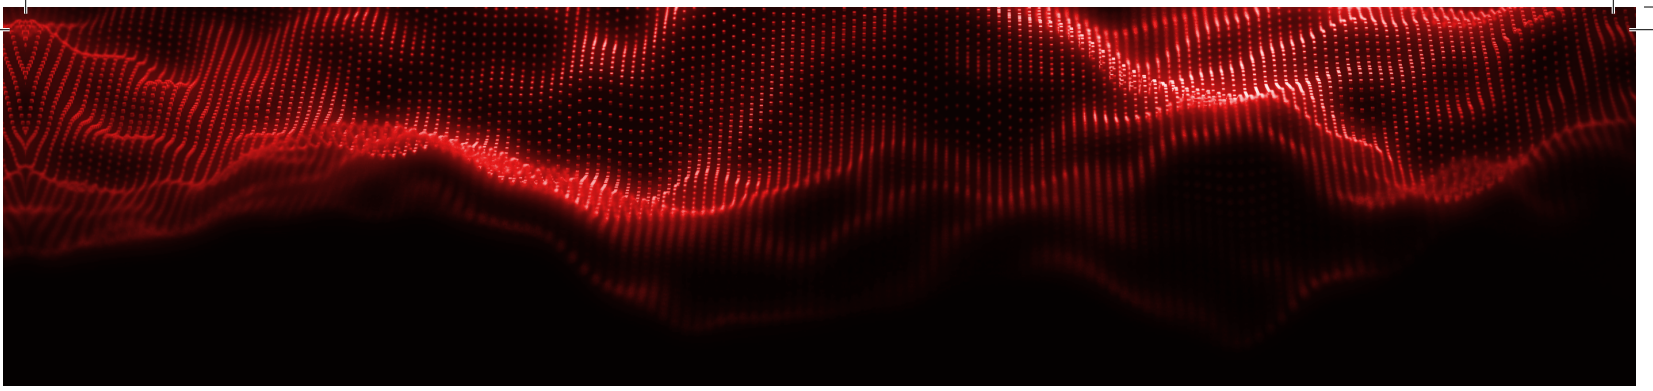

Your servicing Webb approved dealer will stamp & date the below relevant sections, when the correct service actions have been completed.

PLEASE ENSURE THE SERVICE BOOK IS AVAILABLE FOR THE DEALER, DURING SERVICE WORK.

1st Service

This must be stamped by an approved service dealer to qualify for a free second year warranty.
(Excluding the Webb Electric Handheld machines)

12 Months

Date

24 Months

Date

36 Months


Date




X-SERIES

INSTRUCTION MANUAL


48 Months

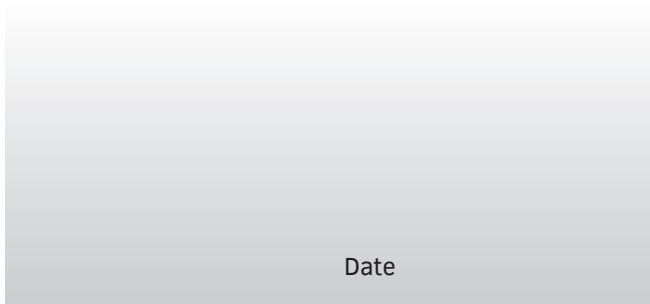


60 Months

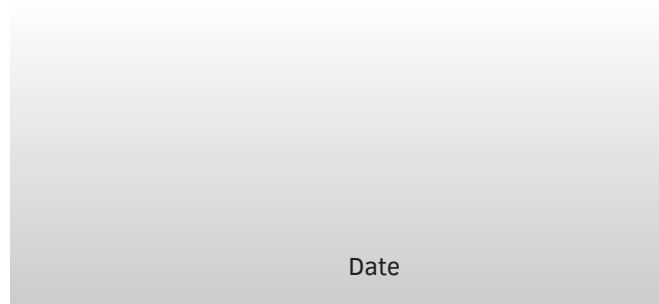


72 Months

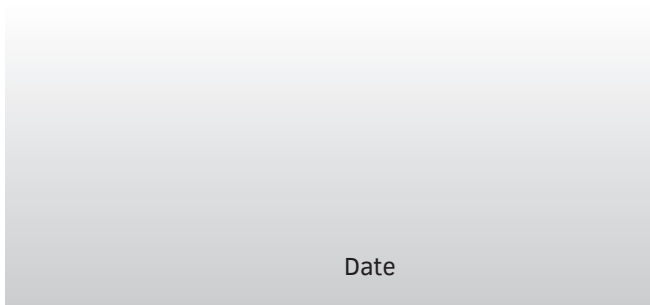


84 Months

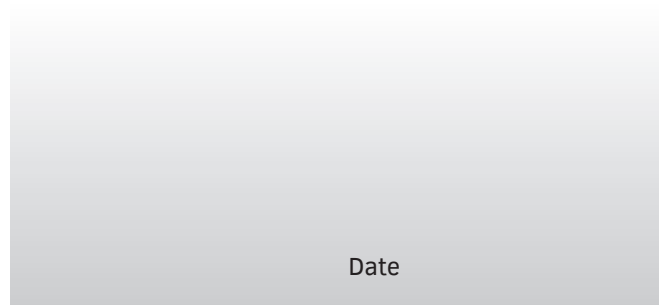


96 Months

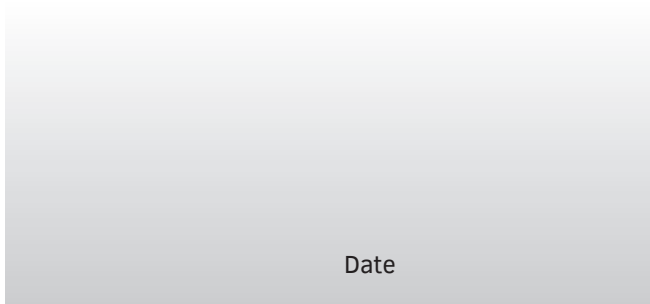


108 Months

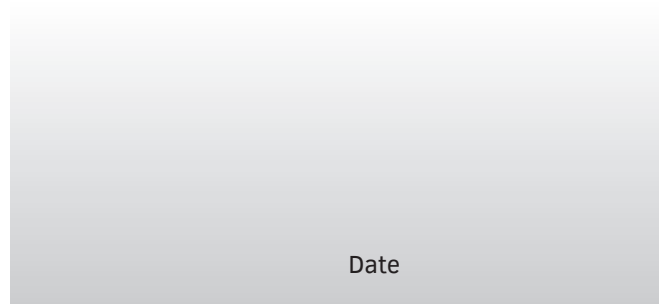


120 Months

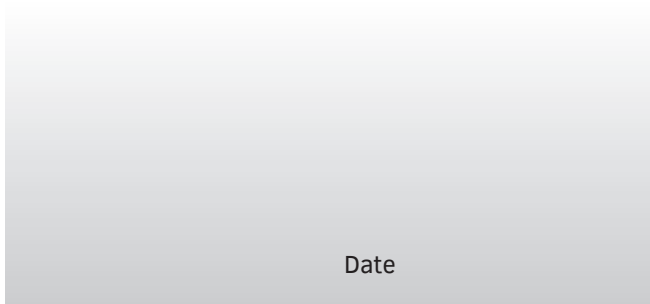

132 Months

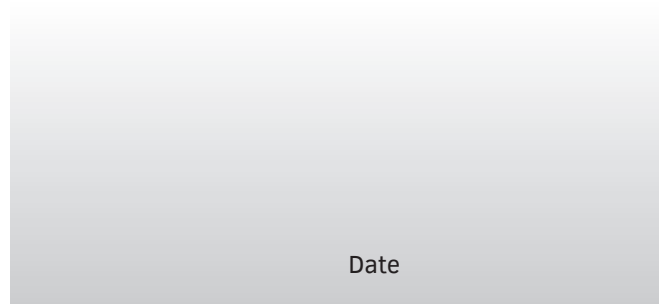

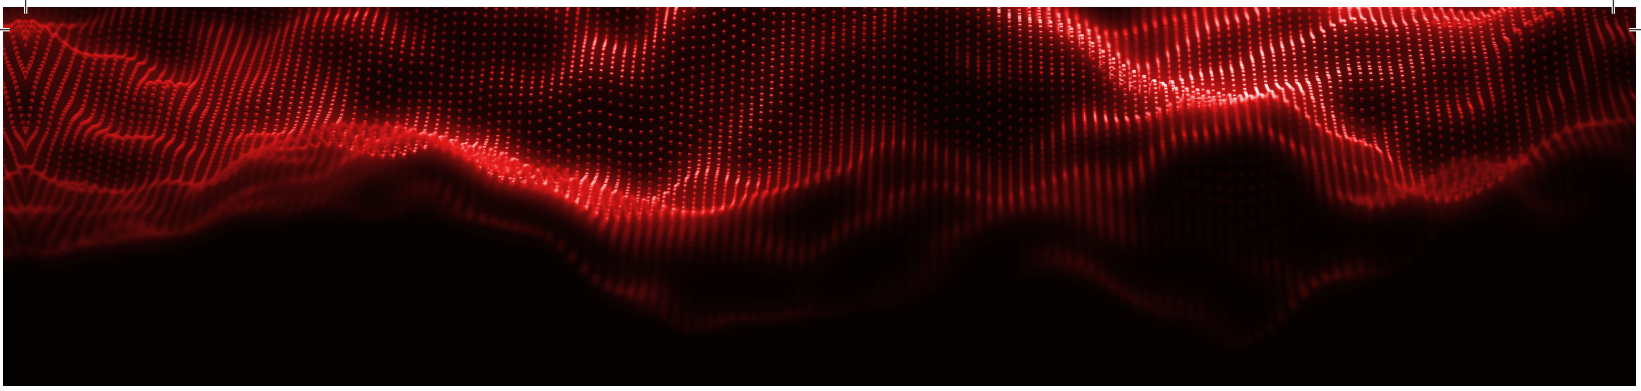

Product Information (* Compulsory)

If you have registered online, this form is not necessary.
PLEASE POST THIS COPY TO THE ADDRESS OVERLEAF

| | |
|--------------------|--|
| *Model No: | |
| *Product No: | |
| *Serial No: | |
| *Date of Purchase: | |

Personal Information (* Compulsory)

| | | | | | |
|---------------|--|-------------|--|------------|--|
| *Title | | *Forename | | *Surname | |
| *House Number | | *House Name | | | |
| *Address 1 | | | | | |
| *Address 2 | | | | | |
| *Town | | | | | |
| *County | | | | | |
| *Postcode | | | | | |
| Home Tel | | | | Mobile Tel | |
| Email | | | | | |

| | | | | | | | | | | | | |
|--------|--------------|--|----------|--|----------------------------------|--|----------|--|----------|--|-----------|--|
| Age | 18 to 25 | | 26 to 35 | | 36 to 45 | | 46 to 60 | | 61 to 80 | | 81 & over | |
| *Usage | Domestic Use | | | | Commercial/Professional/Hire Use | | | | | | | |

*Dealer Stamp (if available)

| |
|--|
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |

*Selling Retailer (If dealer stamp not available)

| | |
|-------------------|--|
| *Dealer Name | |
| *Dealer Address | |
| | |
| | |
| | |
| *Date of Purchase | |

Webb Lawnmowers privacy commitment to machine owners.

The information supplied, helps us to improve the products & services we provide, including information that we believe is relevant to your and/or your machine. We value your trust by giving us this information about yourself and we are committed to protecting your privacy.

Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding **PRODUCT RECALLS** specific to your machine. Please advise how you wish to be contacted for this specific reason only:

Post Telephone Email

From time to time Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding our products, services, offers or just opinions, which may be used for marketing, research or analysis purposes.

If you wish to be contacted by any of the following methods, please tick the relevant boxes:

Post Telephone Email

You may give Webb Lawnmowers notice in writing at any time that you no longer wish to receive direct marketing communications

Webb[®] **eco**

X-SERIES

Service & Support: cs@webbgardenpower.co.uk

Webb, Murdock Road, Dorcan
Swindon, Wiltshire SN3 5HY

New cordless garden machinery range from

Webb[®]

ADVANCED 40V BATTERY TECHNOLOGY