



Designed to **Perform**

**WEEBV3300**

**3300W ELECTRIC BLOWER &  
VACUUM**

**Product Number: 1938379001**

**en - ORIGINAL INSTRUCTIONS**

**ASSEMBLY REQUIRED**  
**MINIMUM TWO PERSONS**

**Service & Support: 01793 333212**

Before use please read & understand this manual; paying particular attention to the safety instructions before use. Incorrect use of the product could put the operator or machine in danger.

Whilst every effort has been made to ensure the accuracy of information contained in this manual, our policy of continuous improvement determines the right to make modifications without prior warning.

Images are used for illustration purposes only.



# INSTRUCTION MANUAL

## *Copyright Notice*

Copyright © Handy.

Permission is granted to reproduce this publication for personal & educational use only.

Commercial copying, redistribution, hiring, or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Handy.

In all cases this copyright notice must remain intact.

## **CONTENTS**

SPECIFICATION  
IMPORTANT INFORMATION  
GENERAL SAFETY INSTRUCTIONS  
KNOW YOUR MACHINE  
ASSEMBLY  
OPERATION  
MAINTENANCE  
STORAGE  
ELECTRICAL DIAGRAM  
TROUBLE SHOOTING  
PARTS DIAGRAM & LIST  
DECLARATION OF CONFORMITY  
WARRANTY

### **INTENDED USE**

The tool is exclusively intended for private users in the hobby and DIY sector for the following purposes:

- Vacuuming: for picking up dry leaves or general dry, light garden waste.
- Blowing: for piling up leaves or general garden waste.

This tool is intended for private use only and is not suitable for professional/commercial use. Use the tool only as described in this operating manual. Any other use is incorrect and may lead to product damage or even personal injury to the user or bystanders. This tool is not a toy.

The manufacturer or retailer assume no liability for damage caused by improper or incorrect use.

Please read this entire manual prior to operating the equipment. It instructs you how to safely and easily set up, operate and maintain your machine. Please be sure that you, and any other persons who will operate the machine, carefully follow the recommended safety practices, at all times. Failure to do so could result in personal injury or property damage.

### **TO THE OWNER**

All information in this manual is relative to the most recent product information available at the time of printing.

Review this manual frequently to familiarise yourself with the machine, its features and operation. Please be aware that this Instruction Manual may cover a range of product specifications for various models. Characteristics and features discussed and/or illustrated in this manual may not be applicable or exact to all models.

We reserve the right to change product specifications, designs, and equipment without notice and without incurring obligation. If you have any problems or questions concerning the machine, phone your local authorised Webb service dealer or Webb Garden Power. Throughout this manual, all references to *right* and *left* side of the machine are observed from the operating position.



# INSTRUCTION MANUAL

## SPECIFICATION

<b>Model</b>	<b>WEEBV3300</b>
<b>Product Number</b>	<b>1938379001</b>
Motor Capacity	3300w
Rated Voltage	230–240V~ 50 Hz
Idle Speed	9000-15000 min <sup>-1</sup>
Vacuum Capacity	max. 13 m <sup>3</sup> /min
Blow Speed	max. 270 km/h
Mulching Ratio	10:1
Collector Capacity	40L
Power Cable Length	10m
Protection Class	 / II
Guaranteed Sound Power Level	L <sub>WA</sub> 104 dB(A)
Vibration Level	2.2 m/s <sup>2</sup>
Maximum Weight	Approx. 3.5kg

**The manufacturer reserves the right to change the product specification and livery according to continued product improvements.**

Consistent with our policy of continuous improvement, The Handy reserves the right to change the design and configuration of any of its products without notice or obligation. Therefore, please treat the text and images in this manual for illustrative purposes only. They may in no case serve as a basis for any legal claim.

**If you require any assistance with regards to the contents or operation of your machine, please contact us:**

**Tel: 01793 333212**

**Email: [cs@webbgardenpower.co.uk](mailto:cs@webbgardenpower.co.uk)**

**Opening Hours Weekdays: 8:00am - 5:00pm (CLOSED WEEKENDS & OFFICE CLOSURES)**

## IMPORTANT INFORMATION



### WARNING

Read this instruction manual carefully before operating this machine. Make sure that you are familiar with the controls and properly operate the machine. Following these instructions to reduce the risk of fire, electric shock and personal injury.

### IF NOT USED PROPERLY THIS MACHINE CAN BE DANGEROUS!

This machine can cause serious injury to the operator and others; the warning and safety instructions must be followed to ensure reasonable safety and efficiency in using this product. The operator is responsible for following the warning and safety instructions in this manual and on the machine. Never use the product unless the fixing screws or guards are correctly positioned.

### DESIGNED FOR DOMESTIC USE ONLY.

For use outside of private homes and in gardens, whose annual use will not generally exceed 30 hours and that are primarily used for:

- Vacuuming: for picking up dry leaves or general dry, light garden waste.
- Blowing: for piling up leaves or general garden waste.

Potential risk may occur if not operated for such use.

**DOMESTIC USE ONLY:** but not in public facilities, parks or sports grounds and not for agricultural or forestry use. Compliance with the operating manual supplied by the manufacturer is a prerequisite for the proper usage of the blower vacuum. The operating manual contains servicing and maintenance instructions as well as directions for use.

### TRAINING

Read the instructions carefully: Be familiar with the controls and the proper use of the equipment.

Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the age of the operator.

Never operate while people, especially children, or pets are nearby.

Keep in mind that the operator or user is responsible for accidents or hazards involving the machine that occur to other people or their property.



# INSTRUCTION MANUAL

## GENERAL SAFETY INSTRUCTIONS

It is important that you read and understand the owner's manual and labels affixed to the machine. Learn its application and limitations as well as the specific potential hazards. Retain these instructions for future reference. The operator is responsible for following the warnings & instructions in this manual and on the product. To help recognize this information, observe the following symbols.

	Read & understand the instruction manual before using the machine. Failure to follow instructions could result in death or serious injury.		Check the machine before turning it on. Keep guards in place and in working order. Regularly remove foreign objects, before turning on. Replace damaged, missing or failed parts before using it.
	<b>CAUTION!</b> Risk of injury due to flying debris. Keep a safe distance when operating the tool!		<b>CAUTION!</b> Rotating Parts!
	This symbol provides useful additional information on handling and use.		Double Insulated.
	Do not use the tool in the rain.		Wear Dust Mask.
	Wear Goggles.		Wear Safety Shoes.
	Wear Hearing Protection		Do not point the blower at another person, child, or animal.
	<b>SWITCH OFF – REMOVE PLUG</b> Disconnect the mains plug before cleaning and maintaining to the machine.		Safety alert symbol. Used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury.
	<b>DANGER</b> Indicates an imminently hazardous situation which, if not avoided, will result in serious injury.		<b>WARNING</b> This signal symbol/word denotes a hazard with an average risk level that could lead to death or severe injury if it is not avoided.
	<b>CAUTION</b> This signal symbol/word denotes a hazard with a low risk level that could lead to mild or moderate injury if it is not avoided.		<b>CAUTION</b> Used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, may result in property damage.
	<b>NOTE!</b> This signal word provides a warning about potential material damage		The symbol shows the maximum sound power level $L_{WA}$ .
	Waste electrical products should not be disposed of in household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.		CE Marking - the product meets demand and regulations set by the EU & GB

## **SAFETY & WARNING INFORMATION**

### **SAFETY GUIDELINES**

This manual contains information that is very important to know and understand. This information is provided for SAFETY and to PREVENT TOOL PROBLEMS.

### **GENERAL SAFETY NOTES FOR POWER TOOLS**

- **Read all safety notes, instructions, illustrations, and technical data provided with this power tool.** Failure to follow the instructions below may result in electric shock, fire, and/or serious injury.
- **Keep all safety notes and instructions for future reference.** The term "power tool" used in the safety notes refers to both mains-operated power tools (with power cord) and battery powered power tools (without power cord).

### **WORKPLACE SAFETY**

- **Keep your work area tidy and well lit.** Clutter or unlit work areas can lead to accidents.
- **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.** Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

### **ELECTRICAL SAFETY**

- **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges, and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- **Do not misuse the power cord, such as to carry or hang the power tool or to pull the plug out of the socket. Keep the power cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled power cords increase the risk of electric shock.
- **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- **If operating a power tool in a damp location is unavoidable, use a residual current tool (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

### **PERSONAL SAFETY**

- **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- **Use personal protective equipment. Always wear eye protection.** Protective equipment such as a dust mask, nonskid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- **Prevent unintentional starting. Ensure the switch is in the OFF position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** Loose clothes, jewellery, or long hair can be caught in moving parts.
- **If tools are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.



# INSTRUCTION MANUAL

## USING AND MANAGING THE POWER TOOL

- **Do not overload the power tool. Use the appropriate power tool for your work.** The right power tool allows you to work better and safer in the specified power range.
- **Do not use any power tool that has a defective switch.** Power tools that can no longer be switched on or off are dangerous and must be repaired.
- **Disconnect the plug from the socket and/or remove any removable batteries before making adjustments to the tool, changing any insert tool parts, or putting the power tool away.** This precaution helps prevent unintentional starting of the power tool.
- **Keep power tools out of the reach of children when not in use. Whoever is not familiar with the power tool or who has not read these instructions should not be allowed to use it.** Power tools are dangerous if used by inexperienced persons.
- **Power tools and insert tools must be subject to careful maintenance. Check whether moving parts function properly without jamming, and whether parts are broken or damaged to such an extent that they impair the functions of the power tool. Have damaged parts repaired before using the power tool.** Many accidents happen due to poorly maintained power tools.
- **Use power tools, insert tools, insert tool parts, etc. according to these instructions. While doing so, consider the working conditions and the activity to be performed.** The use of power tools for applications other than those intended can lead to dangerous situations.
- **Keep handles and grip surfaces dry, clean, and free of oil and grease.** Slippery handles and grip surfaces hinder safe operation and control of the power tool in unforeseen situations.

## SERVICE

- **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

## Additional safety notes for handheld cordless leaf vacuums with blow function

### INSTRUCTIONS

- Read the instructions carefully. Familiarise yourself with the controls and the proper handling of the tool.
- Never allow children or persons with reduced physical, sensory or mental abilities or lack of experience and knowledge to use the tool.
- Please note that the operator or user is responsible for accidents or risks to other persons or their property.

### PREPARATION

- Use ear protectors and protective goggles. Wear these the whole time while using the tool.
- Always wear sturdy shoes and long trousers when operating the tool. Do not use the tool barefoot or with open sandals. Avoid wearing loose-fitting clothing or clothing with dangling attachments or ties.
- Do not wear any loose-fitting clothing or jewellery that could get sucked into the suction opening. Keep long hair away from the suction opening.
- Operate the tool in a recommended position and only on a solid and level surface.
- Do not use the tool on paved or gravel surfaces; debris flung out of the tool can cause injuries.
- Before using the tool, always perform a visual inspection to ensure that the tool, and attachments are secured, that the housing is undamaged and that the safety tools and screens are in place. Replace worn or damaged components to maintain equilibrium. Replace damaged or illegible labels.
- Check the power cable and the extension cable for signs of damage or ageing before use. If a cable is damaged during use, disconnect the power cable immediately from the mains. Do not touch the cable while it is still attached to the mains. Do not use the tool if the cable is damaged or worn.
- Keep the extension cable away from moving parts to prevent damage.
- Never operate the tool while persons, especially children, or pets are in the vicinity.
- Operate the tool in a recommended position and only on a solid and level surface.

### OPERATION

- Prior to starting the tool, make sure that the inlet is empty.
- Keep your face and body away from the filling hole.
- Make sure that hands, other body parts, or clothing are not located in the inlet, the discharge chute or close to moving parts.
- Make sure to keep your balance and ensure firm footing, especially on inclines. Avoid uncomfortable working positions.
- Walk, do not run.
- Do not stand in the ejection zone during operation of the tool.

- When vacuuming up material with the tool, take extreme care to avoid sucking up metal objects, stones, bottles, tins, or other foreign objects.
- Switch the tool off and wait until the tool has stopped if the cutting mechanism hits a foreign object or if the tool starts vibrating heavily. Disconnect the tool from the mains and carry out the following steps before restarting and operating the tool:
  - check the tool for damage.
  - replace or repair damaged parts.
  - check for loose parts and tighten these.
- Do not let processed material collect in the ejection zone as this prevents proper ejection and might cause material that has already been processed to be drawn in again via the filling hole.
- If the tool is clogged, switch it off and disconnect it from the mains before removing any debris.
- Never operate the tool with defective safety tools or screens, or without safety tools such as the attached collecting bag.
- Keep waste and collected debris away from the motor to prevent damage or a possible fire.
- Do not transport the tool while the motor is running.
- Switch the tool off and disconnect it from the mains. Make sure that all moving parts come to a complete standstill:
  - every time you leave the tool unattended.
  - before removing any blockages or clearing clogged ducts.
  - before checking, cleaning, or carrying out any other work on the tool.
- Do not operate the tool during bad weather, especially during thunderstorms & lightening.

#### **MAINTENANCE AND STORAGE**

- When stopping the tool for maintenance, storage or changing accessories, switch off the motor, disconnect the tool from the mains and make sure that all moving parts have come to a stop. Let the tool cool down prior to inspection, adjustments, etc.
- Store the tool in a dry place and out of the reach of children.
- Replace worn or damaged parts for safety reasons. Only use original replacement parts and accessories.
- Switch the tool off and disconnect it from the mains before attaching or removing the collecting bag.

#### **RECOMMENDATION**

- Operate the tool via a residual current tool (RCD) with a trigger current of max. 30 mA.



#### **WARNING**

#### **Risk of electric shock!**

**Faulty electric installation or excess mains voltage can cause an electric shock.**

**Only connect the power cable if the mains voltage of the socket matches the information shown on the rating plate.**

**If the supply cord is damaged, it must be replaced by a special cord or assembly, available from the manufacturer or its approved service agent.**

#### **BEFORE FIRST USE**

Check the tool and all accessory parts for damage. Do not attempt to start or use the machine if any components are damaged.

#### **NOTE!**

**After opening the packaging, careless handling can damage the tool. Therefore, be very careful when opening.**

- 1. With both hands, lift the tool out of the packaging.**
- 2. Check that the delivery is complete (see chapter "Know Your Machine").**
- 3. Inspect the tool and individual parts for damage. Do not operate a damaged tool; instead, contact the manufacturer or its approved service agent.**



# INSTRUCTION MANUAL

## EXTENSION CABLE

Use only extension cables intended for outdoor use (max. 30m length, 1.5mm<sup>2</sup> cable cross-section, not included in the delivery). Use only extension cables having an electrical rating equal to or more than the rating of the machine. Do not use damaged extension cables. Examine the extension cable before using it and replace it if damaged. Do not abuse extension cables. Do not pull on the cable to disconnect. Keep cable away from heat and sharp edges. Always disconnect cable from mains electric supply, before disconnecting machine from extension cable.

Lay out the entire cable in loops so that you can pull it along with you during work. Make sure that no one can trip over the extension cable and that nothing can fall on top of it when laying out the cable.



**DANGER**

**Failure to follow these instructions can result in serious injury, including death.**



**WARNING**

**To reduce the risk of electrocution, keep all connections dry and off the ground. Do not touch plug with wet hands.**



**Machines shall not be used by children. Children should be supervised to ensure that they do not play with the machine. This machine is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.**

## NOISE/VIBRATION INFORMATION



**WARNING**

**Health hazard!**

**Working without hearing protection or protective clothing can damage your health.**

**Wear hearing protection and appropriate protective clothing when working.**

The specified total vibration value and the specified noise emission values have been measured according to a standardized test method (EN 60335-1:2012+A11+A13+A1+A14+ A2, EN 50636-2-100:2014) and can be used to compare one power tool with another. They can also be used for a preliminary assessment of exposure.



**WARNING**


The vibration and noise emissions can deviate from the stated values during actual use of the tool. This depends on the way the tool is used and especially on the type of product you are working on. It is necessary to establish safety measures that protect the operator based on an estimate of the exposure during actual conditions of use (taking into account all parts of the operating cycle, such as periods when the tool is switched off). Try to keep the exposure to vibrations and noise as low as possible. Examples of measures to reduce the exposure:

- wearing vibration-damping gloves while using the tool.
- limiting the working time.
- using accessories in good condition.
- regular maintenance and cleaning of the tool.
- turning the tool off while not in use.
- preventing overload of the tool.

## KNOW YOUR MACHINE

1. Motor Housing	2. Upper Vacuum Tube
3. Lower Vacuum Tube	4. Upper Blow Tube
5. Lower Blow Tube	6. Fixing Screw x4
7. Collection Bag	8. Front Handle Knob
9. Front Handle Bolt	10. Front Handle
11. Shoulder Strap	10. Front Handle

**NOTE: A Phillips screwdriver (Not Supplied) will be required to complete build.**

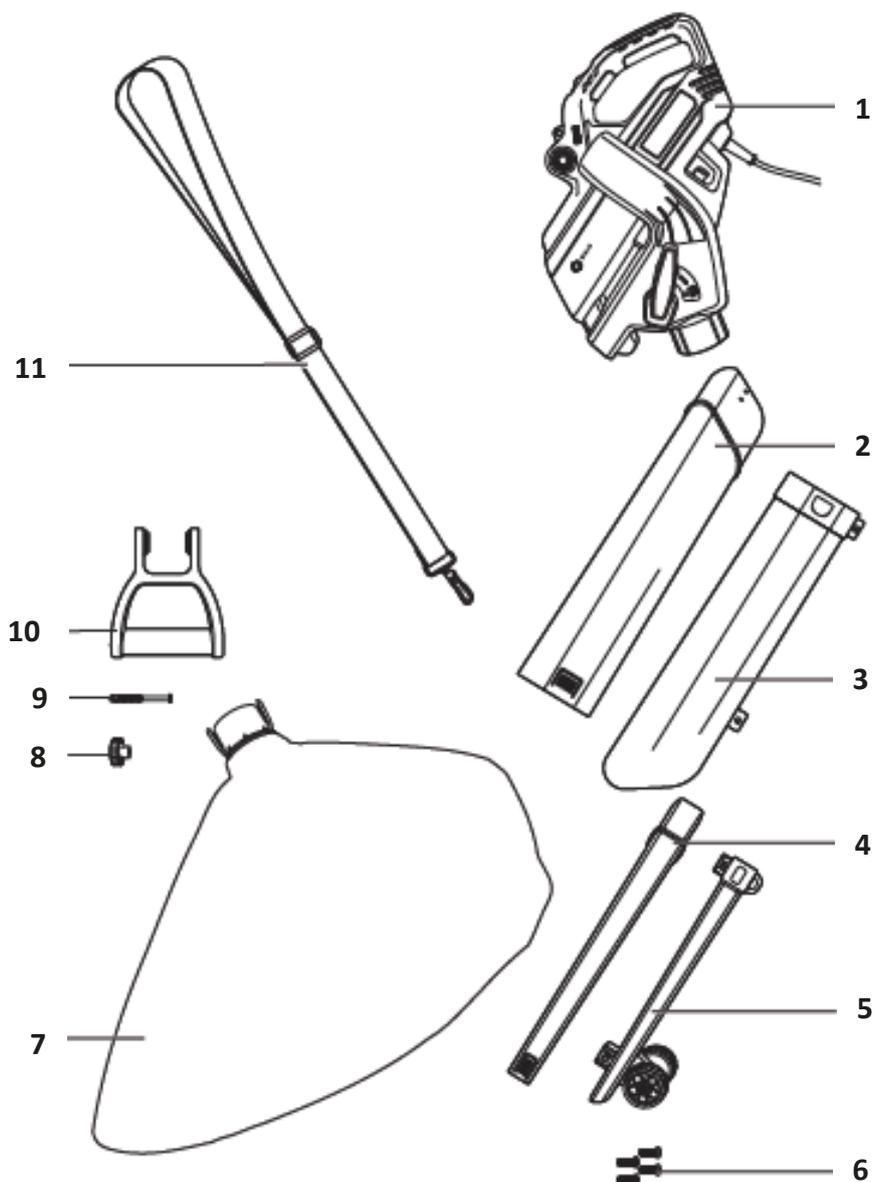



# INSTRUCTION MANUAL

## ASSEMBLY

Remove the machine and contents from the carton. Be sure the carton is empty before discarding.

If you require any assistance with regards to the contents or operation of your machine, please contact us:



Tel: 01793 333212

Email: [cs@webbgardenpower.co.uk](mailto:cs@webbgardenpower.co.uk)

Opening Hours Weekdays: 8:00am - 5:00pm (CLOSED WEEKENDS & OFFICE CLOSURES)


## FITTING THE BLOW & VACUUM TUBES

1. Push the upper vacuum tube (2) into the large opening on the motor housing (1) until it snaps into place.
2. Push the lower vacuum tube (3) into the open end of the upper vacuum tube (2) until it snaps into place.
3. Push the upper blow tube (4) into the small opening on the motor housing until it audibly snaps into place.
4. Push the lower blow tube (5) into the open end of the upper blow tube until it audibly snaps into place.
5. Using a Philips screwdriver (12), screw the fixing screws (6) into the illustrated positions in the clockwise direction. Screw in an additional screw on the opposite side of the motor housing.

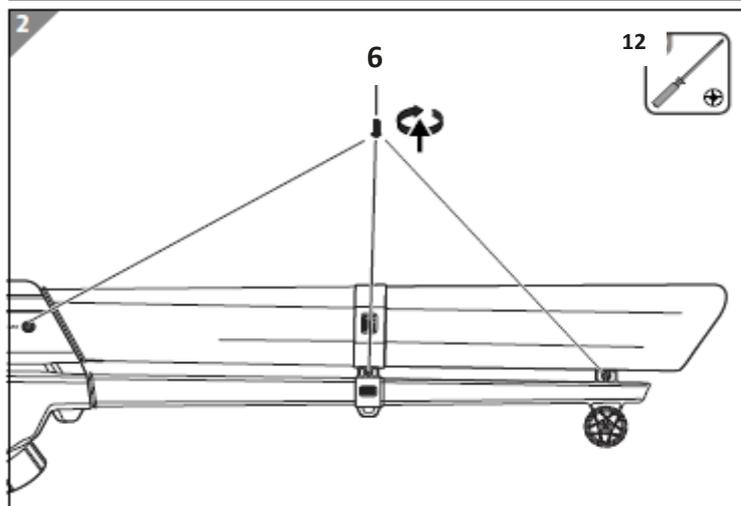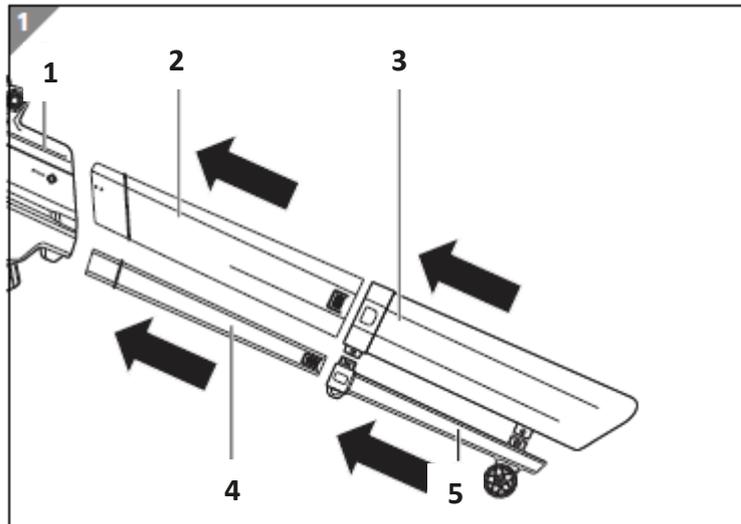

### FITTING THE COLLECTION BAG

1. Push the connecting piece of the collection bag (7) into the bottom opening of the motor housing (1) until it audibly snaps into place.
2. Attach the snap hook of the collection bag (7) to the eyelet on the lower blow tube (5).

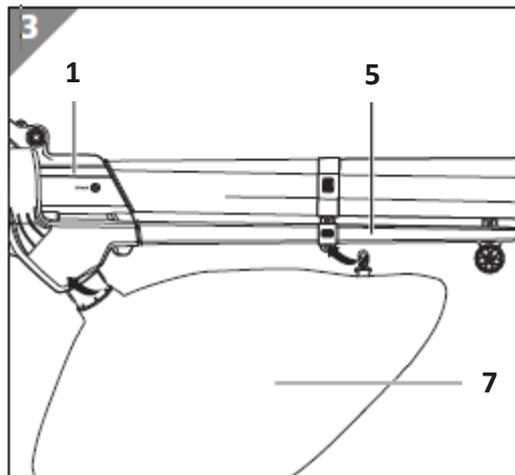


### FITTING FRONT HANDLE

1. Attach the front handle (10) to the body of the machine (13) with the bulge pointing down. The teeth on the mount and on the front handle must engage.
2. Push the handle bolt (9) through the hole in the front handle, through the body of the machine to the other side of the front handle.
3. Screw the front handle knob (8) clockwise onto the thread of the handle bolt (9) and tighten clockwise.

### ADJUSTING FRONT HANDLE

Adjust the front handle (10) to obtain the optimum working position. Always make sure that the teeth on the front handle and the body of the machine (13) engage.

1. Loosen the front handle knob (8).
2. Set the desired position of the front handle, by rotating up or down.
3. Tighten the front handle knob (8).

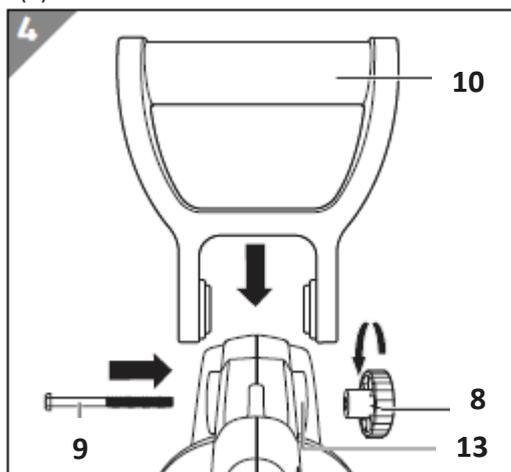




# INSTRUCTION MANUAL

## FITTING THE SHOULDER STRAP

1. Connect the shoulder strap clip (11) to the body point on the tool (14) ensuring it is secure.

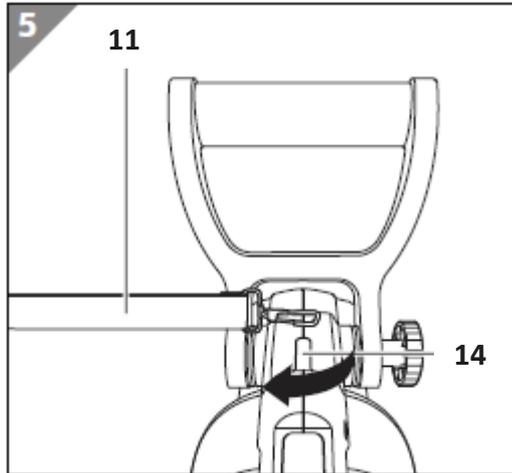

## OPERATION



### CAUTION



**Risk of Injury - A damaged tool or damaged accessories can lead to injuries.  
If the machine vibrates unusually during operation, it may indicate that it is damaged!  
The product should be inspected and repaired immediately!**

- This chapter describes how to operate the tool. The following instructions for use serve for your own safety and for successful, safe use of the tool.
- Check the product, its power cable and plug, as well as accessories for damage before each use. Do not use the product if it is damaged or shows wear.
- Double check that accessories are properly connected.
- Ensure that the air vents are always unobstructed and clear. Clean them, if necessary, with a soft brush. Blocked air vents may lead to overheating and damage to the product.
- Switch the product off immediately if you are disturbed while working by people or animals entering the work area. Always let the product come to a complete stop before releasing the trigger gun.
- Do not overwork yourself or the machine. Take regular breaks to ensure you can concentrate on the work and have full control over the product.
- Adjust the variable power. Operate the product at an appropriate power. Do not operate it too fast on delicate surfaces.
- Pay special attention when changing direction.


## SETTING BLOW OR VACUUM FUNCTION



**Vacuum Function:** use this function to vacuum up dirt outdoors. Set the blow/vacuum selection lever (15) to vacuum. The vacuum function is active.

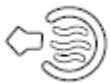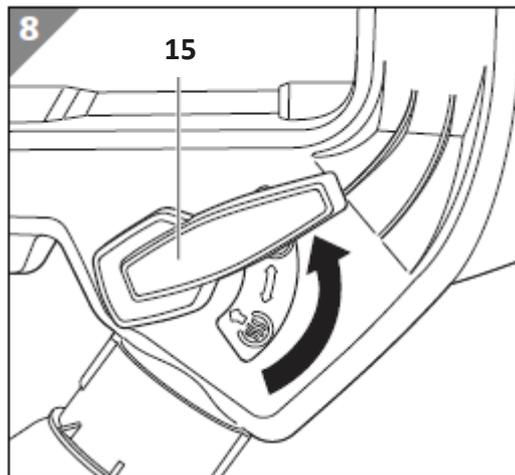

**Blow Function:** use this function to blow away dirt outdoors. Set the blow/vacuum selection lever (15) to blow. The blow function is active.

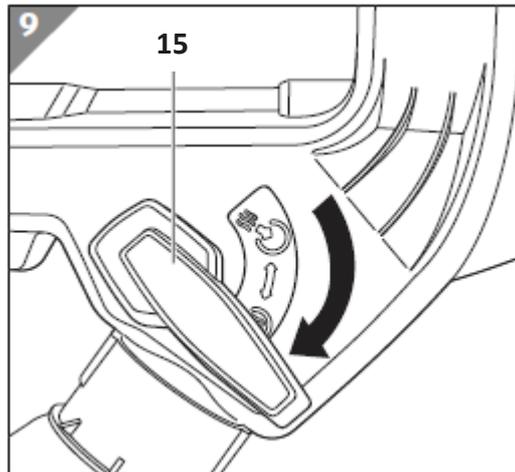




# INSTRUCTION MANUAL

## SETTING THE SPEED

Set the speed of the tool by turning the variable speed control (16).

1. Turn the variable speed control to the left (-) to reduce the speed.
2. Turn the variable speed control to the right (+) to increase the speed.

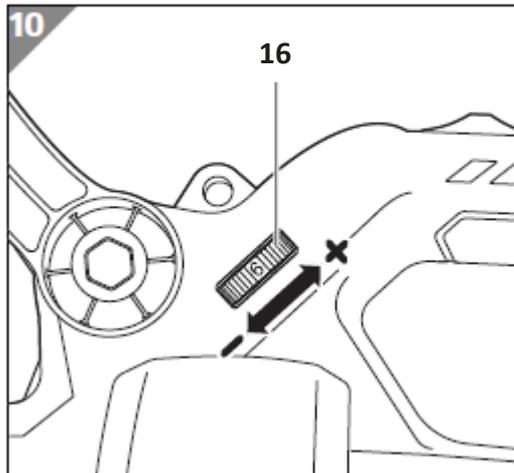


## START/STOP THE TOOL

**NOTE:** The machine can be affected by a thrust during operation - therefore always hold it firmly with both hands when starting the tool.


**IMPORTANT:** Point the nozzle at the ground away from feet.

- Always adjust the distance and the suction speed to the surface, which is to be cleaned.
  - Release the trigger. When releasing the trigger, the machine automatically stops. The machine will start again when you re-activate the starting procedure.
1. Slide the ON/OFF switch (17) in the direction of the collection tubes (Position I) - The tool is switched on.
  2. Slide the ON/OFF switch (17) in direction towards rear of machine (Position 0) - The tool is switched off.

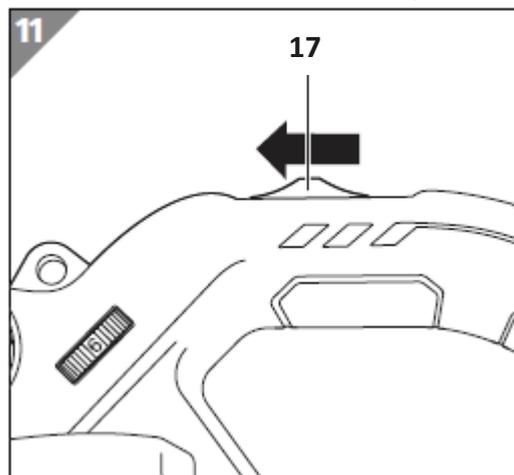

### REMOVING THE COLLECTING BAG

1. Release the snap hook of the collection bag from the eyelet on the lower blow tube (5).
2. Press in the release (18) on both sides of the bag and pull the collection bag (7) off the motor housing (1).

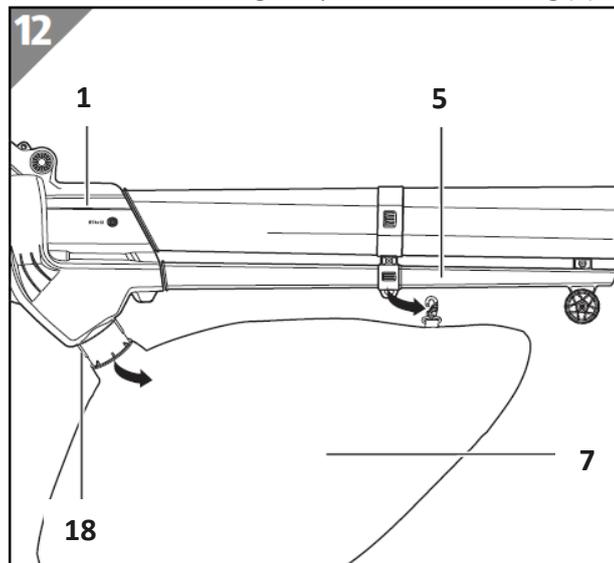


### USING THE SHOULDER STRAP

When operating, always wear the shoulder strap (11) to reduce fatigue. The shoulder strap is fitted with a snap lock so that it can be released quickly in the event of an accident.

### POWER CABLE LOCATION

1. Make sure that the ON/OFF switch is in the OFF position (0).
2. Make a loop with the power cable and guide this through the opening of the strain relief (19).
3. Guide the loop over the hook of the strain relief.
4. Slowly tighten the loop against the strain relief. If you do not tighten the cable, it may become loose during work and fall out.
5. Plug the power plug of the tool into the socket of the extension cable (if used).
6. Plug the power plug of the tool or extension cable into the mains electrical supply.
7. The use of the strain relief ensures the cable remains behind the operator during use.

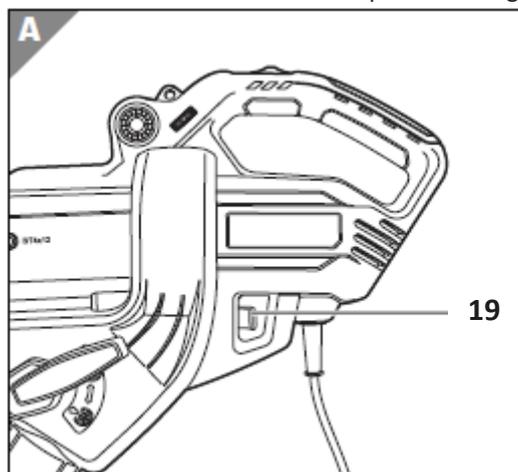



# INSTRUCTION MANUAL

## ASSUMING THE WORK POSITION

1. Put on the shoulder strap (11) so that it lies across your shoulder and crosses your chest and back. Adjust the length of the carrying strap so that the lower vacuum tube (3) can be moved close to the ground.
2. Hold the handle of the motor housing (1) with one hand and the front handle (10) with the other hand.

## VACUUMING/BLOWING LEAVES

1. Make sure that the tool is completely assembled and connected.
2. Set the operating mode – Vacuum or Blow.
  - **VACUUMING:** hold the tool in front of you and push it over the ground with the guide wheels.
  - **BLOWING:** walk slowly and swing the blow tube left and right with controlled motions, approx. 10cm above the ground.
3. Set the speed. You can adjust the speed during operation.
4. Switch the tool on.
5. Switch the tool off and disconnect it from the power.

## EMPTYING THE COLLECTION BAG



### WARNING

With normal use, the collection bag can wear out over time. A worn collection bag can leak small objects, hitting or injuring the operator or bystanders.

Check the collection bag regularly and replace it if it is damaged. Replacement parts are listed towards the rear of this instruction manual.

1. Open the zip of the collecting bag (7).
2. Empty out the contents of the collecting bag.
3. Turn the collection bag inside out and thoroughly beat it out.
4. Check for any damage, tears, or holes. Replace, if necessary, do not refit a damaged bag to this machine.

## MAINTENANCE



### WARNING

#### RISK OF ELECTRIC SHOCK!

Improper handling of the tool can cause electric shock.

Always switch off the tool and pull the mains plug out of the socket before cleaning the tool.

### NOTE!

#### RISK OF SHORT CIRCUIT!

If water or other liquids enter the housing, they can cause a short circuit.

- Never immerse the tool in water or other liquids.
- Make sure that no water or other liquid gets inside the housing.

### NOTE!

#### RISK OF DAMAGE!

Improper handling can damage the tool.

- Do not use any harsh cleaning products, brushes with metal, nylon bristles, or sharp or metallic cleaning materials such as knives, hard scrapers or similar. They may damage the surfaces.

Clean the tool immediately after each use, otherwise buildup of leaf residue can harden and may no longer be able to be removed without disassembling the motor housing.

- Regularly clean the motor housing, tubes and ventilation slots with a soft brush or cloth.
- Once a year, hand wash the collection bag in soapy water and allow it to air dry.

To ensure a long and problem free life of your machine, please take the following advice:

- Any repair should always be made in an authorised workshop with original spare parts.
- Prior to cleaning or any maintenance, always ensure the power plug has been removed from the electric power supply.
- When you have finished using the tool, always check to make sure it is clean and free of dirt and debris.
- Do not use solvents to clean the tool.
- Store the tool in a dry place, and out of reach of children.
- Regularly check for obvious defects, such as loose, dislodged or damaged fixings and worn or damaged components.
- Check that covers and guards are undamaged and correctly fitted. Carry out necessary maintenance or repairs before using the tool.
- If the tool fails despite the care taken in manufacturing and testing, (within 30 days of purchase) the product should be returned to your retailer, (over 30 days since purchase) an approved service dealer.
- Do not clean the tool while it is running.
- Ensure that all the fastening elements (screws, nuts, bolts etc.) are always tight, so that you can safely work with the tool.
- Check the tool frequently for signs of wear. Replace worn or damaged parts.
- Do not store the tool outdoors.
- Clean the tool with a brush or damp cloth. Do not use any solvents or water to remove dirt.

### **TESTING**

Regularly inspect the tool and its accessories to ensure that they are in fault-free condition and

- the controls are free of damage.
- that the accessories are in perfect condition.
- that the vents are open and clean.

Do not operate a damaged tool or accessory. Have the damaged tool or accessory checked and repaired by an approved Webb Service Dealer.

### **POWER CABLE MAINTENANCE**

If the power cable needs replacing, the repair must be carried out by an approved Webb Service Dealer within warranty, or an authorised electrical specialist outside of warranty to avoid a safety hazard.

### **CLEANING OF AIR VENTS**

The machine should be kept clean to let the cooling air pass through the machine vents freely.

### **STORAGE**

#### **NOTE!**

#### **Risk of damage!**

Improper storage of the tool can result in damage.

- Allow the tool to completely cool down.
  - Place the tool so that it cannot fall into water.
  - Store the tool in a clean, dry, frost-protected place out of the reach of children.
1. Thoroughly clean the tool (see Maintenance).
  2. Always store tool parts and accessories together with the tool.
  3. If possible, pack the tool in the original packaging.



# INSTRUCTION MANUAL

## TRANSPORT

Transport the tool and accessories in the original packaging and protect them from blows and vibrations.

### Load securing for transport.

When transporting the tool in vehicles, the tool must be secured in accordance with the applicable regulations (load securing).

## TROUBLE SHOOTING



### WARNING

**Only perform the steps described in these instructions!**

**All further inspection, maintenance & repair work must be performed by an authorised Webb Service Dealer, if financially viable.**

**If the product does not perform properly, makes unusual sounds, the motor does not start or stop as described, or any other irregularity or malfunction occurs, do not attempt to repair the product by yourself. Please contact customer services or your local authorised Webb Service Dealer.**

**Before attempting any of the below actions, ensure the machine is removed from the electrical supply.**

PROBLEM	POSSIBLE CAUSE	FAULT CORRECTION
Will not start	No mains power (power failure).	Connect to power supply.
	Motor or switch defect.	The machine should be checked, repaired or replaced, if necessary, by a qualified electrician or approved Webb approved service dealer.
	Fuse in plug failed	Replace with new 13A fuse
	Power cord or plug is defective	To be checked by an approved Webb approved service dealer or specialist electrician.
Material is not being vacuumed properly	Suction tubes clogged or blocked.	Switch to blow mode and clear the blockage.
	Collection bag is full	Empty the collection bag.
	Extension cable, if used, is too long, or the cable cross section is too small.	Use a shorter extension cable with a cross section the same size or larger than the standard cable on the machine.
Machine is vibrating abnormally	Suction tubes blocked or clogged - <b>(DO NOT VACUUM WET MATERIAL)</b>	Switch to blow mode and clear blockage. If it does not resolve, remove from mains electric supply, remove both suction tubes and collection bag and ensure material is not blocking the machines openings.
	The fan has become unbalanced due to the impact of a foreign object e.g. a stone or gravel.	The fan needs to be replaced by an approved Webb service dealer. Please note that this will not be covered under the warranty, as the warranty does not cover wear and tear or machines that are damaged by the user.
Blow/Vac Switch does not work	Switch flap is blocked by material/debris	Switch to blow mode and clear blockage. If this does not resolve, remove from mains electric supply, remove both suction tubes and collection bag and ensure material is not blocking the blow/vacuum switch operation. Remove all debris and rebuild.

If you can't fix the fault yourself, contact Webb Garden Power by email: [cs@webbgardenpower.co.uk](mailto:cs@webbgardenpower.co.uk) or call **01793 333212**. Please be aware that any improper repairs will also invalidate the warranty and additional costs may be incurred.

## DISPOSAL

### Disposing of packaging



Dispose of packaging according to type. Sort the paperboard and cardboard as wastepaper and the film as recyclable material.

### Disposal of old electrical tool




Applicable in the European Union and other European countries with systems for separate collections of recyclable waste. This symbol indicates that this product may not be disposed of together with domestic waste in compliance with the (2012/19/EU) Regulation pertaining to waste electrical and electronic tools (WEEE).

This product must be handed in at a collection point intended for the purpose. This can occur, for example, by handing it in at an authorised collecting point for the recycling of waste electrical and electronic equipment. Owing to potentially hazardous substances that are frequently contained in waste electronic equipment, incorrect handling of waste equipment may have a negative impact on the environment and on the health of human beings. By disposing of this product correctly, you are also contributing towards an efficient use of natural resources. Information on collecting points for waste equipment can be obtained from your local authority, an authorised institution for the disposal of waste electrical and electronic equipment or the waste collection services.



# INSTRUCTION MANUAL

## PARTS DIAGRAM

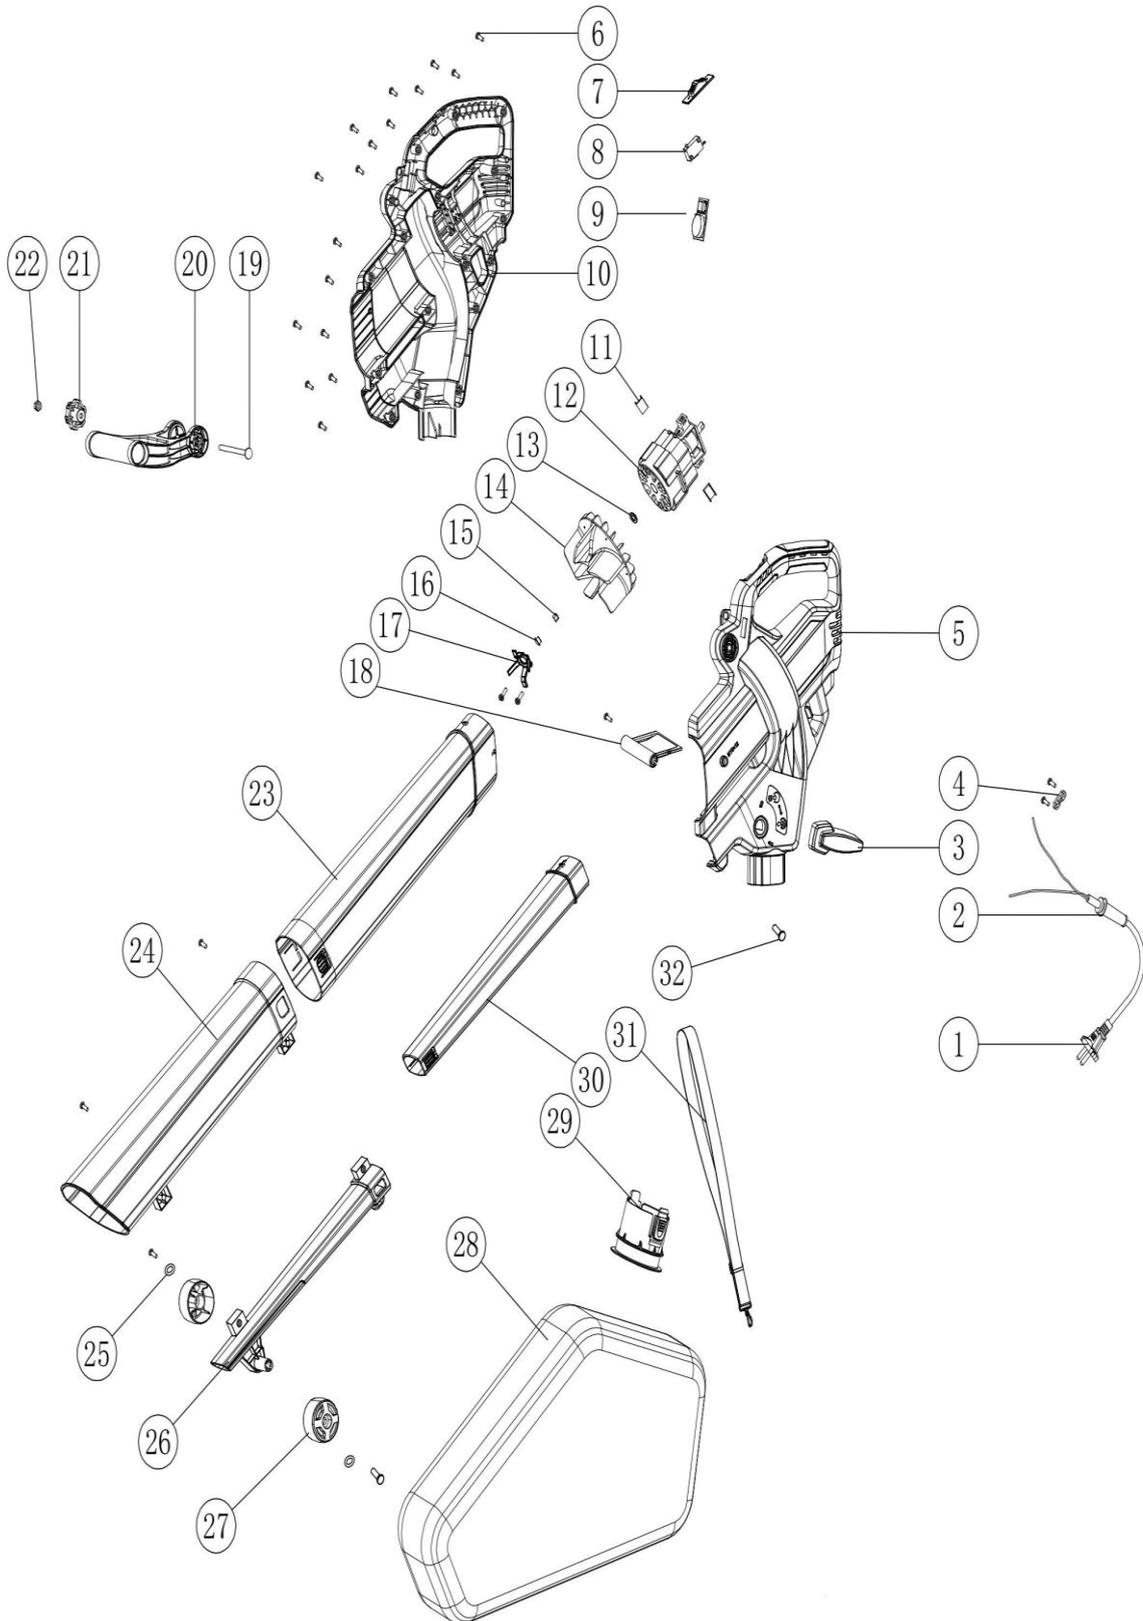

## PARTS LIST

Item No.	Webb Part No.	Webb Description	QTY	Item No.	Webb Part No.	Webb Description	QTY
1	WE259-8422-720501	3-Pin Plug & 10mm Power Cable	1	17	WE259-8231-720701	Metal Blade	1
2	WE259-8332-710101	Cable Sheath	1	18	WE259-8182-720401	Wind Adjuster Flap	1
3	WE259-8312-710101	Conversion Knob	1	19	WE259-8SFDD60-85D	Bolt M6x85	1
4	WE259-8184-710101	Cable Clamp	1	20	WE259-8481-270701	Front Handle	1
5	WE259-8006-720501	Left Housing	1	21	WE259-8313-430101	Knob	1
6	WE259-8SABC40-16Q	Screw BT4x16	22	22	WE259-8NA-06D	Nut M6	1
7	WE259-8312-720501	Push Button Switch	1	23	WE259-8061-720501	Upper Suction Tube	1
8	WE259-8042-710101	Micro-Switch	1	24	WE259-8061-720502	Lower Suction Tube	1
9	WE259-8041-720501	Speed Button	1	25	WE259-8WA-041201D	Flat Washer $\Phi 4 \times \Phi 12 \times 1$	2
10	WE259-8006-720502	Right Housing	1	26	WE259-8061-720504	Lower Blower Tube	1
11	WE259-8481-710102	Shock Absorbing Pad	2	27	WE259-8121-710101	Wheel	2
12	WE259-8401-720501	Motor Assembly	1	28	WE259-8102-720501	Collection Bag	1
13	WE259-8WA-081401Q	Flat Washer $\Phi 8 \times \Phi 14 \times 1$	1	29	WE259-8063-710101	Bushing	1
14	WE259-8403-720501	Fan	1	30	WE259-8061-720503	Upper Blower Tube	1
15	WE259-8207-720401	Nut M8 - 9mm	1	31	WE259-8486-730101	Shoulder Strap	1
16	WE259-8481-710101	Rubber Plug	1	32	WE259-8SABC40-12D	Screw BT4x12	6



# INSTRUCTION MANUAL



## DECLARATION OF CONFORMITY

We Handy - SN3 5HY (Importer) declare that the product:

**Designation:** Webb 3300w Electric Blower Vacuum

**Model(s):** WEEBV3300

**Product No.:** 1938379001

**Type/Serial No.** As per rating label on machine

**Rated Voltage:** 230-240V~

**Rated Frequency:** 50Hz

**Power:** 3300w

**Protection Rating:**  / II

**Complies with the following directives:**

**Machinery Directive 2006/42/EC**

**Electromagnetic Compatibility Directive 2014/30/EU**

**RoHS Directive 2011/65/EU amended by (EU) 2015/863**

**Applied harmonized standards:**

EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A2:2019+A14:2019+A15:2021 - EN 50636-2-100:2014

EN IEC 61000-3-2:2019+A1:2021 - EN 61000-3-3:2013+A1:2019 +A2:2021 - EN 62233:2008

EN IEC 55014-1:2021 - EN IEC 55014-2:2021 - EN IEC 63000:2018

**Outdoor Noise Directive 2000/14/EC amended by 2005/88/EC**

Conformity assessment 2000/14/EC Annex V,

Measured Sound Power Level  $L_{WA}$ : 101.86 dB(A) - (K = 2.37 dB(A))

Guaranteed Sound Power Level  $L_{WA}$ : 104 dB(A)

According to 2000/14/EC Hand-arm Vibration:  $2.2m/s^2$  - Correction Value K:  $1.5m/s^2$

**Notified Body:**

TÜV SÜD Product Service GmbH

**Authorised signatory and technical file holder:**

**Date:** 01/10/2025

**Signature:**

**Name:** Mr Simon Belcher

**Position:** Chairman

**Company:** Handy - **Address:** Murdock Rd, Swindon, Wiltshire, SN3 5HY.

This Service Book is provided with your Webb, to help you look after your purchase to our recommendations and enable you to take advantage of the conditional manufacturer domestic warranty\*.

Present this service book to your authorised Webb repair dealer, whenever a service or a warranty appraisal is required.

The booklet is applicable to the following products, in the UK only:

Ride On Lawn Tractors  
Cylinder Lawnmowers  
Petrol Rotary Lawnmowers  
Petrol Hand Held Range

Please register your machine using the following pages or at [www.webbgardenpower.co.uk](http://www.webbgardenpower.co.uk). By registering your machine, you agree to maintain the machine in accordance with the service schedules specified in this manual and services duly recorded. (Not applicable for Webb electric handheld machines). You may be asked to produce this booklet as proof of servicing in the event of a claim. Proof of purchase should also be kept as a reference.

Ensure you have the following information available from your machine product label. The two examples below can be found on your machine:



1. Model Number

2. Serial & Product Number

Please complete using BLOCK CAPITALS.  
Sections marked\* must be completed to validate Warranty.



# INSTRUCTION MANUAL

## **Users Statement of Warranty**

Each new machine is warranted against defective material or assembly of material under normal usage. The warranty applies to the original purchaser and covers faulty parts and the labour involved in replacing and repairing those parts, which are of original manufacture.

All claims must be accompanied by evidence of the date of purchase, such as a Sales Receipt showing that the product has been purchased from an approved retailer, it was brand new at time of purchase, which is within the warranty time period.

## **Period of Warranty**

### **Webb (Green Products)**

- a) 3 years from the original date of sale to the first domestic user. (2 years batteries & chargers)
- b) 90 days from the original date of sale to the professional/commercial user.
- c) 90 days from the original date of sale when used for hire.
- d) A reduced warranty period of 90 days applies to those items which are subject to normal wear and tear (e.g. but not limited to wheels, tyres, cutter bars, cylinders, cutting blades, blade boss, belts, cables, nylon line & spool, collection bags, engine spark plugs, electric plug fuses).
- e) Engines are supplied with a separate warranty to the machine. The engine manufacturers warranty statement which will be supplied within the engine instruction manual. All enquiries and warranty repairs should be discussed with the engine manufacturer or approved warranty repair dealer.
- f) 90 days from the original date of purchase for Replacement Spare Parts (unless normal wear & tear component, which are covered for 30 days).
- g) All machines' must be serviced within the first 12 & 24 months from the original date of purchase to comply with the warranty (if applicable), failure to do so will invalidate the 2<sup>nd</sup> & 3<sup>rd</sup> years of the warranty.

All warranty repairs must be undertaken by an authorised service dealer. These dealers have been accredited by GJ Handy (Trading) Ltd and agree to only use genuine parts and follow our repair procedures.

## **Not covered by this warranty**

- a) Error in assembly by user in accordance with manufacturers instructions.
- b) Incorrect operation of product in accordance with manufacturers instructions.
- c) The defect is due to accident, misuse, unauthorised modification or inexperienced repair.
- d) The warranty policy does not cover any depreciation or damages caused by ordinary wear, rusting or corrosion, lack of correct maintenance or operation, misuse, abuse, lack of transportation or accident.
- e) The warranty policy does not cover any costs necessary for the standard periodic maintenance services instructed by the operator's manual, or service parts replacement which would include oil, filters, tyres, belts, brake linings, fuses, blades, seals and other service parts unless it can be proven that the item has evidence of faulty manufacture.
- f) The warranty policy will not cover failure or damage caused as a result of parts or accessories being modified without the written approval of GJ Handy (Trading) Ltd.
- g) The warranty policy will not cover the unit if non-genuine parts have been fitted and as a result damage has occurred to the unit.

- h) The warranty policy is non-transferable and is only applicable to the original purchaser.

#### **Disclaimer**

- a) This warranty is only a remedy for defect of products. GJ Handy (Trading) Ltd will never warranty in terms of the merchantability or the fitness for a particular purpose.
- b) No person is authorised to make any warranties, representations or promises, expressed or implied, on behalf of GJ Handy (Trading) Ltd, or to modify the terms conditions or limitation of this warranty policy in any way.
- c) Neither GJ Handy (Trading) Ltd nor any company affiliated with GJ Handy (Trading) Ltd shall be liable in any event or manner whatsoever for incidental or consequential damages or injuries, including, but not limited to, loss of crops, loss of profit, out of pocket expenses or profits, rental of substitute equipment or other commercial losses.

#### **General**

- a) Most warrantable failures show up within the first few weeks of use. These failures are usually straightforward and warranty assessment is relatively easy.
- b) Failures relating to cutter decks and belts need careful investigation, as the cause may not always be straightforward. Look for damage to blades and pulleys especially when the cutter belt or blade boss have snapped or cracked as this could be due to impact damage.
- c) Customers should always refer to the operator/instruction manual when any disputed problem arises, you will find most areas covered within the manual.

## Protecting your machine

### *Maintenance*

Regular maintenance of your Webb machine is essential to ensure it operates, safely, efficiently and therefore reducing the environmental impact.

It is the owner's responsibility to ensure that their Webb machine is maintained at specific intervals. Any approved Webb service dealer can undertake a service, which are specialised in our products and will be aware of your particular machine and any technical updates which will save valuable time & money.

If you are using your machine in dry, dusty or high temperatures, you will need to service the machine more regularly.

### *Fuel (if applicable)*

Due to ongoing efforts by fuel companies to reduce emissions, unleaded petrol will oxidize & deteriorate in storage overtime, leaving residue from detergent components.

Fuel deterioration problems may occur when petrol is stored for over 30 days. If you are planning to store fuel for over 30 days, we recommend you add Handy Parts Sure-Start fuel stabilizer to fresh fuel after purchasing. Sure-Start cannot reconstitute stale fuel.

### *Storage*

When storing your machine for an extended period, we do recommend that you follow the instructions of engine instruction manual.

Always store the fuel in a clean, approved and sealed container. If the container is steel, ensure it is not corroded. If the container is not filled to its recommended capacity, air can accelerate fuel deterioration.

Always store fuel away from direct sunlight, in a dark, cool environment.



# INSTRUCTION MANUAL

Your servicing Webb approved dealer will stamp & date the below relevant sections, when the correct service actions have been completed.

PLEASE ENSURE THE SERVICE BOOK IS AVAILABLE FOR THE DEALER, DURING SERVICE WORK.

## 1st Service

This must be stamped by an approved service dealer to qualify for a free second year warranty.  
(Excluding the Webb Electric Handheld machines)

12 Months

A large, light gray rectangular area intended for a service stamp. The word "Date" is printed in a small, black, sans-serif font at the bottom center of this area.

Date

24 Months

A large, light gray rectangular area intended for a service stamp. The word "Date" is printed in a small, black, sans-serif font at the bottom center of this area.

Date

36 Months

A large, light gray rectangular area intended for a service stamp. The word "Date" is printed in a small, black, sans-serif font at the bottom center of this area.

Date

48 Months



60 Months



72 Months



 
84 Months




96 Months



108 Months



120 Months

 

132 Months





# INSTRUCTION MANUAL

If you have registered online, this form is not necessary.  
PLEASE POST THIS COPY TO THE ADDRESS OVERLEAF

## Product Information (\* Compulsory)

*Model No:	
*Product No:	
*Serial No:	
*Date of Purchase:	

## Personal Information (\* Compulsory)

*Title		*Forename		*Surname	
*House Number		*House Name			
*Address 1					
*Address 2					
*Town					
*County					
*Postcode					
Home Tel				Mobile Tel	
Email					

Age	18 to 25		26 to 35		36 to 45		46 to 60		61 to 80		81 & over	
*Usage	Domestic Use				Commercial/Professional/Hire Use							

\*Dealer Stamp (if available)

\*Selling Retailer (If dealer stamp not available)

*Dealer Name	
*Dealer Address	
*Date of Purchase	

Webb Lawnmowers privacy commitment to machine owners.

The information supplied, helps us to improve the products & services we provide, including information that we believe is relevant to your and/or your machine. We value your trust by giving us this information about yourself and we are committed to protecting your privacy.

Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding **PRODUCT RECALLS** specific to your machine. Please advise how you wish to be contacted for this specific reason only:

Post  Telephone  Email

From time to time Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding our products, services, offers or just opinions, which may be used for marketing, research or analysis purposes.

If you wish to be contacted by any of the following methods, please tick the relevant boxes:

Post  Telephone  Email

You may give Webb Lawnmowers notice in writing at any time that you no longer wish to receive direct marketing communications





**Service & Support: [cs@webbgardenpower.co.uk](mailto:cs@webbgardenpower.co.uk)**

**Webb, Murdock Road, Dorcan  
Swindon, Wiltshire SN3 5HY**

