



Webb [®] **eco**

WEV20X2LM43B4X

**43CM (17") HAND PUSH
CORDLESS 40V (2x20V)
ROTARY LAWNMOWER**

Product Number: 1938348002

en - ORIGINAL INSTRUCTIONS

ASSEMBLY REQUIRED
MINIMUM TWO PERSONS

Service & Support: 01793 333212

Before use please read & understand this manual; paying particular attention to the safety instructions before use.

Incorrect use of the product could put the operator or machine in danger.

Whilst every effort has been made to ensure the accuracy of information contained in this manual, our policy of continuous improvement determines the right to make modifications without prior warning.

Images are used for illustration purposes only.

ADVANCED 20V BATTERY TECHNOLOGY



INSTRUCTION MANUAL

Copyright Notice


Copyright © Handy Distribution

Permission is granted to reproduce this publication for personal & educational use only.

Commercial copying, redistribution, hiring or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Handy Distribution.

In all cases this copyright notice must remain intact.

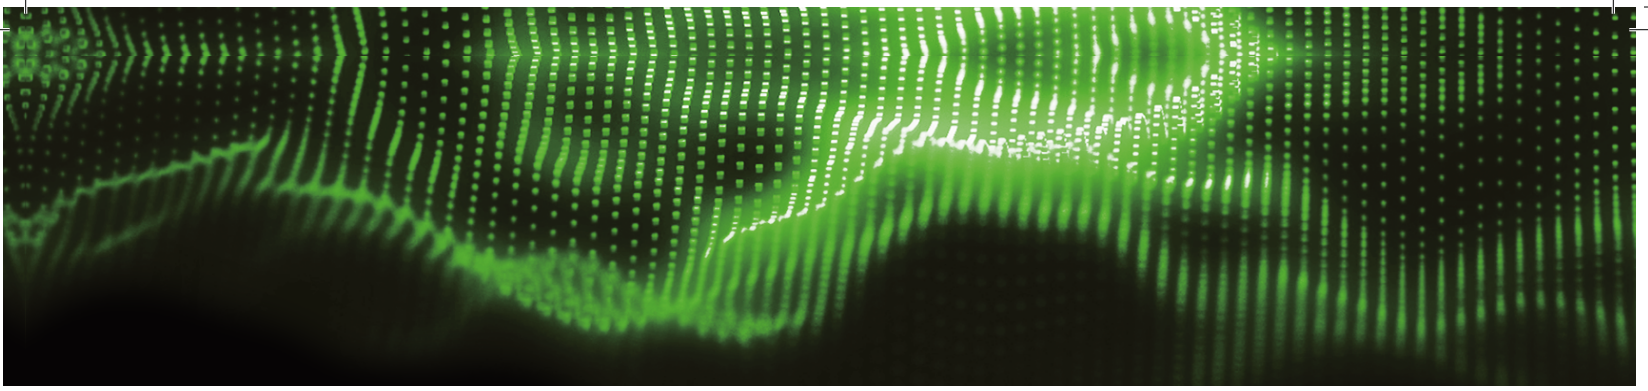

CONTENTS

SPECIFICATIONS

IMPORTANT INFORMATION

SAFETY SYMBOLS & INSTRUCTIONS

KNOW YOUR MACHINE

SET UP & PREPARATION FOR OPERATION

ASSEMBLY

OPERATION

MAINTENANCE, CLEANING & STORAGE

TROUBLE SHOOTING

PARTS DIAGRAM & LIST

WARRANTY

ASSEMBLY IS REQUIRED

- This product requires assembly before use.
- See “Assembly” section for instructions.
- Because of the weight and/or size of the machine, it is recommended that another adult is present to assist with the assembly.
- Inspect all components closely upon receipt to make sure no items are missing or damaged.



WARNING

Read this instruction manual carefully before operating this machine. Make sure that you are familiar with the controls and properly operate the machine. Following these instructions can reduce the risk of personal injury.



INSTRUCTION MANUAL

SPECIFICATIONS

LAWNMOWER	
Model No.	WEV20X2LM43B4X
Product No.	1938348001
Rated Voltage	40V d.c.
No-load Speed	3100 RPM
Protection	IPX1
Cutting Width	43cm (17")
No. of Cutting-Heights	6 – (25-35-45-55-65-75mm)
Grass-Bag Volume	50L
Charging Time	up to 100 min
Run Time	up to 60 min
CHARGER	
Model No.	WEV20DPC
Product No.	1938359001
Rating	input: 240V 50/60Hz output: 20V dc - 2.4A
Protection	IPX4
BATTERY	
Model No.	WEV20B4
Product No.	1938357001
Technical data	20V 4Ah 80Wh
Protection	IPX0

Recommended Operating Temperature	-10-40°C (14-104°F)
Recommended Storage Temperature	0-40°C (32-104°F)
Recommended Charging Temperature	5-35°C (41-95°F)



WARNING

Only use authorised batteries and chargers.
Use of other branded batteries and chargers may cause injury and/or fire.

The manufacturer reserves the right to change the product specification and livery according to continued product improvements.

Consistent with our policy of continuous improvement, The Handy reserves the right to change the design and configuration of any of its products without notice or obligation. Therefore, please treat the text and images in this manual for illustrative purposes only. They may in no case serve as a basis for any legal claim.


If you require any assistance with regards to the contents or operation of your machine, please contact us:

Tel: 01793 333212

Email: cs@webbgardenpower.co.uk

Opening Hours Weekdays: 8:00am - 5:00pm (CLOSED WEEKENDS, BANK HOLIDAYS & BUSINESS CLOSURES)



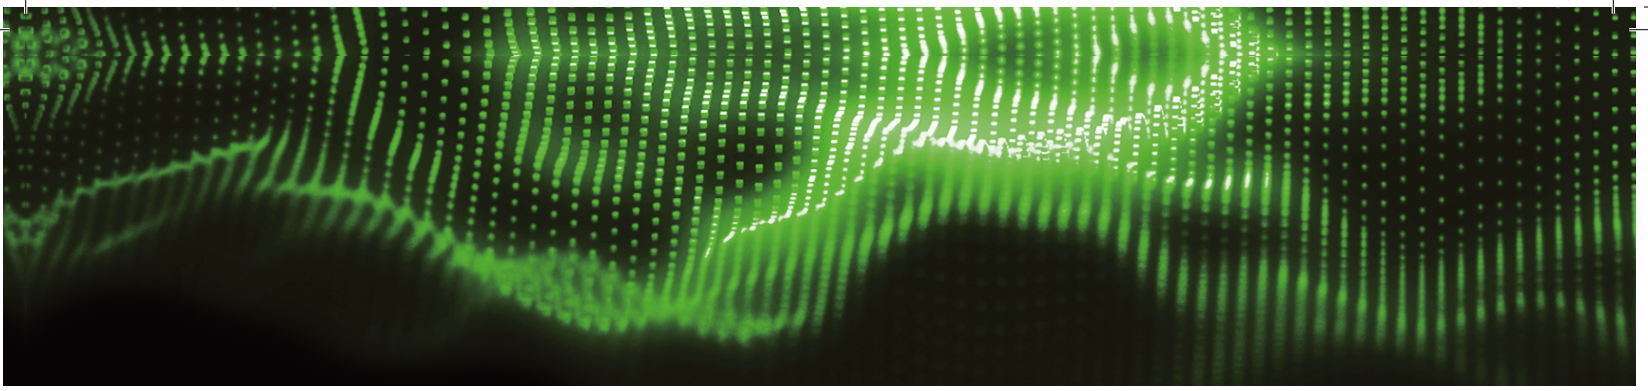

IMPORTANT INFORMATION

INTENDED USAGE

The basic version of the equipment is a cordless lawnmower intended for private use, i.e., for use in home and domestic gardening environments. It is designed for cutting natural grass in small to medium sized gardens. Any use not expressly permitted in this manual may damage the lawnmower and pose a serious danger to the user.

DO NOT CUT ANY OTHER FOILAGE OR MATERIAL.

The lawnmower is for private use only, whose annual operating time generally does not exceed 50 hours. Public facilities, sporting facilities and agricultural / forestry applications are excluded. Not to be used to trim bushes, hedges, and shrubs, to cut or shred climbing plants or lawns on roof gardens or in balcony boxes or to clean footpaths, nor must it be used as a chopper for shredding tree or hedge cuttings. Furthermore, the lawnmower must not be used as a cultivator or to level off uneven areas of ground, e.g., molehills. Please read this entire manual prior to operating the equipment. It instructs you how to safely and easily set up, operate and maintain your machine. Please be sure that you and any other persons who will operate the machine, always carefully follow the recommended safety practices. Failure to do so could result in personal injury or property damage.

IF NOT USED PROPERLY THIS MACHINE CAN BE DANGEROUS!

This machine can cause serious injury to the operator and others, the warning and safety instructions must be followed to ensure reasonable safety and efficiency in using this product. The operator is responsible for following the warning and safety instructions in this manual and on the machine. Never use the product unless the components are correctly positioned and operational.

TRAINING

Read the instructions carefully: Be familiar with the controls and the proper use of the equipment. Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the age of the operator. Keep in mind that the operator or user is responsible for accidents or hazards involving the machine that occur to other people or their property.



WARNING

The operator or user is responsible for accidents and injury or damage to third parties.

The equipment is allowed to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user/operator and not the manufacturer will be liable for any damage or injuries of any kind resulting from such misuse. Please note that our equipment has not been designed for use in commercial, hire, trade, or industrial applications. Our warranty will be 90 days from the original date of sale for commercial, hire, trade, or industrial businesses or for equivalent purposes.
























INSTRUCTION MANUAL

SAFETY SYMBOLS & INSTRUCTIONS





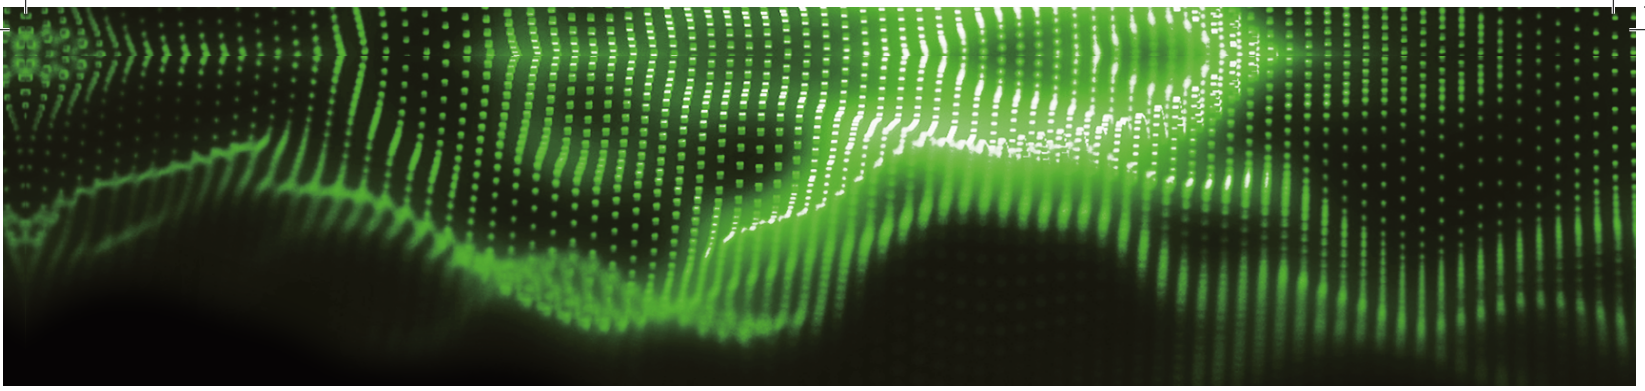



Read and understand the owner's manual and labels affixed to the machine. Learn its application and limitations as well as the specific potential hazards. Retain these instructions for future reference. The operator is responsible for following the warnings & instructions in this manual and on the product.

LAWNMOWER

 	<p>Read & understand operator's manual before using the machine. Failure to follow instructions could result in death or serious injury.</p> <p>Please keep in a safe place for future reference.</p>	 	<p>Whenever the machine is in use, safety glasses must be worn to safeguard against flying objects. Hearing protection must also be used to protect the users hearing. Face masks are also recommended to avoid inhalation of debris.</p>
	<p>Keep all bystanders & animals away from the machine during operation. If approached, stop the machine immediately.</p>	 	<p>SHARP ROTATING BLADE Always wear gloves to protect your hands. Wear foot protection or sensible shoes when using the machine.</p>
	<p>Moving Parts - Risk of Injury Rotating parts can contact or entangle hands, feet, hair, clothing or accessories.</p> <p>Traumatic amputation or severe laceration can result.</p>	  	<p>Do not expose to rain or damp conditions.</p> <p>Failure to use it in dry conditions and to observe safe practices can result in electric shock.</p>
	<p>Keep guards in place and in working order. Replace damaged, missing or failed parts before using it.</p>		<p>Warning; Disconnect battery before maintenance.</p>
	<p>Safety alert symbol. Used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury.</p>	 DANGER	<p>Indicates an imminently hazardous situation which, if not avoided, will result in serious injury.</p>
 WARNING	<p>Indicates a potentially hazardous situation which, if not avoided, could result in serious injury.</p>	 CAUTION	<p>Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.</p>
CAUTION	<p>Used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.</p>		<p>Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.</p>
	<p>CE Marking - the product meets demand and regulations set by the EU.</p>		<p>Noise Level - See label on machine</p>

 

CHARGER


	<p>Read & understand operator's manual before using the machine. Failure to follow instructions could result in death or serious injury. Please keep in a safe place for future reference.</p>	 WARNING	<p>Indicates a potentially hazardous situation which, if not avoided, could result in serious injury.</p>
	<p>For indoor use only.</p>		<p>Double Insulation</p>
	<p>Fuse</p>		<p>Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.</p>
	<p>Positive Terminal</p>		<p>Negative Terminal</p>

NOISE

Tested to fulfill all relevant provisions of Noise Emission Directive 2000/14/EC amended by 2005/88/EC:
Guaranteed Sound Power Level (L_{WA}): 96.0 dB(A)

NOTE: The declared noise emission value(s) has been measured in accordance with a standard test method and may be used for comparing one tool with another.

NOTE: The declared noise emission value(s) may also be used in a preliminary assessment of exposure.


WARNING
Wear ear protection.


The noise emission during actual use of the power tool can differ from the declared value(s) depending on the ways in which the tool is used especially what kind of workpiece is processed.
Be sure to identify safety measures to protect the operators that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time).

VIBRATION

The vibration total value (tri-axial vector sum) determined according to EN 60335-2-77, IEC 62841-4-3:
Vibration emission (a_h): 2.5 m/s² or less Uncertainty (K): 1.5 m/s².

NOTE: The declared vibration total value(s) has been measured in accordance with a standard test method and may be used for comparing one tool with another.

NOTE: The declared vibration total value(s) may also be used in a preliminary assessment of exposure.


WARNING

The vibration emission during actual use of the power tool can differ from the declared value(s) depending on the ways in which the tool is used especially what kind of workpiece is processed.
Be sure to identify safety measures to protect the operators that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time).



INSTRUCTION MANUAL

GENERAL SAFETY RULES



Before you put the machine into operation, you must read this instruction manual. When using this machine, observe the following safety instructions to exclude the risk of personal injury or material damage. Please also observe the special safety instructions in the respective chapters. Where applicable, follow the legal directives or regulations for the prevention of accidents in relation to the use of this machine.



WARNING

When using petrol tools, basic safety precautions should always be followed to reduce the risk of serious personal injury and/or damage to the unit.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE.

The term "power tool" in the warnings refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

WORK AREA SAFETY


1. Keep work area clean and well lit. Cluttered or dark areas invite accidents.
2. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
3. Keep children, pets and bystanders away while operating a power tool. Distractions can cause you to lose control.

ELECTRICAL SAFETY

1. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
2. Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
3. Do not operate the lawnmower in rain or wet conditions. This may increase the risk of electric shock.
4. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
5. When operating a power tool outdoors, use an extension cable suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
6. If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.
7. Power tools can produce electromagnetic fields (EMF) that are not harmful to the user. However, users of pacemakers and other similar medical devices should contact the maker of their device and/ or doctor for advice before operating this power tool.

PERSONAL SAFETY

1. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
2. Use personal protective equipment. Always wear eye protection. Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
3. Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
4. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

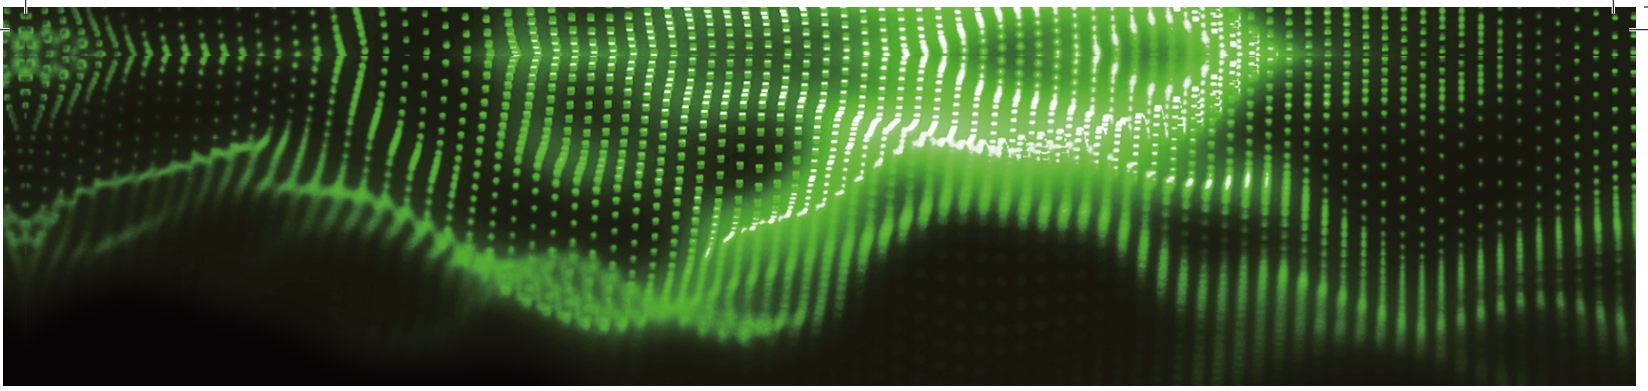

5. Do not overreach. Always keep proper footing and balance. This enables better control of the power tool in unexpected situations.
6. Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
7. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.
8. Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.
9. Always wear protective goggles to protect your eyes from injury when using power tools. The goggles must comply with EN 166 in UK & Europe.

POWER TOOL USE AND CARE

1. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
2. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
3. Disconnect the plug from the power source and/or remove the battery, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
4. Store idle power tools out of the reach of children & do not allow persons unfamiliar with the power tool or these instructions to operate. Power tools are dangerous in the hands of untrained users.
5. Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
6. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
7. Use the power tool, accessories and tool bits etc. in accordance with these instructions, considering the working conditions and the work to be performed. Use of the power tool for operations different from its tested operation could result in a hazardous situation.
8. Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.
9. When using the tool, do not wear cloth work gloves which may be entangled. The entanglement of cloth work gloves in the moving parts may result in personal injury.

BATTERY TOOL USE AND CARE

1. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery may create a risk of fire when used with another battery.
2. Use power tools only with specifically designated batteries. Use of any other batteries may create a risk of injury and fire.
3. When battery is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
4. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
5. Do not use a battery or tool that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion, or risk of injury.
6. Do not expose a battery or tool to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
7. Follow all charging instructions and do not charge the battery or tool outside the temperature range specified in the instructions. Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.



INSTRUCTION MANUAL

SERVICE

1. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.
2. Never service damaged batteries.
3. Follow instruction for lubricating and changing accessories.

CORDLESS LAWNMOWER SAFETY WARNINGS

1. Do not use the lawnmower in bad weather conditions, especially when there is a risk of lightning. This decreases the risk of being struck by lightning.
2. Thoroughly inspect the area for wildlife where the lawnmower is to be used. Wildlife may be injured by the lawnmower during operation.
3. Thoroughly inspect the area where the lawnmower is to be used and remove all stones, sticks, wires, bones, and other foreign objects. Thrown objects can cause personal injury.
4. Before using the lawnmower, always visually inspect to see that the blade and the blade assembly are not worn or damaged. Worn or damaged parts increase the risk of injury.
5. Check the grass catcher frequently for wear or deterioration. A worn or damaged grass catcher may increase the risk of personal injury.
6. Keep guards in place. Guards must be in working order and be properly mounted. A guard that is loose, damaged, or is not functioning correctly may result in personal injury.
7. Keep all cooling air inlets clear of debris. Blocked air inlets may result in overheating or risk of fire.
8. While operating the lawnmower, always wear non-slip and protective footwear. Do not operate the lawnmower when barefoot or wearing open sandals. This reduces the chance of injury to the feet from contact with the moving blade.
9. While operating the lawnmower, always wear long trousers. Exposed skin increases the likelihood of injury from thrown objects.
10. Do not operate the lawnmower in wet grass. Walk, never run. This reduces the risk of slipping and falling which may result in personal injury.
11. Do not operate the lawnmower on excessively steep slopes. This reduces the risk of loss of control, slipping and falling which may result in personal injury.
12. When working on slopes, always be sure of your footing, always work across the face of slopes, never up or down and exercise extreme caution when changing direction. This reduces the risk of loss of control, slipping and falling which may result in personal injury.
13. Use extreme caution when reversing or pulling the lawnmower towards you. Always be aware of your surroundings. This reduces the risk of tripping during operation.
14. Do not touch blades and other hazardous moving parts while they are still in motion. This reduces the risk of injury from moving parts.
15. When clearing jammed material or cleaning the lawnmower, make sure all power switches are off, and the battery is disconnected. Unexpected operation of the lawnmower may result in serious personal injury.

IMPORTANT SAFETY INSTRUCTIONS




WARNING

DO NOT let comfort or familiarity with product (gained from repeated use) replace strict adherence to safety rules for the subject product.

MISUSE or failure to follow the safety rules stated in this instruction manual may cause serious personal injury.

TRAINING

1. Read the instructions carefully. Be familiar with the controls and the proper use of the lawnmower.
2. Never allow children or people unfamiliar with these instructions to use the lawnmower. Local regulations can restrict the age of the operator.
3. Never operate the lawnmower while people, especially children, or pets are nearby.
4. Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

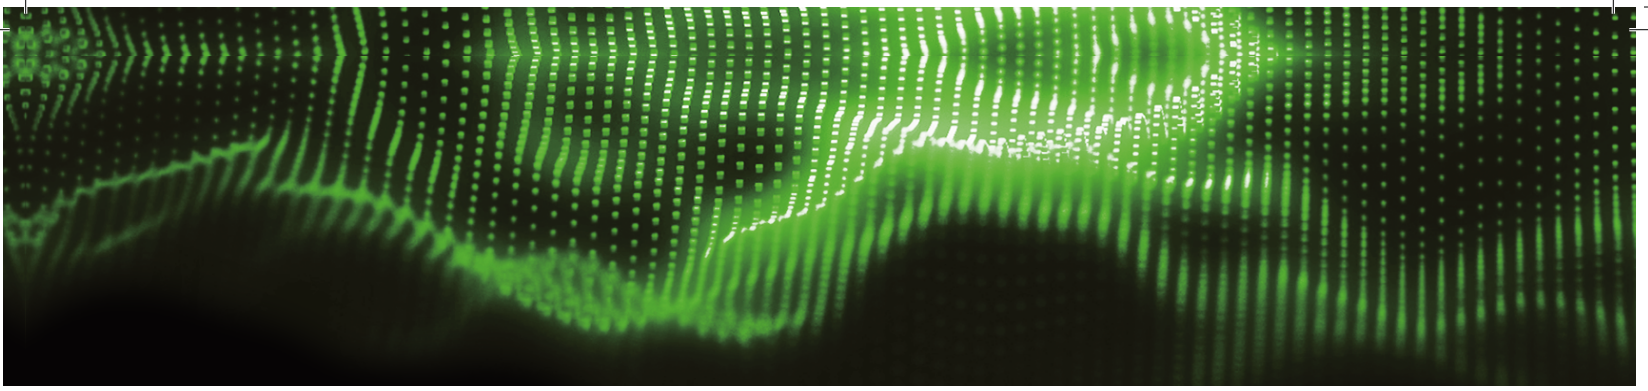

5. Children should be supervised to ensure that they do not play with the lawnmower.
6. Physical condition - Do not operate lawnmower while under the influence of drugs, alcohol, or any medication.

PREPARATION

1. While operating the lawnmower, always wear substantial footwear and long trousers. Do not operate when barefoot or wearing open sandals. Avoid wearing clothing or jewellery that is loose fitting or that has hanging cords or ties. They can be caught in moving parts.
2. Before use, always visually inspect the lawnmower for damaged, missing or misplaced guards or shields.
3. Be sure the area is clear of other people before mowing. Stop the lawnmower if anyone enters the area.
4. Do not start the lawnmower until it is ready to be used.
5. Always wear protective goggles to protect your eyes from injury when using power tools. The goggles must comply with EN 166 in UK & Europe.
6. Check the blades or blade bolts carefully for cracks or damage before operation. Replace cracked or damaged blades or blade bolts immediately.
7. Remove foreign matters such as rocks, wire, bottles, bones and large sticks from the work area before mowing to prevent personal injury or damage to the lawnmower.
8. Objects struck by the cutting blade can cause severe injuries to persons. The cutting area should always be carefully examined and cleared of all objects prior to each mow.
9. Watch for holes, ruts, bumps, rocks, or other hidden objects. Uneven terrain could cause a slip and fall accident. Tall grass can hide obstacles.
10. Use personal protective equipment. Always wear eye protection. Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.

OPERATION

1. Do not overreach. Always keep your balance. Walk, never run.
2. Always be sure of the footing on slopes. Mow across the face of slopes, never up and down. Exercise extreme caution when changing direction on slopes. Do not mow excessively steep slopes over 15° degrees gradient.
3. Stop the lawnmower and remove the battery, and make sure that all moving parts have come to a complete stop:
 - whenever you leave the lawnmower,
 - before clearing blockages or unclogging chute,
 - before checking, cleaning or working on the lawnmower,
 - after striking a foreign object. Inspect the lawnmower for damage and make repairs before restarting and operating the lawnmower,
 - whenever the lawnmower starts vibrating abnormally.
4. Never operate the lawnmower with defective guards or shields, or without safety devices, for example deflectors and/or grass basket, in place.
5. Avoid using the lawnmower in bad weather conditions, especially when there is a risk of lightning.
6. Always wear eye protection and stout shoes while operating the lawnmower.
7. Operate the lawnmower only in daylight or in good artificial light.
8. Start the lawnmower carefully according to the instructions and with feet well away from the blade(s).
9. Take care against injury to feet and hands from the lawnmower blades.
10. Always ensure that the ventilation openings are kept clear of debris.
11. Use extreme caution when reversing or pulling the lawnmower towards you.
12. Stop the lawnmower, remove the battery, if the lawnmower has to be tilted for transportation, crossing surfaces other than grass, and when transporting the lawnmower to and from the area to be used.
13. Do not tilt the lawnmower when switching on the motor, except if the mower has to be tilted for starting. In this case, do not tilt it more than absolutely necessary and lift only the part which is away from the operator. Always ensure that both hands are in the operating position before returning the lawnmower to the ground.
14. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
15. Do not transport the lawnmower while it is turned on.
16. Avoid operating the lawnmower in wet grass.
17. Always keep a firm hold on the handle.




INSTRUCTION MANUAL

18. Do not grasp the exposed cutting blades or cutting edges when picking up or holding the lawnmower.
19. Keep hands and feet away from rotating blades. Caution - Blades coast after the lawnmower is switched off.
20. Stop operation immediately if you notice anything unusual. Switch off the lawnmower and remove the battery. Then inspect the machine.
21. Never attempt to make cutting height adjustments while the lawnmower is running. Switch off the machine, remove the battery and then adjust cutting height.
22. Release OPC/Brake lever and wait for blade rotation to stop before crossing driveways, paths, roads, and any gravel-covered areas. Also remove the battery if you leave the lawnmower, reach to pick up or remove something out of your way, or for any other reason that may distract you from what you are doing.
23. If the lawnmower strikes a foreign object, follow these steps:
 - Stop the lawnmower, release the OPC/Brake lever and wait until the blade comes to a complete stop.
 - Remove the battery.
 - Thoroughly inspect the lawnmower for any damage.
 - Replace the blade if it is damaged in any way. Repair any damage before restarting and continuing to operate the lawnmower.
24. Do not start the lawnmower when standing in front of the discharge chute/opening.
25. If the lawnmower starts to vibrate abnormally (check immediately)
 - inspect for damage,
 - replace or repair any damaged parts,
 - check for and tighten any loose parts.
26. Never direct discharged material toward anyone. Avoid discharging material against a wall or obstruction. Material may ricochet back toward the operator. Stop the blade when crossing gravel surfaces.
27. Do not pull the lawnmower backwards unless absolutely necessary. When you are compelled to back the lawnmower from a fence or other similar obstruction, look down and behind before and while moving backwards.
28. Shut the motor off and wait until the blade comes to a complete stop before removing the battery to empty the grass catcher. Beware that the blades coast after the OPC/Brake lever has been released and motor turned off.
29. When you use the machine on muddy ground, wet slope, or slippery place, pay attention to your footing.
30. Do not submerge the machine into a puddle.
31. When operating the machine, pay attention to piping and wiring.

MAINTENANCE & STORAGE

1. Replace worn or damaged parts for safety. Use only genuine replacement parts and accessories.
2. Inspect and maintain the lawnmower regularly.
3. When not in use, store the lawnmower out of the reach of children.
4. Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
5. Check the collector frequently for wear or deterioration. For storage, always make sure the collector is empty. Replace a worn collector with a new factory replacement for safety.
6. Use only the manufacturer genuine blades specified in this manual.
7. Be careful during adjustment of the lawnmower to prevent entrapment of the fingers between moving blades and fixed parts of the machine.
8. Check the blade mounting bolt at frequent intervals for proper tightness.
9. Always allow the lawnmower to cool down before storing.
10. When servicing the blades be aware that, even though the battery is removed and machine is switched off, the blades can still be moved manually.
11. Never remove or tamper with safety devices. Check their proper operation regularly. Never do anything to interfere with the intended function of a safety device or to reduce the protection provided by a safety device.
12. Do not leave the machine unattended outdoors in the rain.
13. When storing the machine, avoid direct sunlight and rain, and store it in a place where it does not get hot or humid. Recommended storage temperature 0-40°C (32-104°F).

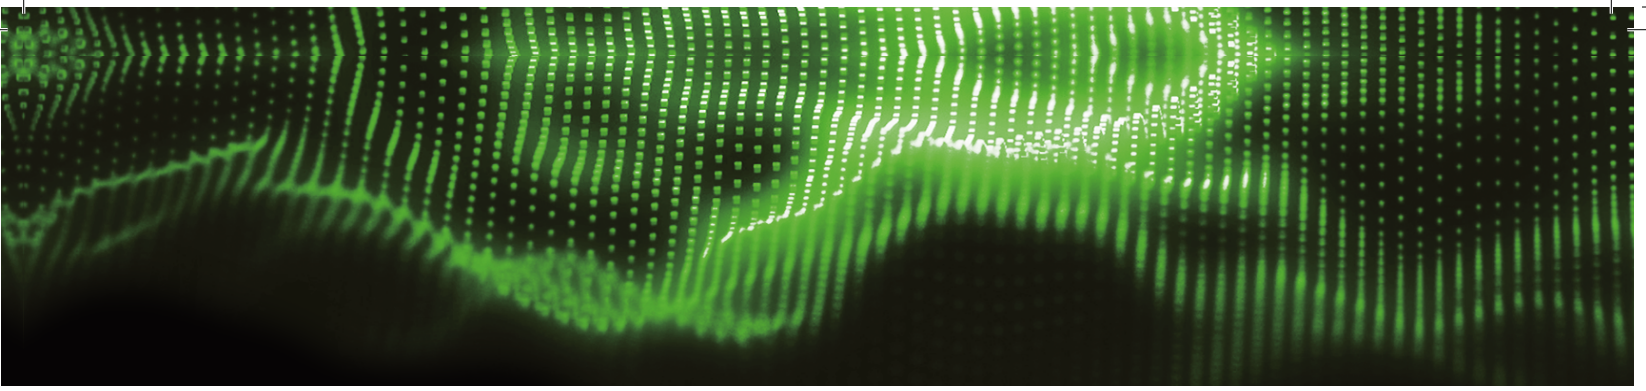

BATTERY TOOL AND CARE

1. Recharge only with the charger specified by Webb. A charger that is suitable for one type of battery may create a risk of fire when used with another battery.
2. Use power tools only with specifically designated batteries. Use of any other batteries may create a risk of injury and fire.
3. When battery is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
4. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
5. Do not use a battery, charger or tool that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
6. Do not expose a battery, charger or tool to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
7. Follow all charging, operation and storage instructions. Do not charge the battery outside the temperature range specified in the instructions. Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire. Recommended Charging Temperature 5-35°C. (41-95°F).

ELECTRICAL & BATTERY SAFETY

1. Do not dispose of the battery(ies) in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
2. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if it is swallowed.
3. Do not charge the battery in rain, or in wet locations.
4. Do not charge the battery outdoors.
5. Do not handle the charger, including charger plug, and charger terminals with wet hands.
6. Do not replace the battery in the rain.
7. Do not wet the terminal of the battery with liquid such as water or submerge the battery. Do not leave the battery in the rain, or charge, use, or store the battery in a damp or wet place. If the terminal gets wet or liquid enters inside of battery, the battery may be short circuited and there is a risk of overheating, fire, or explosion.
8. After removing the battery from the machine or charger, be sure to attach the battery cover to the battery and store it in a dry place.
9. Do not replace the battery with wet hands.
10. Avoid dangerous environments. Do not use the machine in damp or wet locations or expose it to rain. Water entering the machine will increase the risk of electric shock.

SERVICE

1. Have your power tool serviced by a Webb Service Dealer or a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.
2. Never service damaged batteries.



WARNING

DO NOT let comfort or familiarity with product (gained from repeated use) replace strict adherence to safety rules for the subject product.

MISUSE or failure to follow the safety rules stated in this instruction manual may cause serious personal injury.



INSTRUCTION MANUAL

IMPORTANT SAFETY INSTRUCTIONS FOR BATTERIES

1. Before using a battery, read all instructions and cautionary markings on (1) battery charger, (2) battery, and (3) product using battery.
2. Do not disassemble or tamper with the battery. It may result in a fire, excessive heat, or explosion.
3. If operating time has become excessively shorter, stop operating immediately. It may result in a risk of overheating, possible burns and even an explosion.
4. If electrolyte gets into your eyes, rinse them out with clear water and seek medical attention right away. It may result in loss of your eyesight.
5. Do not short the battery:
 - Do not touch the terminals with any conductive material.
 - Avoid storing battery in a container with other metal objects such as nails, coins, etc.
 - Do not expose battery to water or rain.

A battery short can cause a large current flow, overheating, possible burns and even a breakdown.

6. Do not store or use the tool & battery in locations where the temperature may reach or exceed 40°C (104°F).
7. Do not incinerate the battery even if it is severely damaged or is completely worn out. The battery can explode in a fire.
8. Do not nail, cut, crush, throw, drop the battery, or hit against a hard object to the battery. Such conduct may result in a fire, excessive heat, or explosion.
9. Do not use a damaged battery.
10. The contained lithium-ion batteries are subject to the Dangerous Goods Legislation requirements. For commercial transports e.g. by third parties, forwarding agents, special requirement on packaging and labeling must be observed. For preparation of the item being shipped, consulting an expert for hazardous material is required. Please also observe more detailed national regulations. Tape or mask off open contacts and pack up the battery in such a manner that it cannot move around in the packaging.
11. When disposing of the battery, remove it from the tool and dispose of it in a safe place. Follow your local regulations relating to disposal of lithium-ion batteries.
12. Use the batteries only with the products specified by Webb. Installing the batteries to non-compliant products may result in a fire, excessive heat, explosion, or leak of electrolyte.
13. If the tool is not used for a long period of time, the battery must be removed from the tool.
14. During and after use, the battery may take on heat which can cause burns or low temperature burns. Pay attention to the handling of hot batteries.
15. Do not touch the terminal of the tool immediately after use as it may get hot enough to cause burns.
16. Do not allow clippings, dust, or soil stuck into the terminals, holes, and grooves of the battery. It may cause heat, catch fire, burst and malfunction of the tool or battery, resulting in burns or personal injury.
17. Unless the tool supports the use of near high-voltage electrical power lines, do not use the battery near high-voltage electrical power lines. It may result in a malfunction or breakdown of the tool or battery.
18. Keep the battery away from children.




CAUTION

ONLY USE GENUINE WEBB BATTERIES

Use of non-genuine Webb batteries, or batteries that have been altered, may result in the battery bursting causing fires, personal injury and damage. It will also void the Webb warranty for the Webb tool and charger.

TIPS FOR MAINTAINING MAXIMUM BATTERY LIFE

1. Charge the battery before completely discharged. Always stop tool operation and charge the battery when you notice less tool power.
2. Never recharge a fully charged battery. Overcharging shortens the battery service life.
3. Charge the battery with room temperature at 10°C-40°C (50°F-104°F). Let a hot battery cool down before charging it.
4. When not using the battery, remove it from the tool or the charger.
5. Charge the battery if you do not use it for a long period (more than three months).

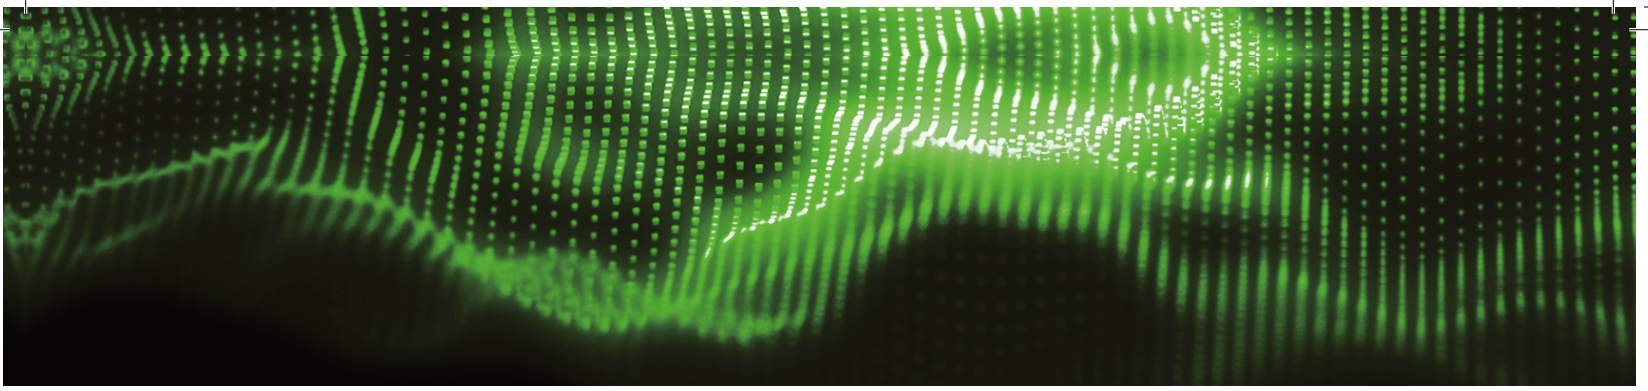

IMPORTANT SAFETY INSTRUCTIONS FOR BATTERIES


1. Before charging, read the instructions.
2. After charging, disconnect the charger from the mains supply. Then remove the battery from the charger.
3. Do not charge a leaking battery.
4. Do not use chargers for works other than those for which they are designed.
5. Before charging, ensure your charger is matching the local AC supply.
6. For indoor use, or do not expose to rain.
7. The charger must be protected from moisture.
8. Do not use the charger in the open.
9. Do not short out the contacts of the battery or charger.
10. Respect the polarity "+/-" when charging.
11. Do not open the unit and keep out of the reach of children.
12. Do not charge the batteries of other manufactures or ill-suited models.
13. Ensure that the connection between the charger and battery is correctly positioned and is not obstructed by foreign bodies.
14. Keep charger's slots free of foreign objects and protect against dirt and humidity. Store in a dry and frost-free place.
15. When charging batteries, ensure that the battery is in a well-ventilated area and away from inflammable materials. Batteries can get hot during charging. Do not overcharge any batteries. Ensure that batteries and chargers are not left unsupervised during charging.
16. Do not recharge non-rechargeable batteries, as they can overheat and break.
17. Longer life and better performance can be obtained if the battery is charged when the air temperature is between 18°C and 24°C. Do not charge the battery in air temperatures below 5°C, or above 35°C. This is important as it can prevent serious damage to the battery.
18. Charge only authorised Webb 20v Lithium-ion batteries.




INSTRUCTION MANUAL

KNOW YOUR MACHINE – WEV20X2LM43B4X

1. Handle Soft Grip	2. Dual Port Charger & 3-Pin Plug
3. OPC/Brake Lever	4. Safety Button
5. Lower Handle	6. 50L Grass Collector
7. Quick Release Handle Fixing Upper	8. Single Height Adjuster Lever
9. Quick Release Handle Fixing Lower	10. Battery Housing Cover
11. Rear Wheel	12. Front Wheel
13. Grass Collector Full Indicator	14. 2x 20v 4Ah Battery
15. Mulch Plug	

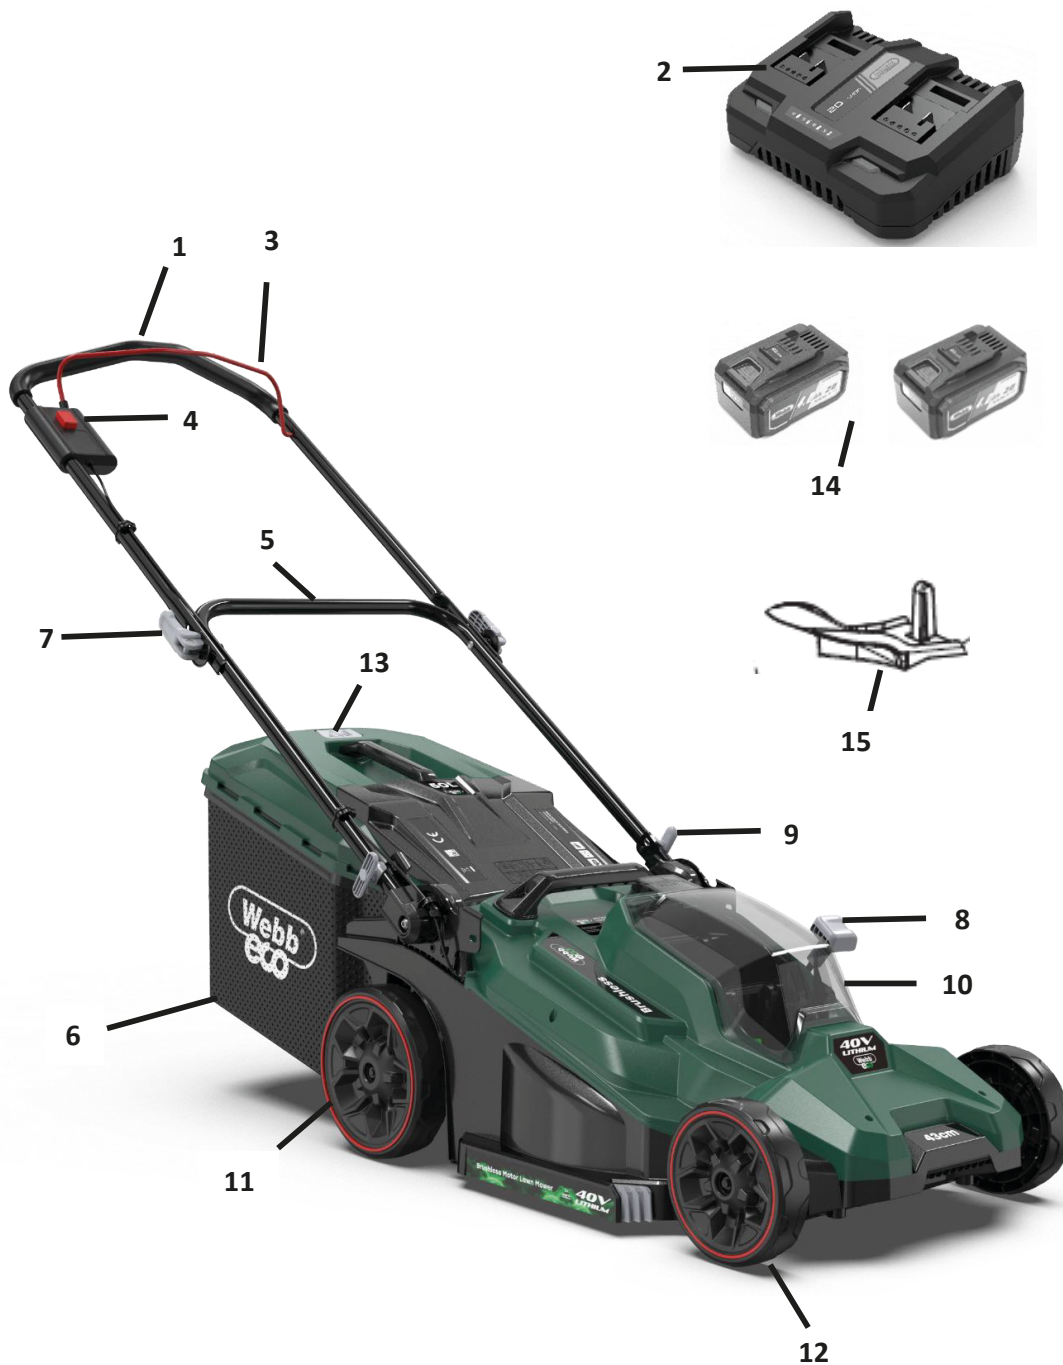

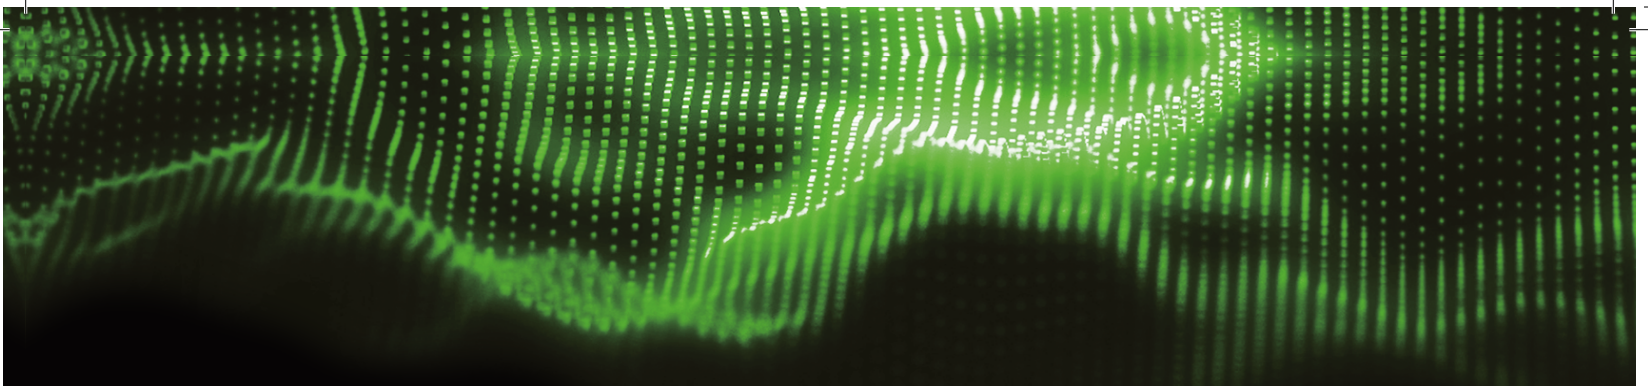

SET UP & PREPARATION FOR OPERATION

This product must be assembled correctly before use. Carefully remove the product and any accessories from the carton. Inspect the product carefully to make sure there are no breakages or missing items during shipping. Do not discard the packing material and carton until you have carefully inspected and satisfactorily operated the product.



WARNING

If any parts are damaged or missing, do not operate this product until the parts are replaced. Failure to heed this warning could result in serious personal injury.

Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

Read and follow all instructions for assembly and operation. Failure to properly assemble this equipment could result in serious injury to the user or bystanders, or cause equipment damage.



WARNING

The device and packaging materials are not toys!

Children must not be allowed to play with plastic bags, film, sharp objects, and small parts!

There is a risk of cuts, swallowing and suffocation!

Always be sure that the battery is removed before carrying out any work on the lawnmower. Failure to remove the battery may result in serious personal injury from accidental start-up.

Never start the lawnmower unless it is completely assembled. Operation of the machine in a partially assembled state may result in serious personal injury from accidental start-up.

ASSEMBLY

ASSEMBLY/PRE-OPERATION

This manual gives instructions on the correct assembly and safe use of your machine. It is important that you read these instructions carefully. If necessary, obtain assistance to remove from packaging, take care when carrying the lawnmower to the lawn, the blades are sharp.

REMOVE LAWNMOWER FROM CARTON

Roll or lift (minimum two-person lift) the lawnmower out of the carton and check thoroughly for additional loose parts. Please ensure that you have all the necessary parts, before commencing with the assembly. In the unlikely event that you are missing a component, please do contact us for assistance.

If you require any assistance with regards to the contents or operation of your machine, please contact us:

Tel: 01793 333212

Email: cs@webbgardenpower.co.uk

Opening Hours Weekdays: 8:00am - 5:00pm (CLOSED WEEKENDS, BANK HOLIDAYS & BUSINESS CLOSURES)



WARNING

Always be sure that the battery is removed before carrying out any work on the lawnmower. Failure to remove the battery may result in serious personal injury from accidental start-up.

Never start the lawnmower unless it is completely assembled. Operation of the machine in a partially assembled state may result in serious personal injury from accidental start-up.




INSTRUCTION MANUAL

LOWER HANDLE

NOTE: When installing handles, position the cable so that it is not caught by anything between the handles. If the cable is damaged, the lawnmower switch may not work.

1. Pull the quick adjustment knob (A) outwards and turn it 90° clockwise.
2. Fold the lower handle (B) upwards and adjust to the desired height. Now turn the quick adjustment knob (A), 90° to place the handle into position.

Figure 1

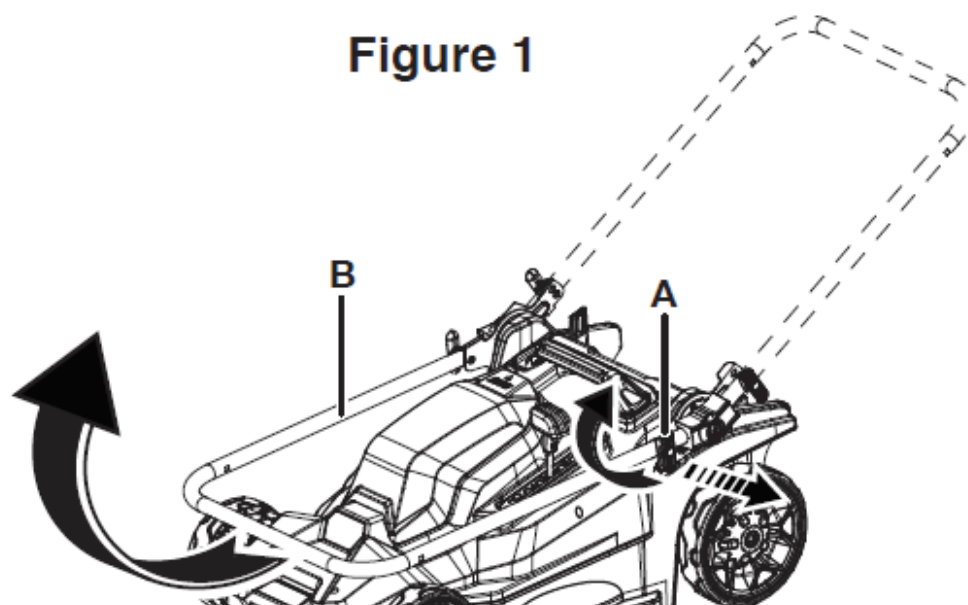

UPPER HANDLE


NOTE: We suggest another person is used to assist with this action. Ensure the upper handle is firmly held so that it does not fall and cause injury.


NOTE: Be careful not to trap any cables in the handle folding assembly. Damage caused to the cables due to crimping will not be covered under warranty.

1. Align the hole of the upper handle with the hole in the lower handle and insert the bolt (C) through the quick release holder (B) and quick release handle (A).
2. Rotate the quick release handle clockwise to the appropriate position.
3. Fold the quick release handle to secure.

NOTE: If the quick release handle cannot be folded, you have over tightened it. Rotate the quick release handle anti-clockwise to loosen until it can be folded.

Figure 2

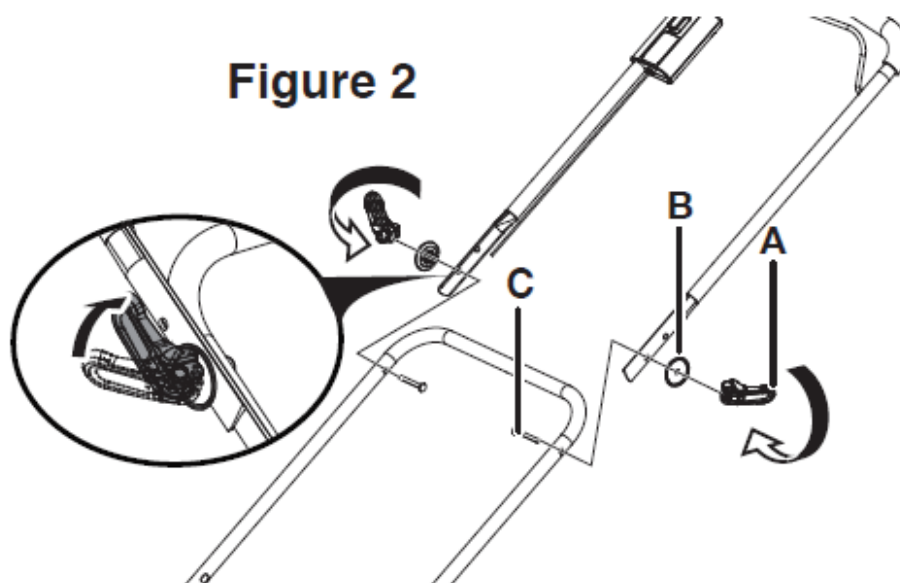

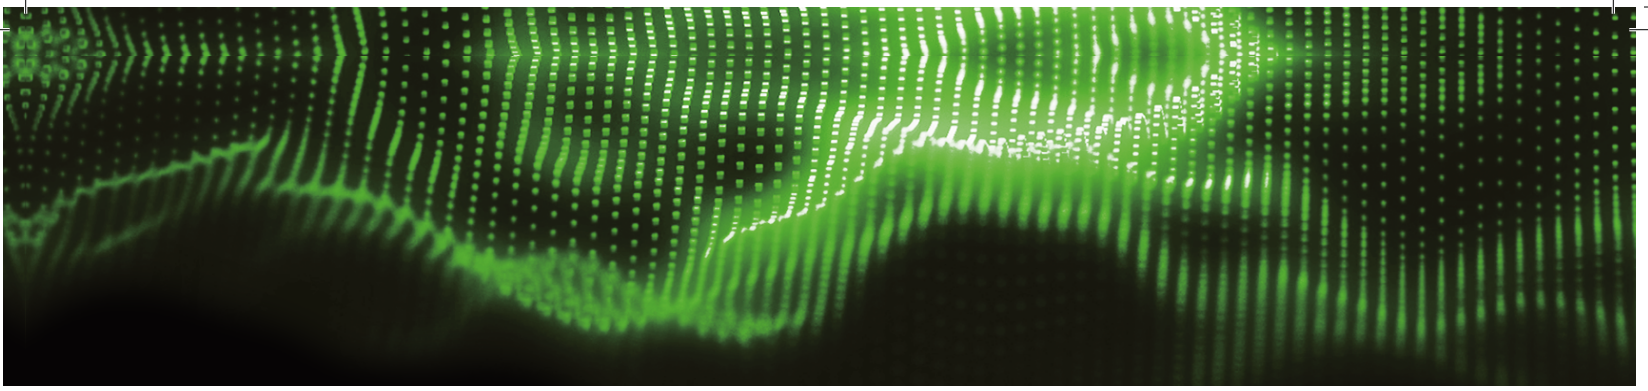

HANDLE HEIGHT ADJUSTMENT



WARNING

Do not touch rotating blade.



CAUTION

Before removing the bolts, hold the upper handle firmly. Otherwise, the handle may fall and cause an injury.

The handle height can be adjusted in two levels.

1. Remove the quick release handle and bolt.
2. Align the hole of the upper handle with the hole in the lower handle and insert the bolt (C) through the quick release holder (B) and quick release handle (A).
3. Rotate the quick release handle clockwise to the appropriate position.
4. Fold the quick release handle to secure.

NOTE: If the quick release handle cannot be folded, you have over tightened it. Rotate the quick release handle anti-clockwise to loosen until it can be folded.

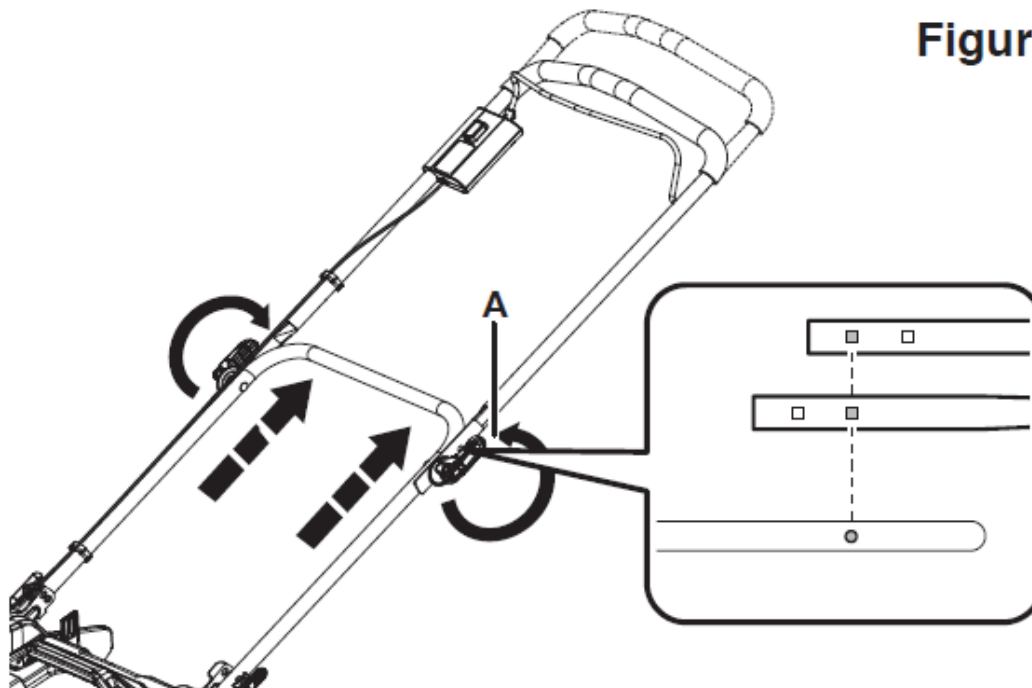


Figure 11



INSTRUCTION MANUAL

CABLE TIDY

1. Place the cable tidy over the handle assembly and house the cable into the tidy. Position the cable as shown below.

NOTE: When installing the lower cable tidy, it should be positioned as close as possible to the end of the lower handle so that the cable is not trapped when folded.

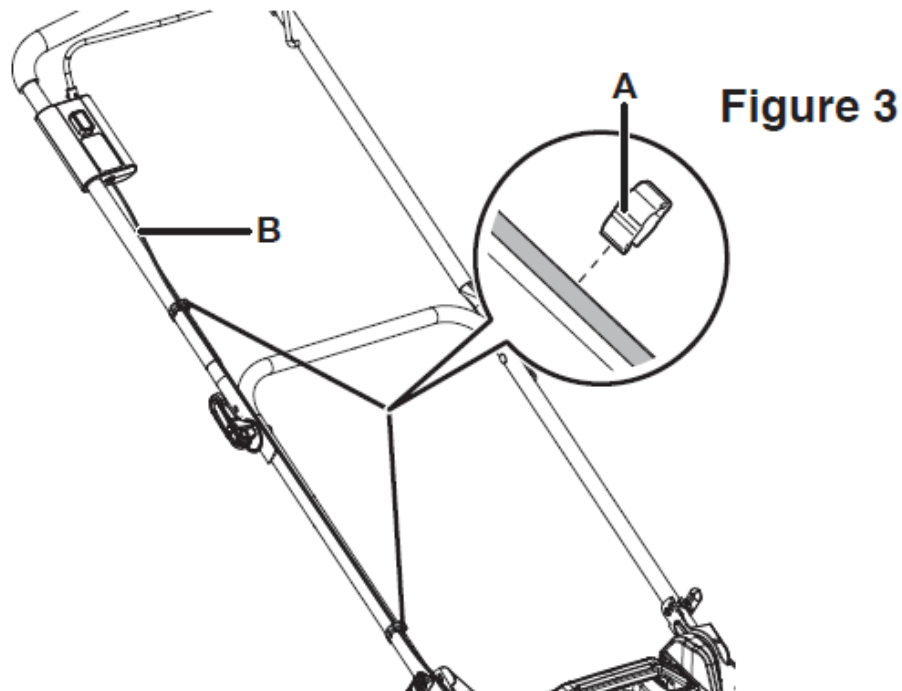


Figure 3

GRASS COLLECTOR ASSEMBLY

1. Pull the collector securing clip (A) over the collector frame (B) to secure in place.
2. Lift the collector floor to the frame and secure in place.



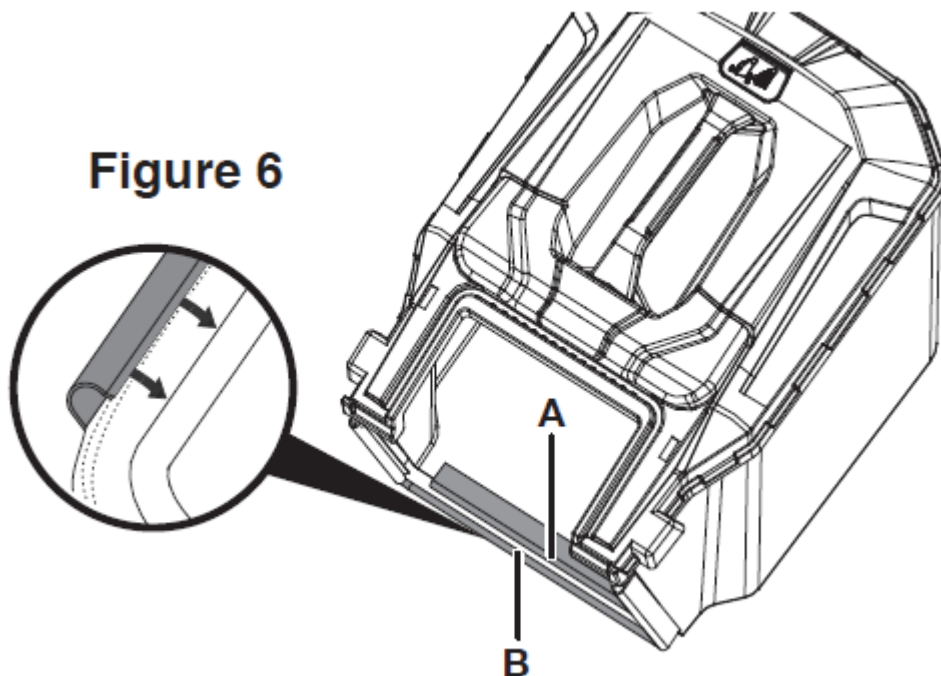


Figure 6

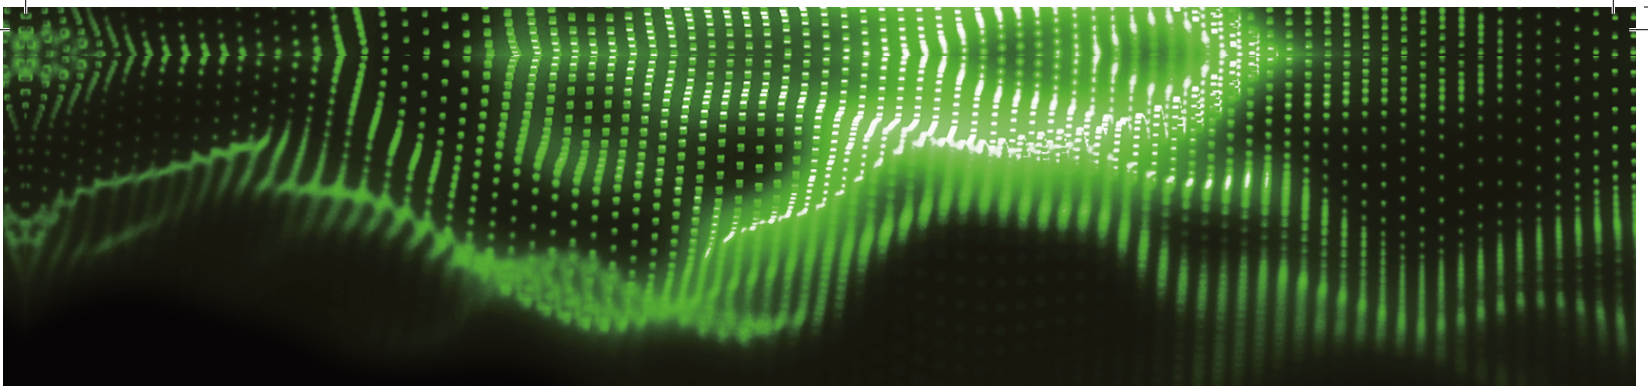

INSTALLING GRASS COLLECTOR


1. Lift the grass collector flap up, so that it opens past the handle assembly.
2. Hold the grass collector flap in position and place the grass collector, using the collector handle (C) up to the machine. Secure using the collector hooks over the machine anchor points (B) and place into position.
3. Lower the grass collector flap to sit onto the grass collector.
4. To remove the grass collector, open the rear collector flap and remove the grass collector by holding the handle. Then lift and pull the grass collector away from the machine.

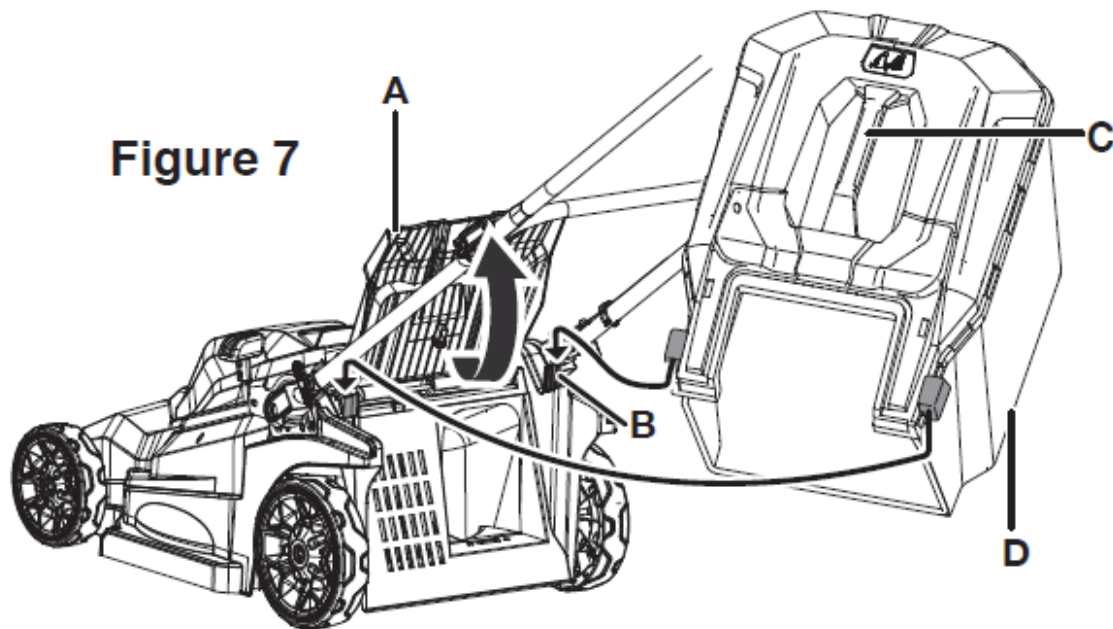

Using the grass collector, forces your cuttings to the back of the collector, using air generated by the rotation of the cutting blade. Once full, stop the machine and turn off the motor by releasing the OPC/Brake lever. Remove the battery from the battery housing. Empty the grass cuttings.

MULCH PLUG - FITTING

1. Open the grass collector flap.
2. Hold the mulch plug (C) by the handle (B) and attach it to the lawnmower body by pushing it as far as it will go.

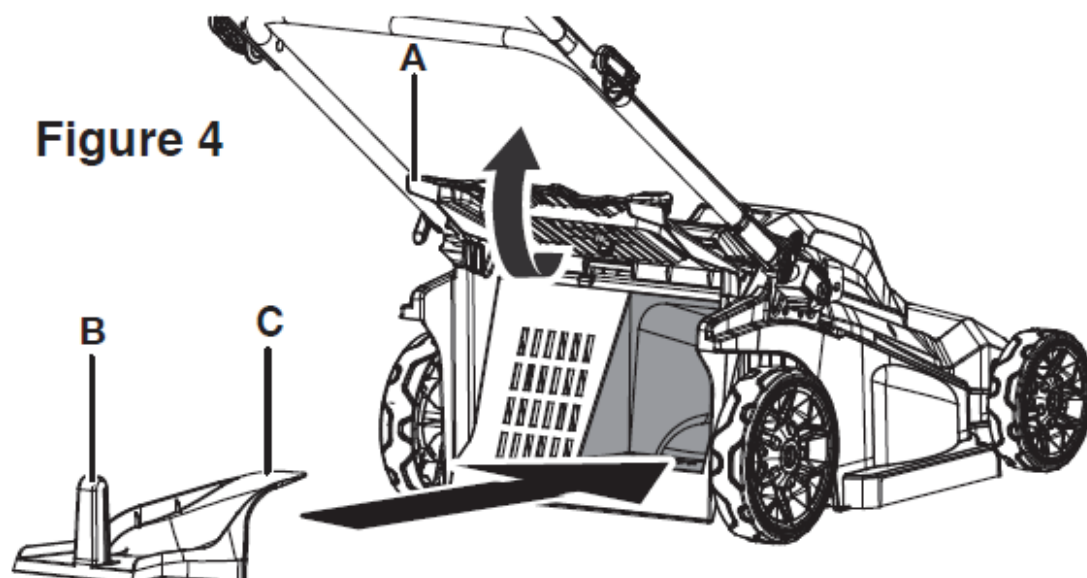




INSTRUCTION MANUAL

MULCH PLUG – REMOVAL


1. Open the grass collector flap.
2. Hold the mulch plug (C) by the handle (B), pull & lift it from the lawnmower body.

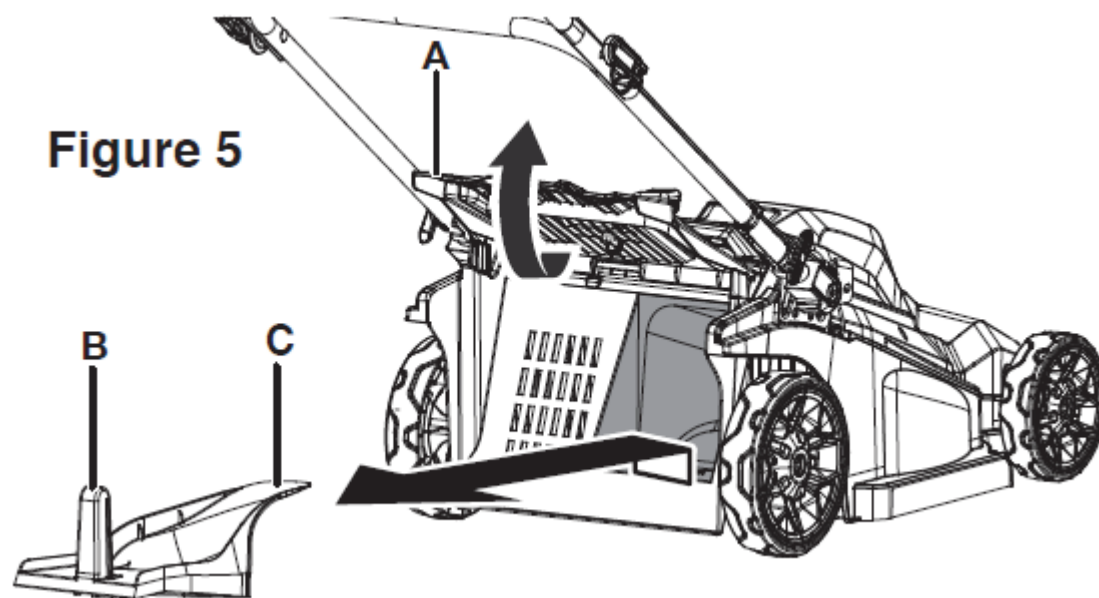

NOTE: Mulching stops collection of grass into the rear collector.

Mulching helps maintain a healthy and green lawn by re-circulating and re-cutting the grass cuttings under the mowing deck, producing very fine mulch. The cuttings are forced onto the lawn, rapidly decomposing, putting nutrients back into the soil.

NOTICE: When using the machine with the mulch plug, make sure that the total length of grass after cutting is 30 mm or more, and the cut length is 15 mm or less.

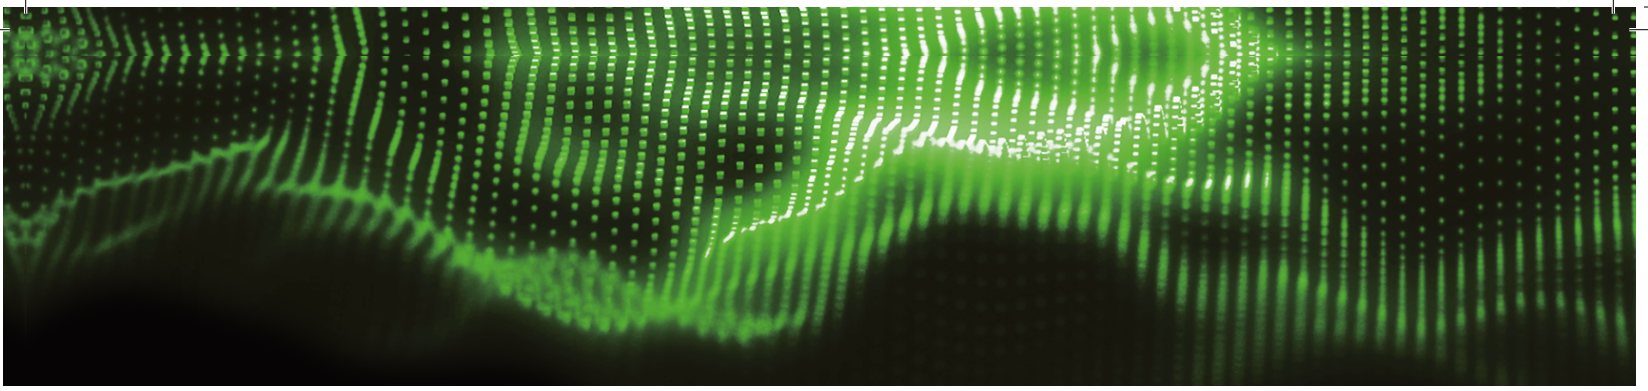

OPERATION

CHARGING BATTERY



CAUTION

Use only authorised Webb 20v lithium-ion batteries.

Batteries are shipped in a low charge condition to prevent possible problems. Therefore, you should charge them prior to use.

NOTE: Batteries will not reach full charge the first time they are charged. Allow several cycles (operating tool followed by recharging batteries) for them to fully charge.

TO CHARGE

1. Use this charger only with Authorised Webb 20v Lithium-ion batteries.
2. Make sure the power supply is normal house voltage, 240 volts, 50 Hz, AC only.
3. Connect the charger to the power supply. The charger light will illuminate **GREEN** indicating the power is on.
4. Slide the battery onto charger.
5. Press down on battery to be sure contacts on the battery engage correctly with the charger contacts.
6. When the battery and charger are connected correctly, the charger light will be illuminated a constant **RED** to indicate the battery is charging.
7. A constant **GREEN** light indicates the battery is fully charged.
8. A minimum charge time of 50 minutes (2Ah battery) or 100 minutes (4Ah battery) is required to recharge a completely discharged battery.
9. The battery will become slightly warm to the touch while charging. This is normal and does not indicate a problem.
10. **DO NOT** place a charger in an area of extreme heat or cold. It will work best at normal room temperature.
11. When the battery is fully charged, unplug your charger from the power supply and remove the battery from the charger.

GREEN	WITHOUT BATTERY	POWER ON
RED	WITH BATTERY	CHARGING
GREEN	WITH BATTERY	CHARGED

CHARGER
INDICATOR LIGHT



CAUTION

When in continuous operation in a tool, the battery will become hot!
Allow the battery to cool down fully for up to 30 minutes, before attempting to recharge.



INSTRUCTION MANUAL

INSTALLING OR REMOVING BATTERY



CAUTION

Always switch off the machine before installing or removing of the battery.

Hold the machine and the battery firmly when installing or removing battery. Failure to hold the machine and battery firmly may cause them to slip off your hands and result in damage to the machine and battery and a personal injury.

Make sure that you lock the battery cover before use. Otherwise, mud, dirt, or water may cause damage to the product or the battery.


Always install the battery fully until the red indicator cannot be seen. If not, it may accidentally fall out of the machine, causing injury to you or someone around you.

Do not install the battery forcibly. If the battery does not slide in easily, it is not being inserted correctly.

Hold the battery cover firmly when installing or removing the battery.


INSTALL BATTERY

1. Lift and hold up the battery cover (A).
2. To install the battery (B), ensure the battery release button of the battery is at the top and the base of the battery is facing the front of the machine.
3. Align the battery with the groove in the battery housing and slide it into place. Insert it all the way until it locks in place with an audible click. Repeat with the second battery.
4. Lower the battery cover.

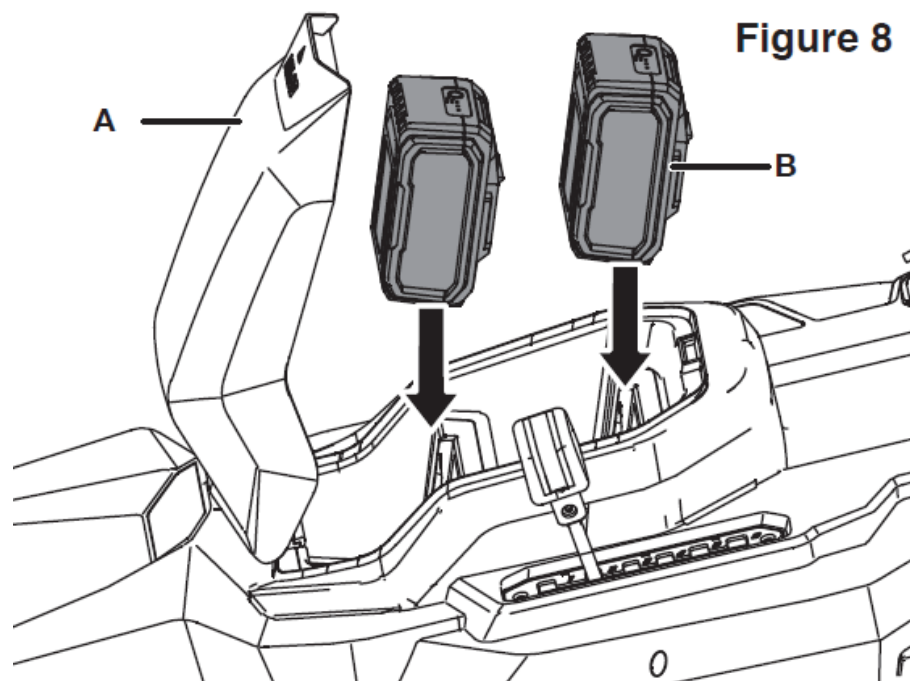

BATTERY RELEASE
BUTTON



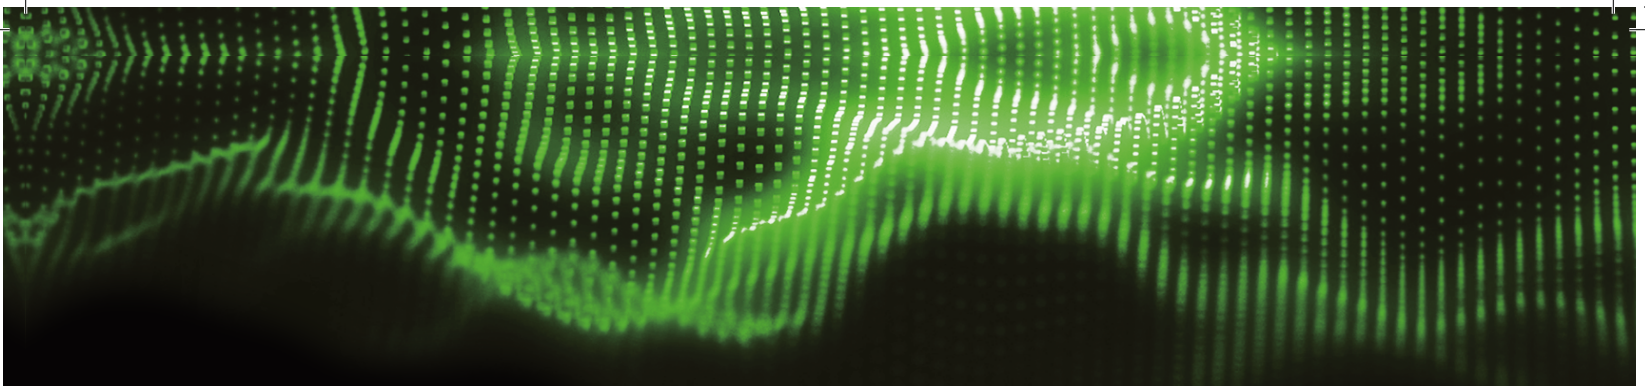

REMOVE BATTERY

To remove the battery from the lawnmower.

1. Open the battery cover.
2. Press the battery release button.
3. Slide out the battery from the lawnmower.
4. Close the battery cover.

NOTE: This machine requires the installation of two charged batteries to operate. When one battery becomes completely discharged, the unit will stop. Recharge the batteries to continue mowing.

MACHINE & BATTERY PROTECTION

The lawnmower is equipped with a machine or battery protection system. The system can automatically cut off the power supply to the motor to extend the lifespan of the machine and battery. If the machine or battery is in one of the following conditions, the machine will automatically stop during operation.

OVERLOAD PROTECTION

When a machine or battery operates in a manner that causes it to produce an abnormally high current, the machine automatically shuts down. In this case, shut down the lawnmower and remove the factors that caused the overload. Then turn on the machine to restart.

OVERHEAT PROTECTION

When the lawnmower overheats, it will automatically stop. Let the machine cool down for a minimum period of 15 minutes before attempting to restart. When the battery overheats, the green light will blink and stop the power supply to the lawnmower. The machine automatically stops and restarts after cooling of the battery.

UNDER VOLTAGE PROTECTION

When the battery capacity is low, the lawnmower will automatically stop. If the lawnmower does start, please remove the battery, and then charge the battery to its full capacity.

PROTECTION AGAINST OTHER CAUSES


Protection system is also designed for other causes that could damage the machine and allows the machine to stop automatically. Take all the following steps to clear the causes when the machine has been brought to a temporary halt or stopped in operation.

- Turn the machine off and then turn it on again to restart.
- Charge the battery(ies) or replace it/them with recharged battery(ies).
- Let the machine and battery(ies) cool down.

If no improvement can be found by restoring the protection system, then contact Webb Garden Power.

NOTE: The timing, at which the battery indicator lights illuminate, depends on the temperature at the work area and the battery conditions.

BATTERY INDICATOR

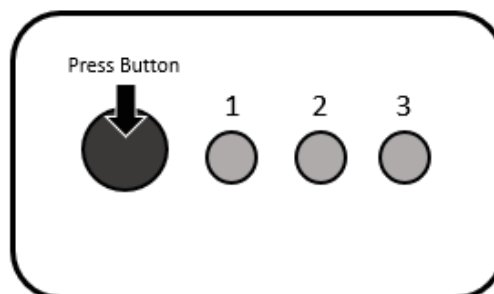

Press the check button on the battery to indicate the remaining battery capacity. The indicator lights will illuminate for a few seconds.

LED LIGHTS	BATTERY CAPACITY
LED 1,2 & 3 on	Full charged (70-100%)
LED 1 & 2 on	Battery is 35%-70% charged
LED 1 on	Battery is depleted (0%-35%). Charge the battery.



INSTRUCTION MANUAL

NOTE: Depending on the conditions of use and the ambient temperature, the indication may differ slightly from the actual capacity.

NOTE: The green indicator light will blink when the battery protection system works.

STARTING THE LAWNMOWER



WARNING

This lawnmower is equipped with a safety button. If you notice anything unusual, stop operation immediately and have it checked by your nearest Webb Approved Service Dealer. Before installing the battery, always check to see that the OPC/Brake lever operates correctly and returns to the original position when released.

Operating a machine with a faulty lever can lead to loss of control and serious personal injury.

NOTE: The lawnmower will not start without pressing the safety button and OPC/Brake lever pulled.

NOTE: Lawnmower may not start due to the overload when you try to mow long or dense grass at a time. Increase the mowing height in this case.

1. Install charged batteries. Then close the battery cover firmly.
2. Press the safety button (A) and hold it.
3. Pull the OPC/brake lever (B) towards the top handle.
4. Release the safety button (A) once the motor starts running.
5. The motor will continue to run until the OPC/brake lever (B) is released.


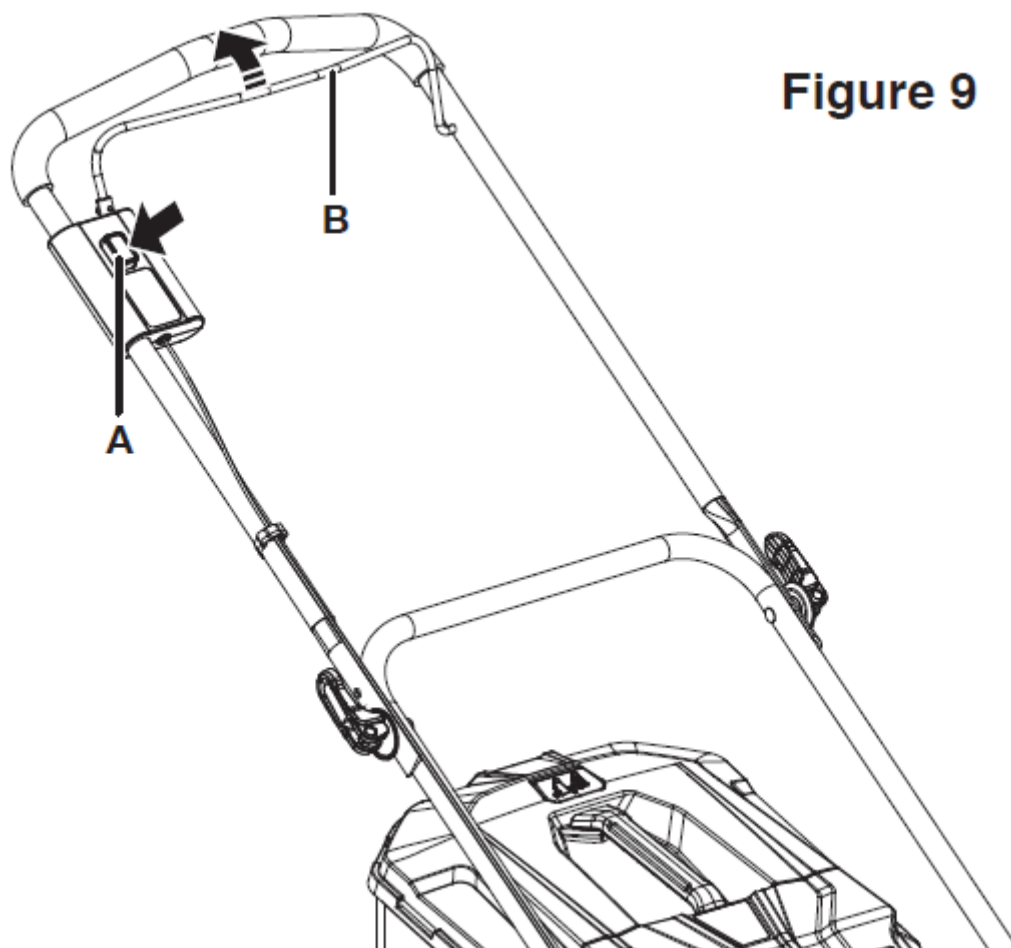


Figure 9



HEIGHT OF CUT

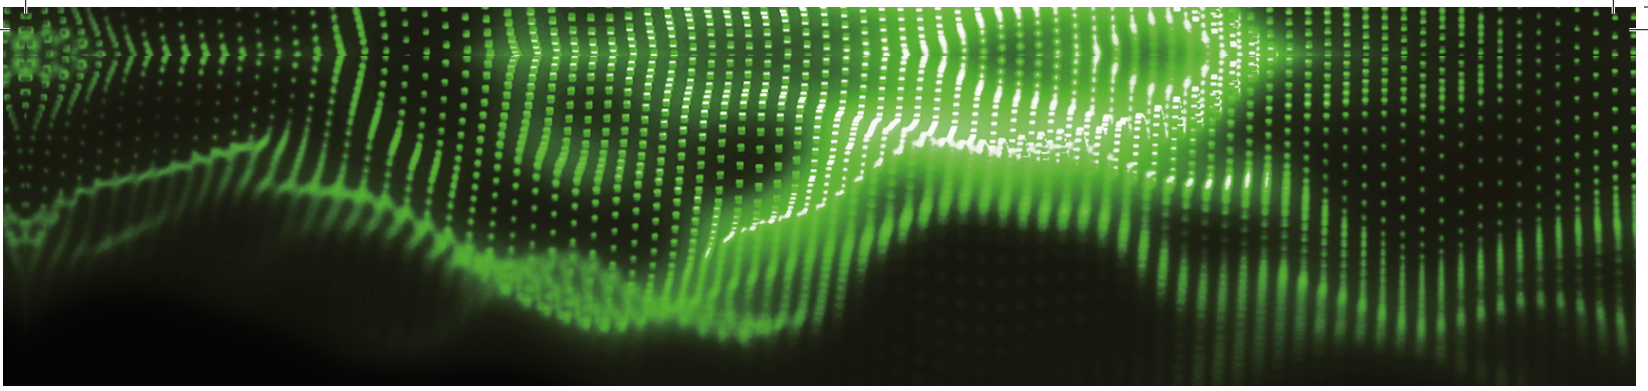

WARNING

Adjust the cutting height only when the motor is switched off and battery removed from the lawnmower.
Never put your hands or feet under the lawnmower body when adjusting the mowing height.
Always make sure that the lever fits in the groove properly before operation.
Do not touch rotating blade.

To adjust the height of cut, the machine has been supplied with a single lever, located on the left of the deck. Adjusting the height of cut should only be undertaken when the motor is off, battery removed, and the blade has come to a complete standstill.

1. To adjust the height of cut, grab the height of cut lever and push it away from the gauge and then lift or lower the lever to the required height of cut.
2. Moving the lever forward will higher the height of cut. Moving the lever back, will lower the height of cut.
3. 1 = 25mm, 2 = 35mm, 3 = 45 mm, 4 = 55mm, 5 = 65mm
4. Never attempt to cut long grass on the lowest cutting height. Always attempt to cut long grass at the higher cutting heights and then pass over the lawn again, selecting a lower cutting height.

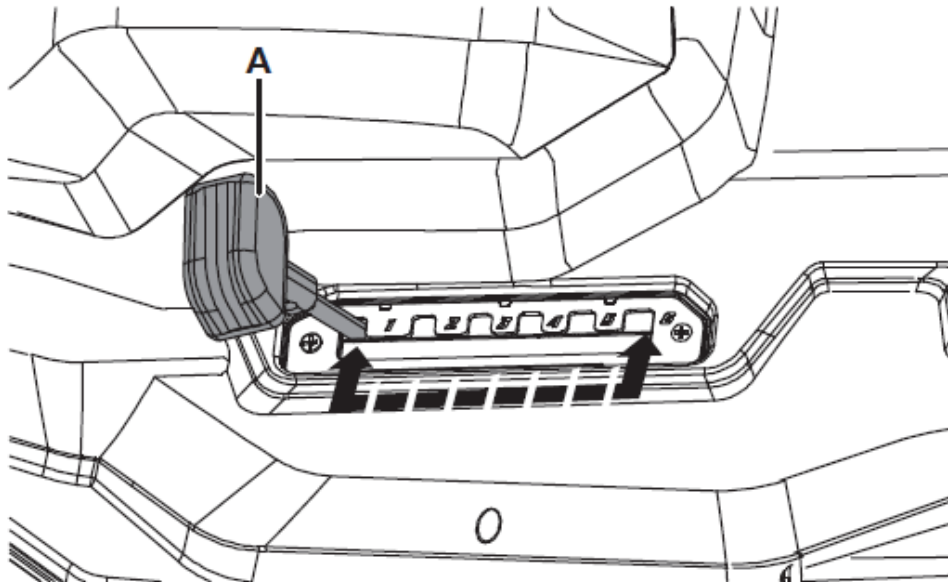


Figure 10

NOTE: The mowing height figures should be used just as a guideline. Depending on the conditions of the lawn or the ground, the actual lawn height may become slightly different from the set height.

NOTE: Try a test cut of the grass in a less conspicuous place to get your desired height.

GRASS COLLECTOR FULL INDICATOR

Grass level indicator shows the volume of mowed grass.

1. When the grass collector is not full, the indicator floats during mowing.
2. When the grass collector is full, the indicator does not float during mowing. In this case, stop mowing immediately and empty the collector.
3. After emptying the basket, clean it so that its meshwork vents the air.

NOTE: This indicator is a rough guide. Depending on the conditions of the collector, this indicator may not work properly.

MOWING



WARNING

Before mowing, clear away sticks and stones from mowing area.
Always wear the safety goggles or safety glasses with side shields when operating the lawnmower and sensible shoes.



CAUTION

If the cut grass or foreign object blocks up inside of the lawnmower body, be sure to remove the battery and wear gloves before removing the grass or foreign object.

NOTE: Use this machine for mowing the lawn only. Do not mow weeds with this machine.

1. Firmly hold the handle with both hands when mowing.
2. The mowing walking speed guideline is approximately 2 to 4 seconds per 1 metre.
3. The centre lines of the front wheels are guidelines to mowing width (A). Using the centre lines as guidelines, mow in strips. Overlap by one half to one third the previous strip to mow the lawn evenly.
4. Change the mowing direction each time to prevent the grass grain pattern from forming in just one direction.
5. Periodically check the grass collector for mowed grass. Empty the grass before the collector becomes full. Before every periodical check, be sure to stop the lawnmower, and remove the battery.

NOTE: Using the lawnmower with the grass collector full prevents a smooth rotation of the cutting blade and places extra load on the motor, which could cause catastrophic motor failure, not covered by the manufacturer's warranty.


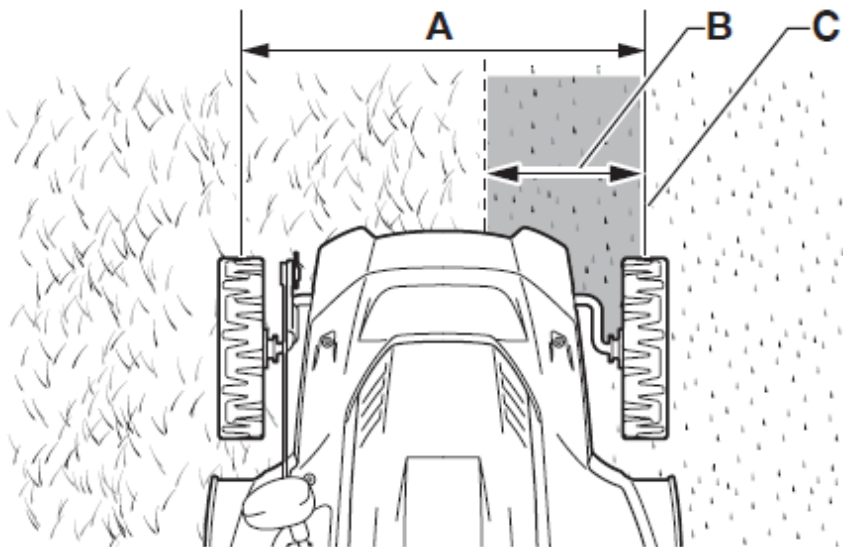


Figure 13

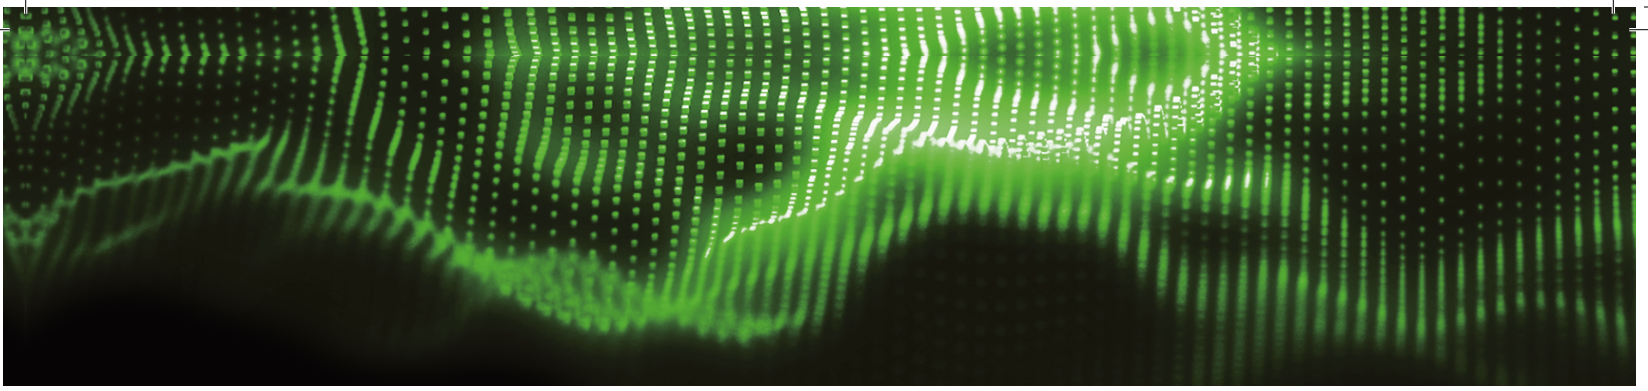

MOWING LONG GRASS

1. Do not try to cut long grass all in one go. Instead, mow the lawn in steps. Mow on the highest cutting height. Leave a day or two between mows until the lawn becomes evenly short.

NOTE: Mowing long grass to a short length all in one go may cause the grass to die. The cut grass may also block up inside of the lawnmower body or wrap around the blade and motor shaft.

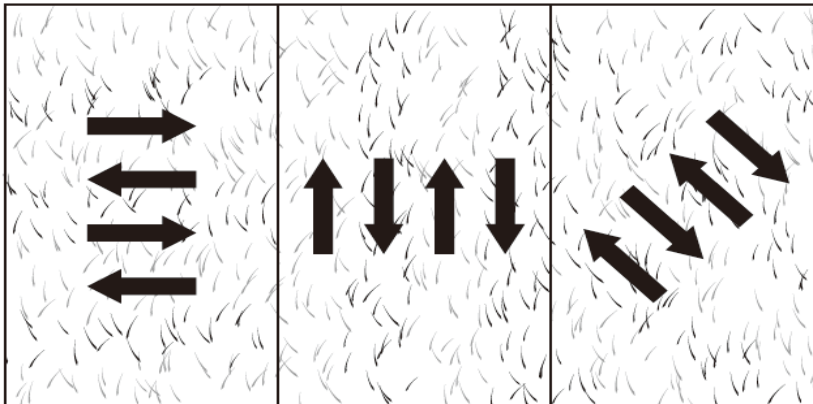


Figure 14

GRASS COLLECTION

1. Select your required height of cut setting.
2. Press the safety button and pull the OPC/Brake lever up to the top handle.
3. Release the safety button.
4. Keep a firm grip on the top handle with OPC/Brake lever always engaged when attempting to cut.
5. As soon as grass clippings start to trail the lawnmower, or the collector full indicator stops hovering, it is time to empty the grass collector.

NOTE: Before taking off the grass collector, switch off the motor by releasing the OPC/Brake lever, remove the battery from the battery housing and wait until the blade has come to a stop.


EMPTYING THE GRASS COLLECTOR

1. As soon as grass clippings start to trail the lawnmower, it is time to empty the grass collector.
2. Stop lawnmower and allow blades to completely stop.
3. Open battery cover.
4. Remove the batteries.
5. Lift the rear grass flap.
6. Lift the grass catcher by its handle to remove from lawnmower.
7. Empty grass clippings.
8. Lift the rear grass flap and reinstall the grass catcher as described earlier in this manual.

NOTE: If any grass residue is caught in the discharge chute, clean it using a brush. Do not remove grass debris in the lawnmower deck or on the blade by hand or with your feet. Instead use suitable tools such as a brush or broom. To ensure that the cut grass can be collected into the grass collector, the discharge opening and inside the lawnmower deck must be cleared of any blockage.

CUTTING ON SLOPES

When cutting on slopes, ensure your footing is secure, the grass is not wet, and the machine is used across the slope and not up or down the slope. The slope gradient should not exceed 15°.

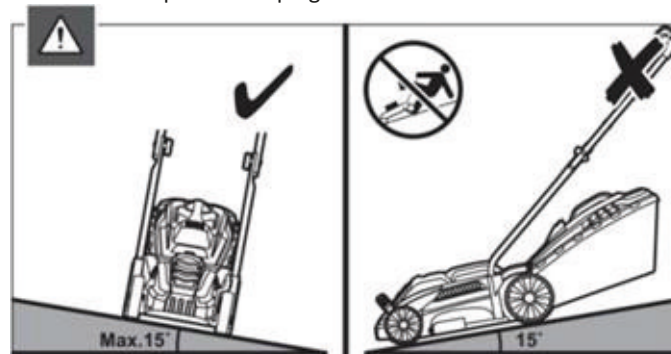



INSTRUCTION MANUAL

MOWING INSTRUCTIONS

1. Walk, never run with the lawnmower, be very careful when mowing uneven or rough ground.
2. Be careful when changing the direction of the lawnmower on a slope. Mow across the face of slopes, never down or up.
3. Do not mow excessively steep slopes.
4. Best results will be achieved if the grass is dry. Wet grass will clog the blade & grass collection system.
5. Grass grows at different rates at different times of the year. Never use the lowest cutting height for the first cut of the season or in drought conditions.
6. Do not remove grass debris in the lawnmower deck or on the blade by hand or with your feet. Instead use suitable tools such as a brush or broom.
7. Check that all nuts, bolts, and screws are well tightened.
8. Before mowing make sure that the blade and the blade fixing bolts are securely fastened. When blade cutting edges require re-sharpening, this must be done evenly on both sides, to prevent any imbalance. If you are unsure how to sharpen the blade, please visit your local Webb Approved Service Dealer or trained garden machinery expert. If the blade is damaged, it and the bolt must be replaced.
9. When mowing, always wear a long trousers and strong footwear.
10. Work only when there is natural or sufficient artificial light.
11. Turn off the motor and remove the battery if you must leave the lawnmower unattended.
12. Never lift the rear of the lawnmower while starting the motor and never place your hands and feet underneath the deck or into the rear discharge chute while the motor is running.
13. **Never change in any way the rated speed of the motor.**
14. Never lift or carry the lawnmower while the motor is running.
15. Stop the motor and remove the battery in these cases:
 - Before any operation under the deck or the rear discharge chute.
 - Before any maintenance, repairing or checking operations.
 - Before carrying, lifting, or removing the lawnmower.
 - If you leave the lawnmower unattended or changing the cutting height.
 - To remove and empty the grass collector.
 - After hitting a foreign object, stop the motor and check thoroughly the lawnmower to see if it is damaged. Take the machine to a local Approved Service Dealer for inspection if necessary. Repairs of this nature are not covered under the Manufacturer's warranty.
 - If the lawnmower vibrates in an abnormal way, find the reasons why, and take your lawnmower to a local Approved Service Dealer.



WARNING

After the motor has stopped, the blade will still rotate for a couple of seconds.



CAUTION

Operating on gradients could cause the machine to tip over.

Allowing anyone to operate this machine without proper instruction may result in injury.


Wear sturdy, full coverage footwear. Operating this machine with bare feet, or with open toe shoes or sandals increases your risk of injury.

Do not use the machine at night or in poor light.

Be sure to transport the machine from one place to another with the motor off.

Be sure to wear heavy gloves when cleaning underside of the deck or handling the blade.

To prevent damage, check the machine for any signs of damage or other faults when operated.

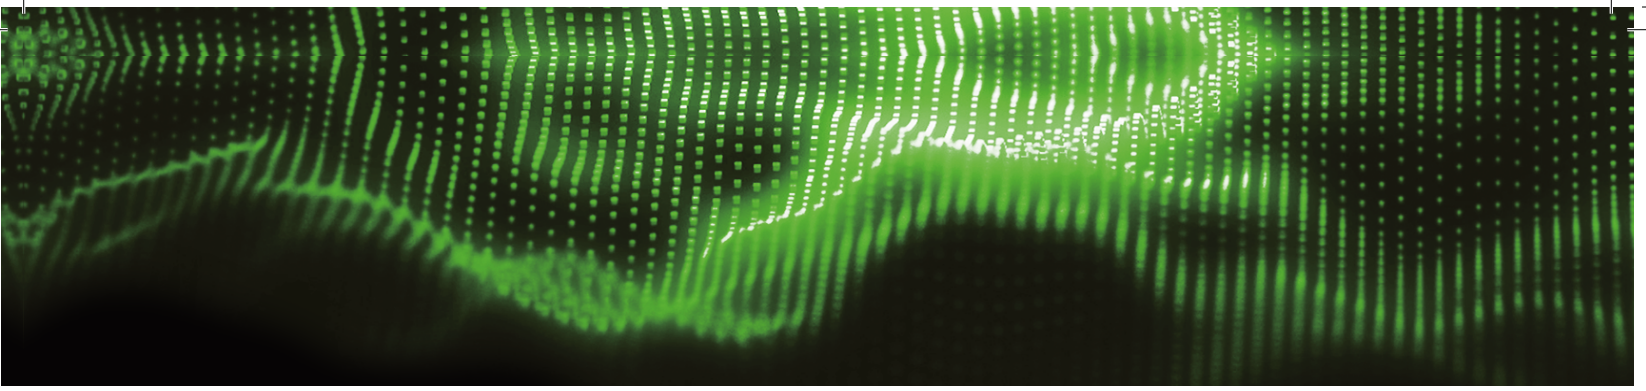

MAINTENANCE, CLEANING & STORAGE



WARNING

Improper maintenance & storage of the machine may void your warranty. Keep the machine clean for better and safer performance.

Turn off the motor and remove the batteries before performing any maintenance.

Always remove the batteries when the lawnmower is not in use. Store the battery in a safe place out of reach of children.

Wear gloves when performing inspection or maintenance.

Always wear the safety goggles or safety glasses with side shields when performing inspection or maintenance.

NOTE: Never use gasoline, benzene, thinner, alcohol or the like on the deck and other components. Discoloration, deformation or cracks may result.

To maintain product SAFETY and RELIABILITY, repairs, any other maintenance or adjustment should be performed by Approved Service Dealers or fully trained garden machinery experts, always using original replacement parts.

MAINTENANCE

- Use only original equipment replacement parts. Other parts may not perform as well, may damage the unit, and may result in injury. In addition, use of other parts may invalidate your warranty.
- Before each use, check all nuts & bolts to be sure they are sufficiently tightened.
- We recommend only manufacturer original parts are used when maintaining this machine. Failure to do so could invalidate your manufacturer's warranty.
- The motor must be switched off, with the battery removed, before the machine is unassembled, cleaned, serviced, or maintained.

REMOVING CUTTING BLADE

When removing the cutting blade assembly, protect your hands with a pair of heavy-duty gardening gloves.

1. Put the lawnmower on the side so that the mowing height adjusting lever comes to the upper side.
2. To lock the blade rotation, insert a screwdriver into a hole on the lawnmower body.
3. Turn the bolt counterclockwise with the wrench.
4. Remove the bolt and blade in order.

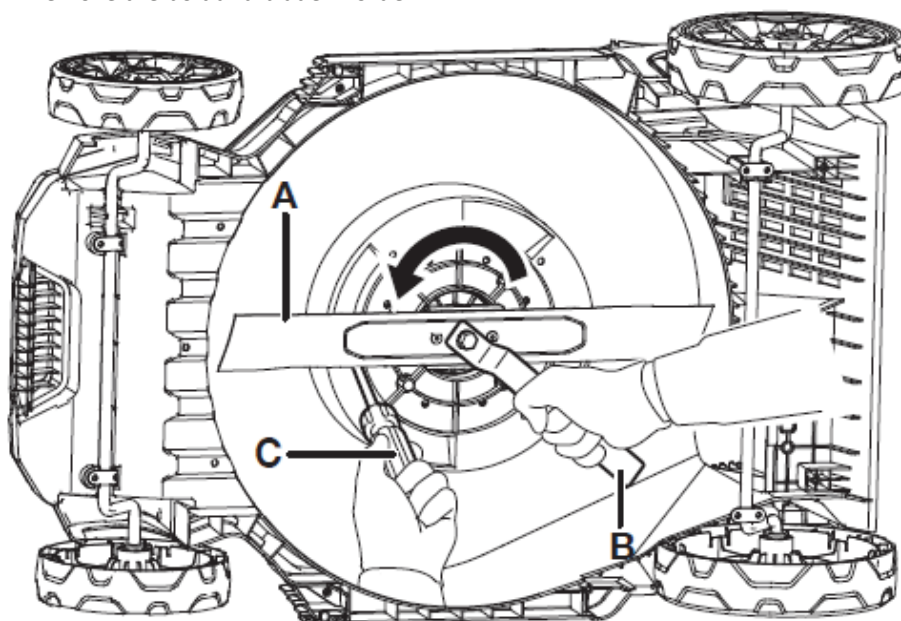


Figure 18



INSTRUCTION MANUAL



WARNING

Periodically inspect the blade adaptor for cracks, especially if you strike a foreign object. Replace it where necessary.

SHARPENING CUTTING BLADE

NOTE: This action should only be undertaken if you are confident in lawnmower maintenance. Incorrect sharpening of the blade can cause an imbalance and excessive vibration to the machine.


For best mowing performance, the lawnmower blade must be kept sharp. A dull blade does not cut grass evenly and overloads the motor. Under normal circumstances, sharpening the blade twice during the mowing season is usually enough. However, if your lawn has sandy soil, more frequent action may be required. Following the instructions in the **Replacing the Cutting Blade** section, remove the lawnmower blade. **DO NOT** attempt to sharpen the blade while it is attached to the lawnmower.



WARNING

When removing, inspect the blade carefully. If blade is bent or damaged, replace immediately with a new Webb blade. Failure to replace a bent or damaged blade could cause an accident resulting in possible serious injury.

1. Using a fine-tooth file or stone, sharpen cutting edges on both ends of the blade, removing equal amounts of material from both ends.

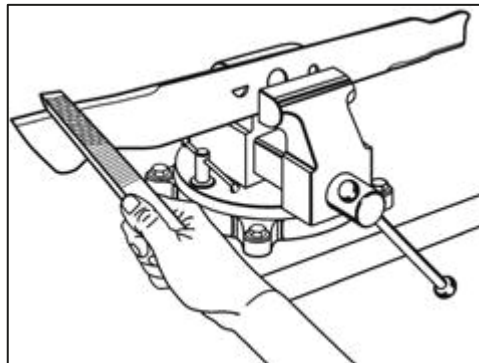

BALANCING THE BLADE


When sharpening, care should be taken to keep the blade balanced. An unbalanced blade will cause excessive vibration when the lawnmower is running. This vibration will eventually cause damage to the lawnmower, especially the motor.


To check blade balance:

2. Clamp a screwdriver horizontally in a vice as shown.

NOTE: If a vice is not available, a straight nail can also be used.

3. Place the centre hole of blade on the screwdriver (or nail) shank.
4. If blade is balanced, it will remain in a horizontal position. If either end of the blade drops downward, sharpen the heavy side until the blade is balanced.

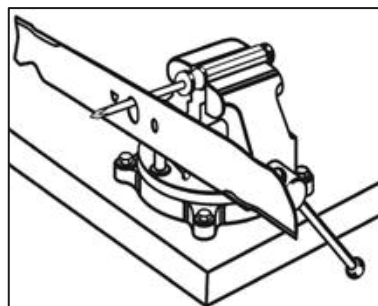

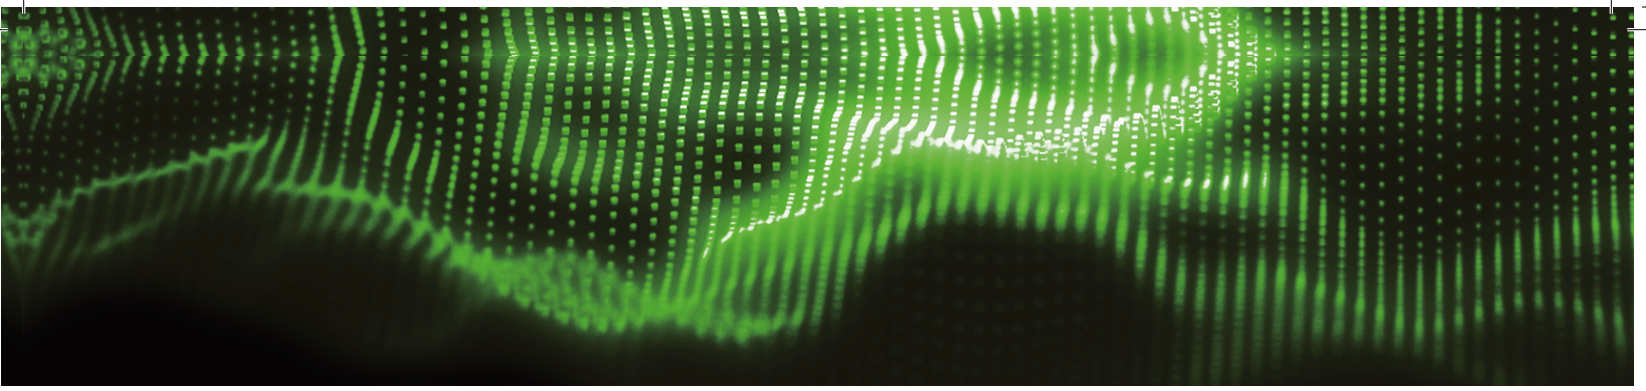

INSTALLING A CUTTING BLADE

1. Be sure to install the blade assembly with the side of the blade marker with the part number, facing to the ground, when the lawnmower is in the operating position.
2. Slide the blade boss/support (A) onto the motor crankshaft.
3. Place the blade (B) onto the blade boss/support. Ensure the blade is aligned with and seated on the blade boss.
4. Place washer (C) onto the blade.
5. Replace the blade bolt (D).
6. Tighten by rotating the spanner, clockwise until secure. The recommended torque for the blade nut is 350-400 in. lbs. (39.4-45.1Nm).

NOTE: To ensure safe operation of your lawnmower, the blade bolt must be checked periodically for correct torque.



WARNING

Install the lawnmower blade carefully. It has a top/bottom facing.

Tighten the bolt clockwise firmly to secure the blade.

Make sure that the lawnmower blade and all the fixing parts are installed correctly and tightened securely. When you replace the blade, always follow the instructions provided in this manual.

CLEANING



WARNING

Remove the battery from the lawnmower before undertaking any cleaning exercise.

Ensure sturdy gloves are worn when attempting to cleaning the cutting deck discharge chute areas.



CAUTION

Do not use a water hose or pressure washer to clean the machine or cutting deck. Water can damage the motor.

1. Keep your machine clean. Thoroughly clean the machine at the end of each use, paying attention to grass in and around the cutting area and discharge chute.
2. Carefully clean the underside of the cutting deck with a stiff brush after each cut; remove the grass debris and mud accumulated inside the deck to prevent it drying.

COLLECTOR CLEANING

3. Pores in the grass collector can become filled with dirt and dust during use which will cause the machine to collect less grass. To prevent this, remove the collector from the machine, hose the collector with water and let it dry before re-using.
4. Keep the top of the motor housing vents clear and clean of grass clippings and dust. This will assist with motor air flow and extend the machine life.
5. Always keep the lawnmower, wheel axles and air vents clean. Use a brush or cloth to clean it, avoid cleaners and solvents.
6. Check covers and guards for damage and improper attachment. If necessary, change the components.



INSTRUCTION MANUAL

LUBRICATE

All the bearings in this product are lubricated with enough high-grade lubricant for the life of the unit under normal operating conditions. Therefore, no further bearing lubrication is required.

At the beginning and end of each mowing season:

1. Lubricate the springs on the rear discharge door with light maintenance oil.
2. Lubricate the height adjustment lever and related hardware with light maintenance oil.
3. Remove the wheels and lubricate the surface of the axle bolt and the inner surface of the wheel with light maintenance oil.
4. Remove the blade and blade hub assembly and lubricate the motor shaft with light maintenance oil. See Replacing the Cutting Blade for instructions on removing the blade.

STORAGE & TRANSPORT

The following steps should be taken to prepare your machine for storage.



CAUTION

The motor/battery must have completely cooled down before storing.

NOTE: When storing any type of power equipment in an unventilated or material storage shed

1. For trouble free service, make sure the machine is clean and dry before storing.
2. Keep the lawnmower in a dry place out of children's reach. Do not cover the lawnmower, moisture may develop.
3. Store indoors or in a safe dust free area, locked protected area during severe weather and winter months. If storing for an extended period, inspect, clean and repair the machine if necessary. Please ensure the machine is stored away from direct sunlight.
4. Be careful not to bend or kink cables.
5. Ensure the machine is stored in a position where any persons cannot step on to attempt to reach items up high, due to risk of movement.

STORAGE OPTIONS



CAUTION

When putting the machine in the upright position, place the machine on a flat and stable surface. If the machine is placed on an unstable surface, the machine may fall over and cause an injury.

Store the lawnmower in a cool, dry and secure location. Do not store the lawnmower and charger in locations where the temperature does not go below 0°C or exceed 40°C.

1. Remove the batteries.
2. Remove the grass collector.
3. Release the quick release knob, folding the handle and locking quick release knob.
4. Release the quick release handle. Fold the upper handle, locking quick release handle.
5. Place the machine in the upright position.
6. Store the grass collector between the handle and the lawnmower body.

NOTE: When putting the lawnmower in the upright position, hold the lawnmower body and handle.


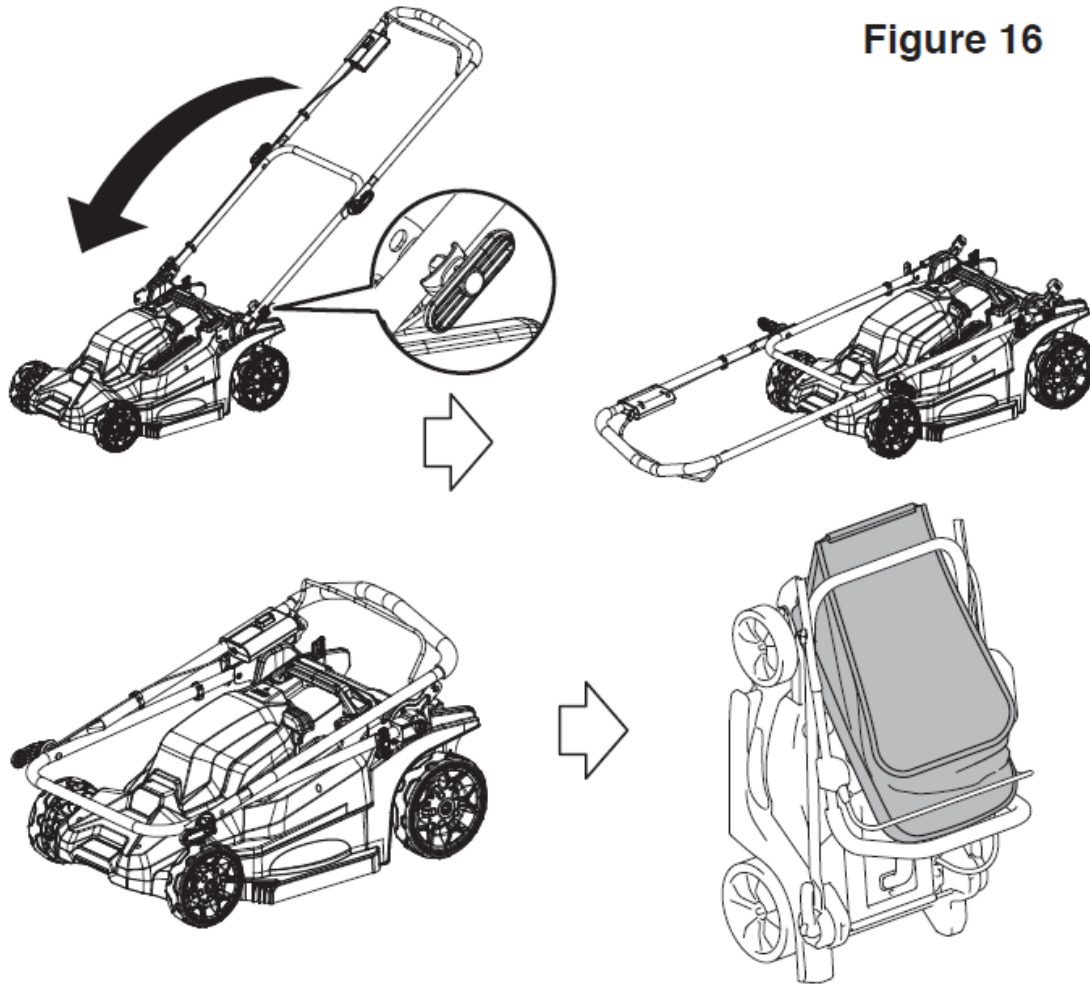


Figure 16

CARRYING THE LAWNMOWER

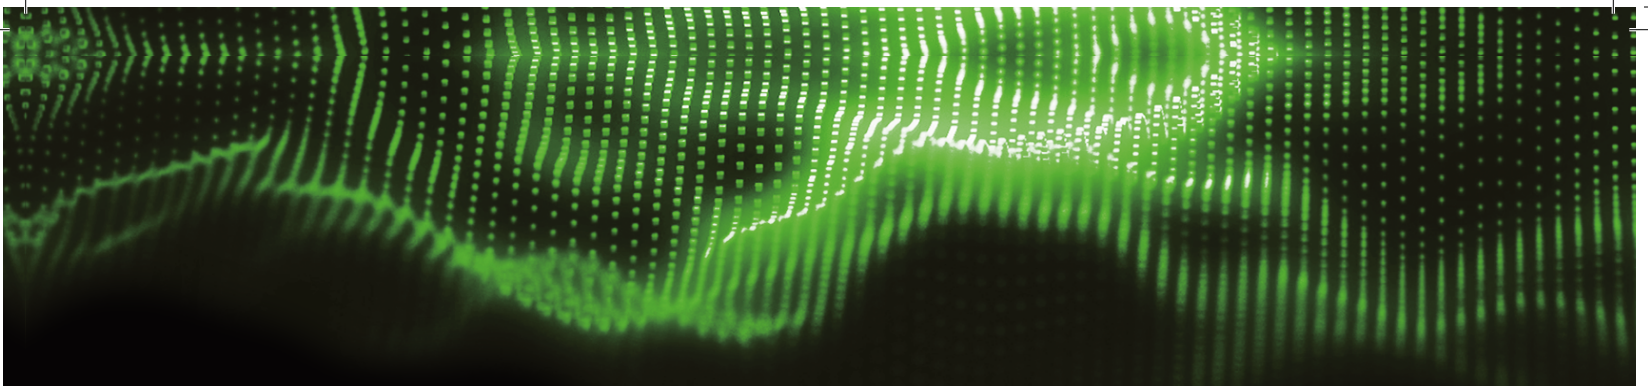

CAUTION

Before carrying the lawnmower, be sure the batteries are removed.

When carrying the lawnmower, hold the rear handle (B) and the lower grip (A) at the front of the machine.

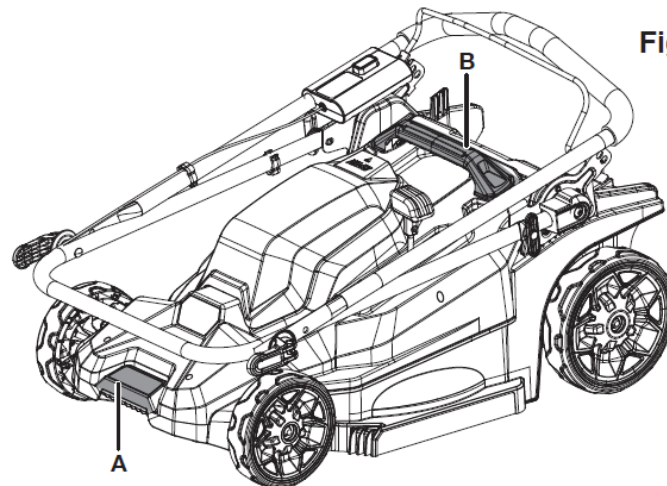


Figure 17



INSTRUCTION MANUAL

TRANSPORT


- Always remove the battery from the lawnmower when transporting.
- Clean the cooling fins of the cylinder and the housing.
- Use the original packaging to ship whenever possible.

MAINTENANCE INFORMATION

Please note that the following parts of this product are subject to normal or natural wear and that the following parts are therefore also required for use as consumables. Wear & tear parts*: Carbon brushes, cutting blade, collector (* Not necessarily included in the scope of delivery!)

DISPOSAL & RECYCLING

The equipment is supplied in packaging to prevent it from being damaged in transit. The raw materials in this packaging can be reused or recycled. The equipment and its accessories are made of various types of material, such as metal and plastic. Defective components must be disposed of as special waste. Ask your dealer or your local council.

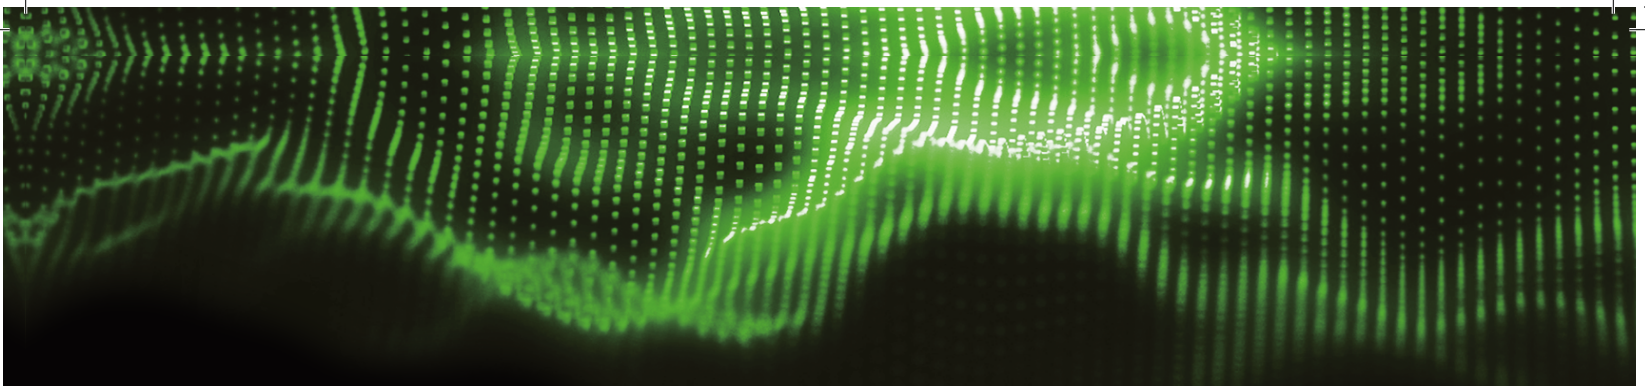

TROUBLE SHOOTING



Switch off the lawnmower battery before inspecting, cleaning or working on the thread.

Problem	Possible Cause	Solution
The lawnmower fails to start	<ol style="list-style-type: none"> 1. The battery is depleted. 2. The battery is not attached to the lawnmower. 3. Battery or lawnmower circuitry is too hot. 4. The handle is not set at one of the operating positions. 5. Lawnmower deck is clogged with grass and debris. 	<ol style="list-style-type: none"> 1. Charge the battery. 2. Attach the battery to the lawnmower. 3. Allow the battery or lawnmower to cool down. 4. Adjust the handle to the one of the operating positions. 5. Clean the lawnmower deck and make certain that the blade has freedom of movement.
The lawnmower cuts unevenly.	<ol style="list-style-type: none"> 1. Dull blade. 2. The cutting height is not set properly. 3. The blade is assembled incorrectly. 	<ol style="list-style-type: none"> 1. Sharpen or replace blade. 2. Raise the blade to a higher setting. 3. Reassemble the blade, following the section "Replacing the Cutting Blade" in this manual.
Lawnmower stops while mowing	<ol style="list-style-type: none"> 1. The battery is depleted. 2. Lawnmower is in overload condition. 3. Lawnmower deck is clogged with grass and debris. 4. Battery or lawnmower circuitry is too hot. 	<ol style="list-style-type: none"> 1. Charge the battery. 2. Raise cutting height or slow down the mowing. 3. Unclog lawnmower deck. Raise cutting height or cut a narrow swath. 4. Allow the battery or lawnmower to cool down.
Lawnmower does not mulch properly.	<ol style="list-style-type: none"> 1. Wet grass clippings are sticking to the underside of the deck. 2. The lawnmower is set to cut too much grass. 	<ol style="list-style-type: none"> 1. Wait until the grass dries before mowing. 2. Raise the blade to a higher setting.
Excessive vibration	<ol style="list-style-type: none"> 1. Cutting blade is loose. 2. Cutting blade is unbalanced. 3. Bent cutting blade. 4. Bent motor shaft. 	<ol style="list-style-type: none"> 1. Tighten the blade bolt. 2. Balance the blade following the instructions. 3. Replace the blade. 4. Contact your local Approved Service Dealer.

If you cannot fix the fault yourself, contact your local Approved Service Dealer. Please be aware that any improper repairs will also invalidate the warranty and additional costs may be incurred.



INSTRUCTION MANUAL




REPLACEMENT PARTS


Please find on the following pages, parts lists and drawings for your machine. Should you require a replacement part, please call 01793 333212 or email parts@webbgardenpower.co.uk for assistance or visit www.webbgardenpower.co.uk to order.

Webb recommends the use of Handy Parts oils, fuel additives, nylon lines pre-packed parts for all our machines.



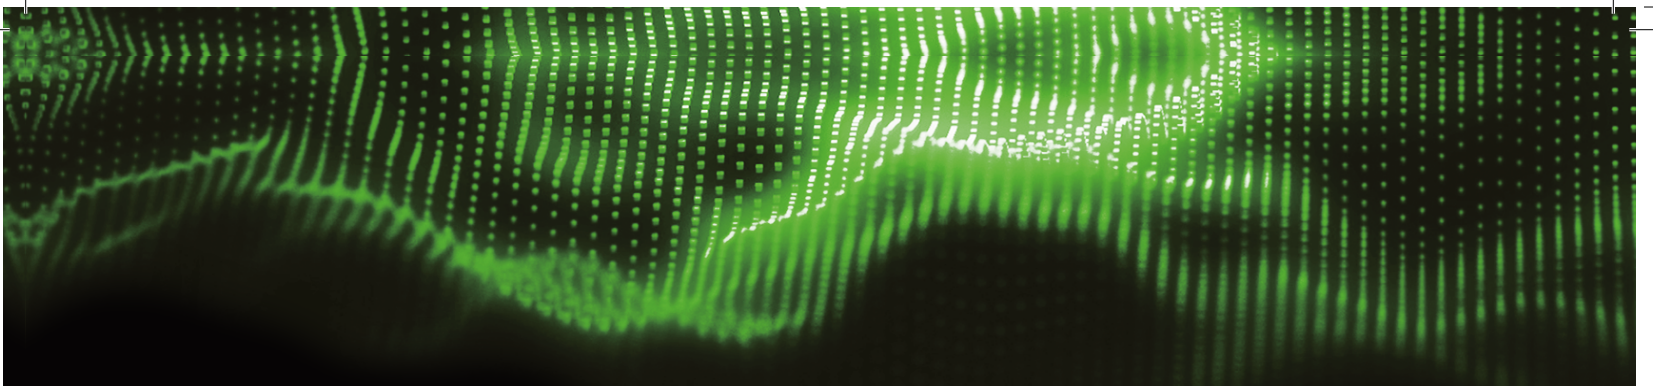

PARTS DIAGRAM – WEV20X2LM43B4X (1938348002)

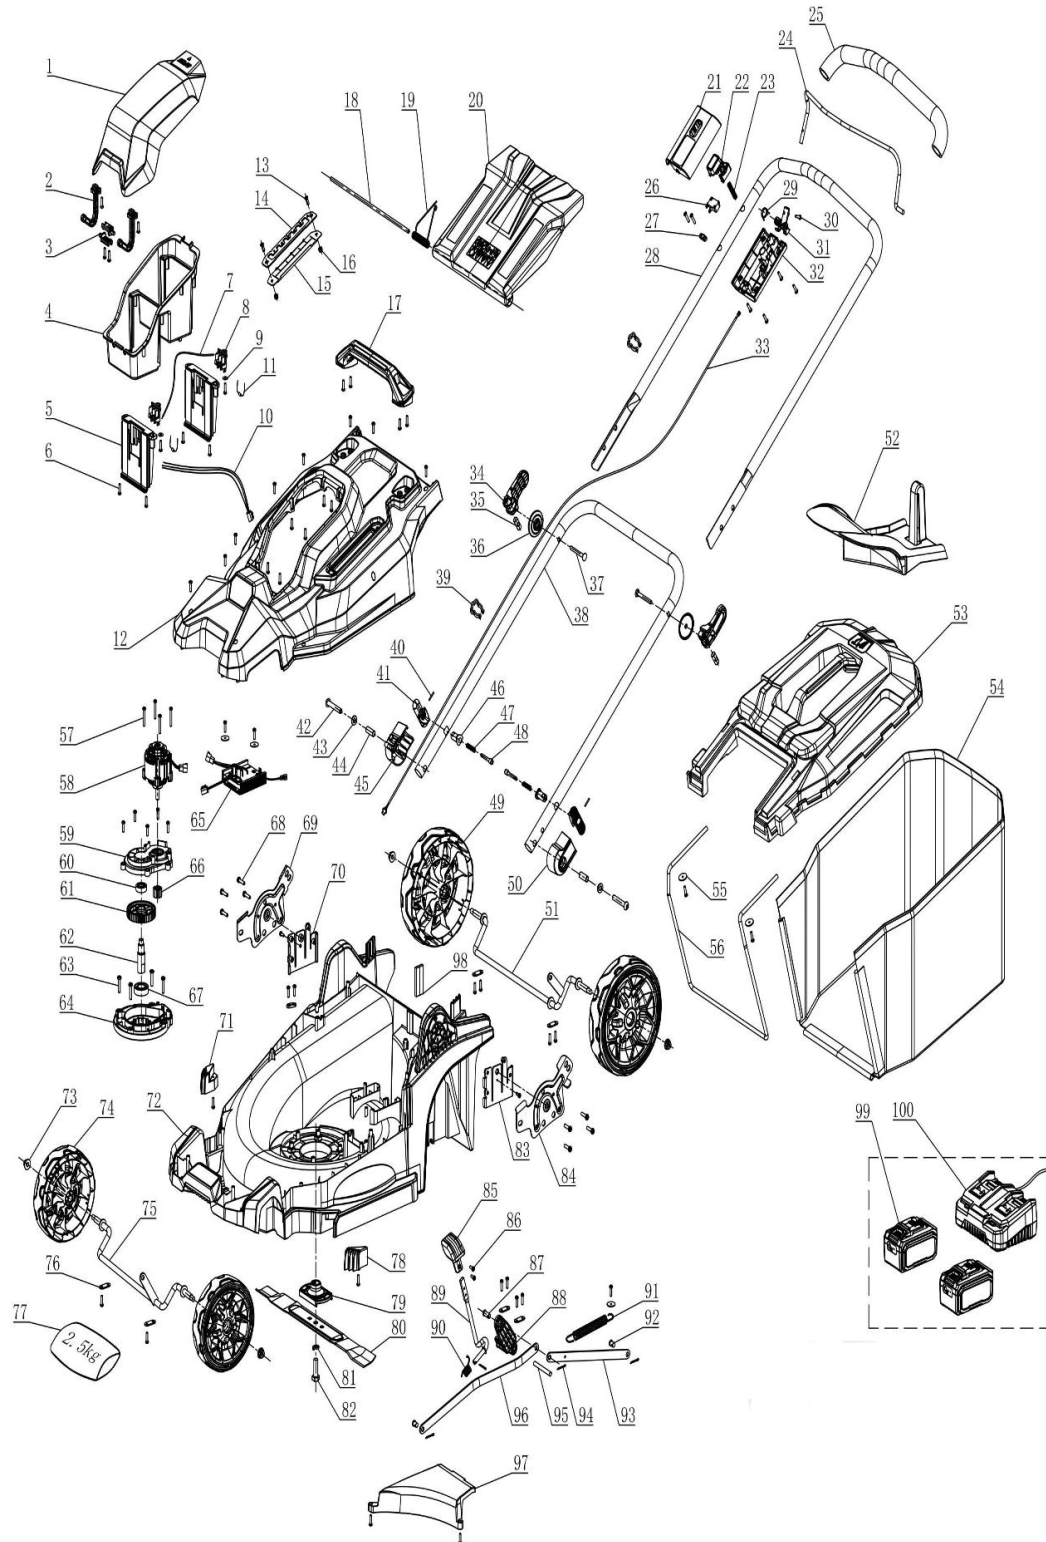




INSTRUCTION MANUAL

PARTS LIST - WEV20X2LM43B4X (1938348002)

Item No	Webb Part No.	Webb Description	Quantity
1	WE247-612012-440	Battery Cover	1
2	WE247-612013-440	Battery Cover Hinge	2
3	WE231-612014	Battery Cover Fixed Shaft	2
4	WE232-612010	Battery Housing	1
5	WE231-612002	Battery Fixing Plate	2
6	WE232-92426	Screw ST4x16	60
7	WE232-612018	Internal Conductor	1
8	WE231-612003	Battery Connector	2
9	WE231-94249	Flat Pad $\phi 12 \times \phi 4.3 \times 0.8$	2
10	WE247-605532	Internal Power Cable	1
11	WE231-612017	Resistor	2
12	WE247-612009-336	Upper Deck	1
13	WE231-92433	Screw M5x16	2
14	WE232-612016	Height Adjustor Cover	1
15	WE232-612015	Height Adjustor Plate	1
16	WE231-99121	Nut M5	2
17	WE232-612011	Deck Handle	1
18	WE232-604294	Rear Flap Shaft	1
19	WE231-604289	Rear Flap Torsion Spring	1
20	WE232-604287	Rear Flap	1
21	WE247-607141	Switch Box Upper	1
22	WE247-605426-136	Safety Button	1
23	WE247-605435	Safety Button Spring	1
24	WE247-605433-136	OPC Lever	1
25	N/A	Handle Rubber - Comes with 28	1
26	WE247-605439	Microswitch	1
27	WE231-605384	Cable Clamp	2
28	WE247-605431-010	Upper Handle with Rubber (28)	1
29	WE247-605436	Reset Spring	1
30	WE247-92425	Screw ST4x14	1
31	WE247-604302	Trigger Bracket	1
32	WE247-607142	Switch Box Lower	1
33	WE247-605437	External Power Cable	1

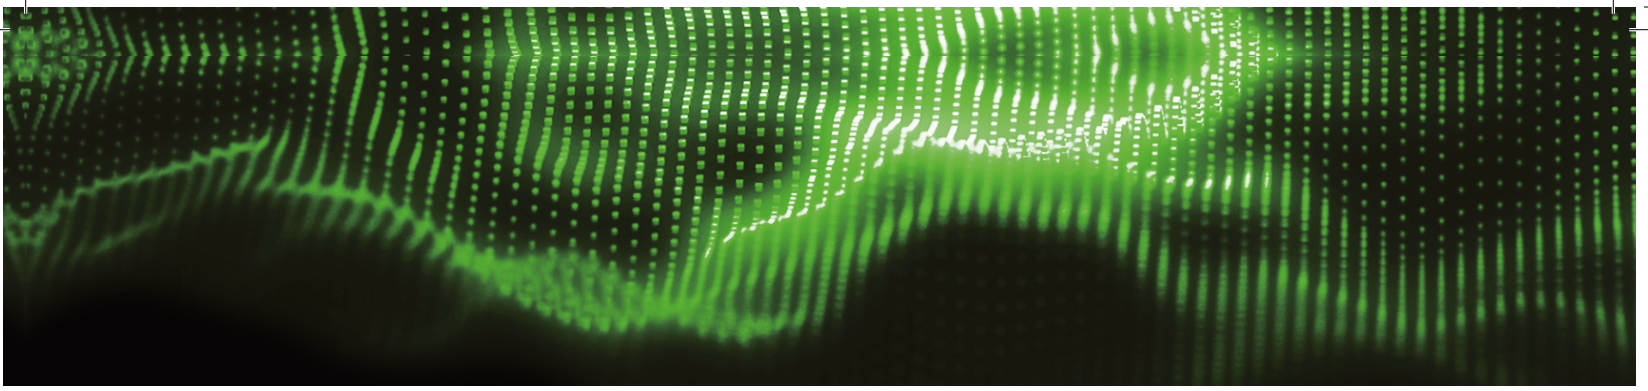


Item No	Webb Part No.	Webb Description	Quantity
34	WE247-605430-198	Quick Release Handle	2
35	WE247-604304	Quick Release Cylinder	2
36	WE247-612019	Quick Release Holder	2
37	WE247-91197	Square Neck Bolt M6x55	2
38	WE247-605432-010	Lower Handle	1
39	WE231-605127	Cable Tidy	2
40	WE247-606536	Lower Quick Release Pin $\phi 2 \times 15$	2
41	WE247-605429-198	Quick Release Handle Lower	2
42	WE247-92029	Screw M8x50	2
43	WE247-94043	Washer $\phi 16 \times \phi 8.4 \times 2$	2
44	WE247-605442	Sleeve	2
45	WE247-605427-198	Right Handle Bracket	1
46	WE247-605443	Quick Release Bushing	2
47	WE247-605440	Quick Release Reset Spring	2
48	WE247-605441	Quick Release Adjustor Pin	2
49	WE247-606501-136	Wheel 200	2
50	WE247-605428-198	Left Handle Bracket	1
51	WE232-606503	Rear Axle	1
52	WE232-601321	Mulch Plug	1
53	WE247-604286-001	50L Collector Top	1
54	WE247-604292-173	50L Collector Bag	1
55	WE231-94356	Washer $\phi 20 \times \phi 4 \times 1.5$	5
56	WE232-604293	50L Collector Frame	1
57	WE231-92427	Screw ST4x30	4
58	WE232-607132	Brushless Motor	1
59	WE231-601314	Gearbox Upper	1
60	WE231-606504	Bearing 6000-ZZ	1
61	WE231-606494	Pulley	1
62	WE231-601326	Output Shaft	1
63	WE231-92431	Screw ST4.8x25	4
64	WE231-601315	Gearbox Lower	1
65	WE232-607130	430 Controller	1
66	WE231-606495	Pinion	1



INSTRUCTION MANUAL

Item No	Webb Part No.	Webb Description	Quantity
67	WE231-606505	Bearing 6003-ZZ	1
68	WE247-92450	Screw M5x16	8
69	WE247-601346	Right Deck Bracket	1
70	WE247-612021	Right Retaining Plate	1
71	WE247-601317-198	Grasscomb Right	1
72	WE247-601344	Lower Deck	1
73	WE232-90059	Nut M8	4
74	WE247-606500-136	Wheel 160	2
75	WE232-606502	Front Axle	1
76	WE231-606496	Axle Clamp Plate	6
77	WE231-607136	Counterweight	1
78	WE247-601316-198	Grasscomb Left	1
79	WE231-602088	Blade Boss	1
80	WE232-602090	Blade (430)	1
81	WE231-94311	Spring Washer ϕ 10	1
82	WE231-91153	Blade Bolt M10x1xT30	1
83	WE247-612002	Left Retaining plate	1
84	WE247-601345	Left Deck Bracket	1
85	WE247-603145-198	Height Adjustor Handle	1
86	WE231-92423	Screw M4x8	4
87	WE231-603148	Connecting Pin 1 ϕ 10x20.5	2
88	WE232-603146	Height Bracket	1
89	WE232-603147	Height Adjustor Lever	1
90	WE232-603155	Height Adjustor Tension Spring	1
91	WE232-603153	Torsion Spring	1
92	WE231-603149	Connecting Pin 2 ϕ 10x12	1
93	WE232-603144	Back Connecting Rod	1
94	WE231-93103	Pin ϕ 2x20	4
95	WE232-603154	Height Adjustor Pin	1
96	WE232-603143	Front Connecting Rod	1
97	WE232-601322	Exit Chute Plate	1
98	WE247-601357	Grass Block	1
99	WEV20B4	20V 4Ah Battery	2
100	WEV20DPC	2.4A Dual Port Charger	1

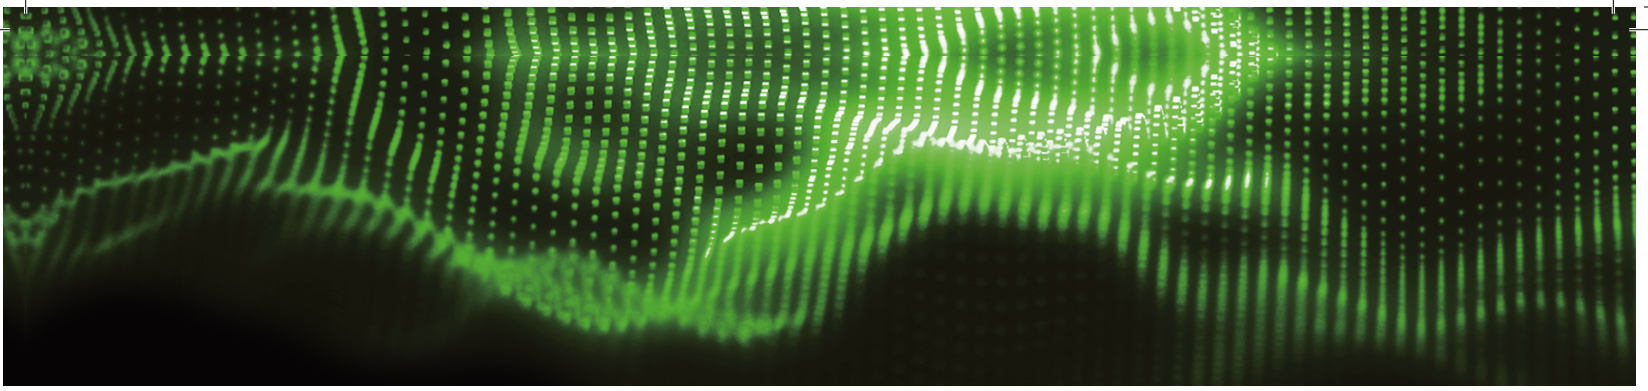

DECLARATION OF CONFORMITY



Designation: Cordless 43cm Rotary Lawnmower
Model(s): WEV20X2LM43B4X
Product No.: 1938348002
Type/Serial No. As per rating label on machine
Protection: Class III – IPX1
Rated Voltage: 40V d.c.
No-load Speed: 3100 rpm
Cutting Width: 43cm (13")

Complies with the following directives:

Machinery Directive 2006/42/EC

The conformity assessment procedure followed was in accordance with EN 62841-1:2015+A11:2022, EN IEC 62841-4-3:2021+A11:2021

Electromagnetic Compatibility Directive: 2014/30/EU

The conformity assessment procedure followed was in accordance with EN IEC 55014-1:2021, EN IEC 55014-2:2021

RoHS Directive: 2011/65/EU

Outdoor Noise Directive 2000/14/EC & 2005/88/EC

Guaranteed Noise Power Level L_{WA} : 96 dB(A) According to 2000/14/EC

Measured Sound Power Level: 94.3 dB(A)

Vibration a_{hv} : <2.5 m/s² - uncertainty K: 1.5 m/s²

Notified Body:

SGS-CSTC Standards Technical Services Co., Ltd

Authorised signatory and technical file holder:

Date: 24/03/2025

Signature:

Name: Mr Simon Belcher

Position: Chairman

Company: Handy Distribution Ltd

Address: Murdock Rd, Swindon, Wiltshire, SN3 5HY.



INSTRUCTION MANUAL

This Service Book is provided with your Webb, to help you look after your purchase to our recommendations and enable you to take advantage of the conditional manufacturer domestic warranty*.


Present this service book to your authorised Webb repair dealer, whenever a service or a warranty appraisal is required.

The booklet is applicable to the following products, in the UK only:

- Ride On Lawn Tractors
- Cylinder Lawnmowers
- Petrol Rotary Lawnmowers
- Petrol Hand Held Range


Please register your machine using the following pages or at www.webbgardenpower.co.uk. By registering your machine, you agree to maintain the machine in accordance with the service schedules specified in this manual and services duly recorded. (Not applicable for Webb electric handheld machines). You may be asked to produce this booklet as proof of servicing in the event of a claim. Proof of purchase should also be kept as a reference.

Ensure you have the following information available from your machine product label. The two examples below can be found on your machine:

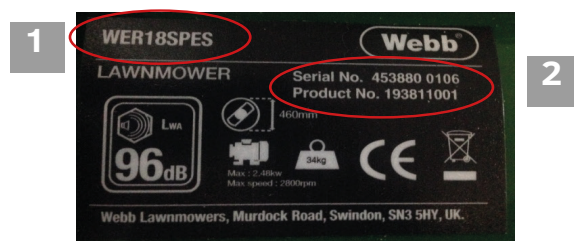

1. Model Number
2. Serial & Product Number

Please complete using BLOCK CAPITALS.
Sections marked* must be completed to validate Warranty.

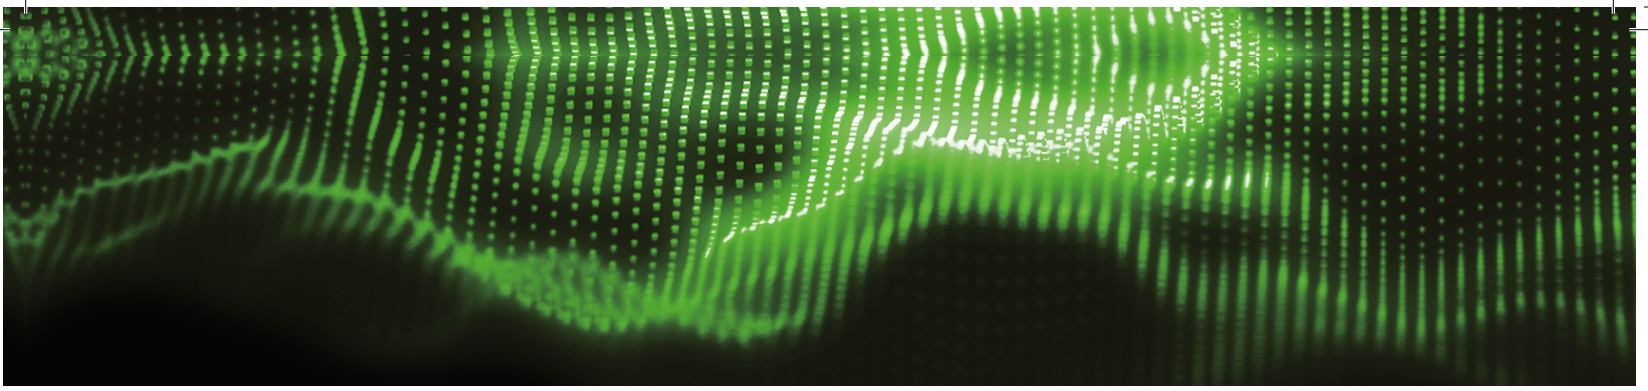

Users Statement of Warranty

Each new machine is warranted against defective material or assembly of material under normal usage. The warranty applies to the original purchaser and covers faulty parts and the labour involved in replacing and repairing those parts, which are of original manufacture.

All claims must be accompanied by evidence of the date of purchase, such as a Sales Receipt showing that the product has been purchased from an approved retailer, it was brand new at time of purchase, which is within the warranty time period.

Period of Warranty

Webb (Green Products)

- a) 3 years from the original date of sale to the first domestic user. (2 years batteries & chargers)
- b) 90 days from the original date of sale to the professional/commercial user.
- c) 90 days from the original date of sale when used for hire.
- d) A reduced warranty period of 90 days applies to those items which are subject to normal wear and tear (e.g. but not limited to wheels, tyres, cutter bars, cylinders, cutting blades, blade boss, belts, cables, nylon line & spool, collection bags, engine spark plugs, electric plug fuses).
- e) Engines are supplied with a separate warranty to the machine. The engine manufacturers warranty statement which will be supplied within the engine instruction manual. All enquiries and warranty repairs should be discussed with the engine manufacturer or approved warranty repair dealer.
- f) 90 days from the original date of purchase for Replacement Spare Parts (unless normal wear & tear component, which are covered for 30 days).
- g) All machines' must be serviced within the first 12 & 24 months from the original date of purchase to comply with the warranty (if applicable), failure to do so will invalidate the 2nd & 3rd years of the warranty.

All warranty repairs must be undertaken by an authorised service dealer. These dealers have been accredited by GJ Handy (Trading) Ltd and agree to only use genuine parts and follow our repair procedures.

Not covered by this warranty

- a) Error in assembly by user in accordance with manufacturers instructions.
- b) Incorrect operation of product in accordance with manufacturers instructions.
- c) The defect is due to accident, misuse, unauthorised modification or inexpert repair.
- d) The warranty policy does not cover any depreciation or damages caused by ordinary wear, rusting or corrosion, lack of correct maintenance or operation, misuse, abuse, lack of transportation or accident.
- e) The warranty policy does not cover any costs necessary for the standard periodic maintenance services instructed by the operator's manual, or service parts replacement which would include oil, filters, tyres, belts, brake linings, fuses, blades, seals and other service parts unless it can be proven that the item has evidence of faulty manufacture.
- f) The warranty policy will not cover failure or damage caused as a result of parts or accessories being modified without the written approval of GJ Handy (Trading) Ltd.
- g) The warranty policy will not cover the unit if non-genuine parts have been fitted and as a result damage has occurred to the unit.



INSTRUCTION MANUAL

- a) The warranty policy is non-transferable and is only applicable to the original purchaser.

Disclaimer

- a) This warranty is only a remedy for defect of products. GJ Handy (Trading) Ltd will never warranty in terms of the merchantability or the fitness for a particular purpose.
- b) No person is authorised to make any warranties, representations or promises, expressed or implied, on behalf of GJ Handy (Trading) Ltd, or to modify the terms conditions or limitation of this warranty policy in any way.
- c) Neither GJ Handy (Trading) Ltd nor any company affiliated with GJ Handy (Trading) Ltd shall be liable in any event or manner whatsoever for incidental or consequential damages or injuries, including, but not limited to, loss of crops, loss of profit, out of pocket expenses or profits, rental of substitute equipment or other commercial losses.

General

- a) Most warrantable failures show up within the first few weeks of use. These failures are usually straightforward and warranty assessment is relatively easy.
- b) Failures relating to cutter decks and belts need careful investigation, as the cause may not always be straightforward. Look for damage to blades and pulleys especially when the cutter belt or blade boss have snapped or cracked as this could be due to impact damage.
- c) Customers should always refer to the operator/instruction manual when any disputed problem arises, you will find most areas covered within the manual.

Protecting your machine

Maintenance

Regular maintenance of your Webb machine is essential to ensure it operates, safely, efficiently and therefore reducing the environmental impact.

It is the owner's responsibility to ensure that their Webb machine is maintained at specific intervals. Any approved Webb service dealer can undertake a service, which are specialised in our products and will be aware of your particular machine and any technical updates which will save valuable time & money.

If you are using your machine in dry, dusty or high temperatures, you will need to service the machine more regularly.

Fuel (if applicable)

Due to ongoing efforts by fuel companies to reduce emissions, unleaded petrol will oxidize & deteriorate in storage overtime, leaving residue from detergent components.


Fuel deterioration problems may occur when petrol is stored for over 30 days. If you are planning to store fuel for over 30 days, we recommend you add Handy Parts Sure-Start fuel stabilizer to fresh fuel after purchasing. Sure-Start cannot reconstitute stale fuel.

Storage

When storing your machine for an extended period, we do recommend that you follow the instructions of engine instruction manual.

Always store the fuel in a clean, approved and sealed container. If the container is steel, ensure it is not corroded. If the container is not filled to its recommended capacity, air can accelerate fuel deterioration.

Always store fuel away from direct sunlight, in a dark, cool environment.

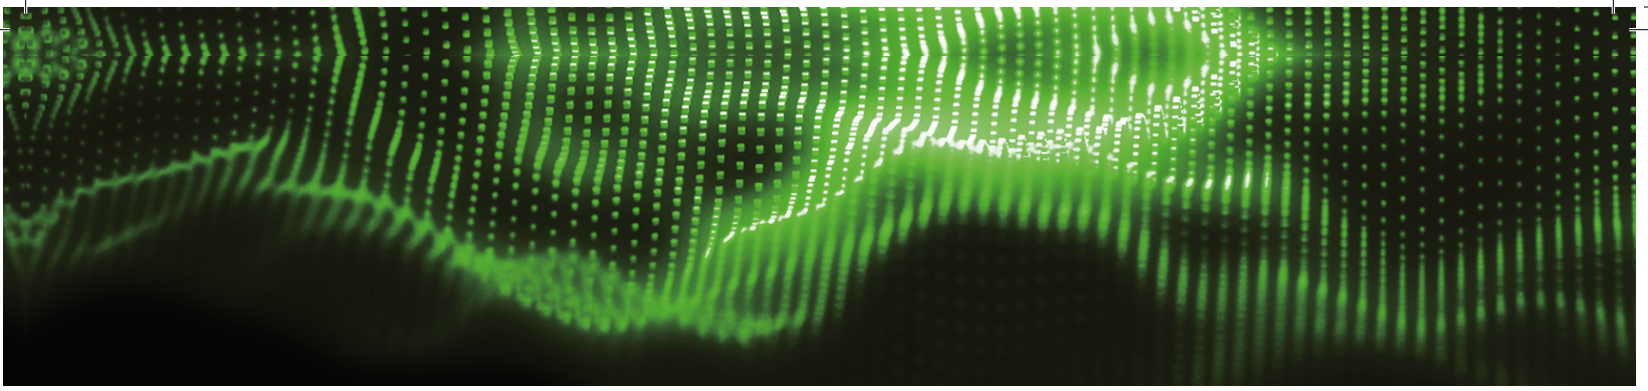

Your servicing Webb approved dealer will stamp & date the below relevant sections, when the correct service actions have been completed.

PLEASE ENSURE THE SERVICE BOOK IS AVAILABLE FOR THE DEALER, DURING SERVICE WORK.

1st Service

This must be stamped by an approved service dealer to qualify for a free second year warranty.
(Excluding the Webb Electric Handheld machines)

12 Months

Date

24 Months

Date


36 Months

Date




INSTRUCTION MANUAL

48 Months

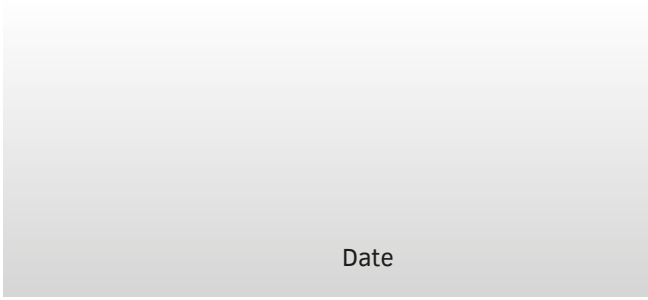


Date

60 Months

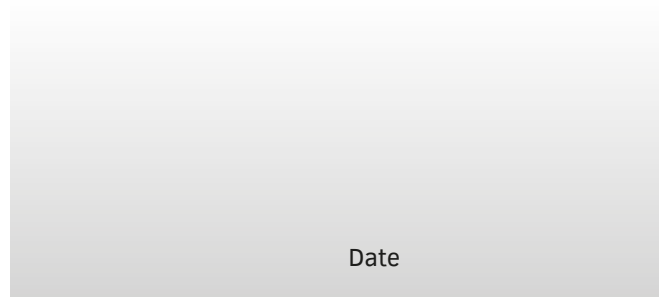


Date

72 Months

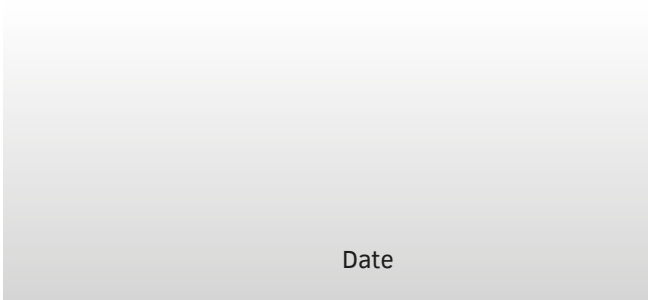


Date

84 Months

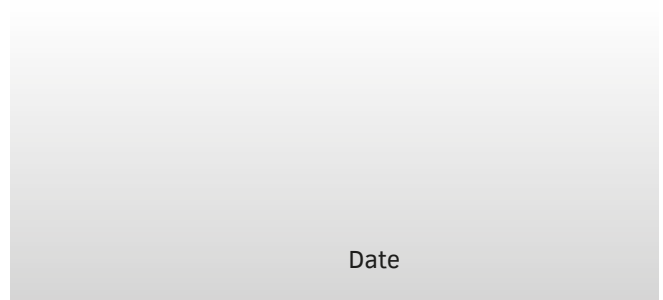


Date

96 Months

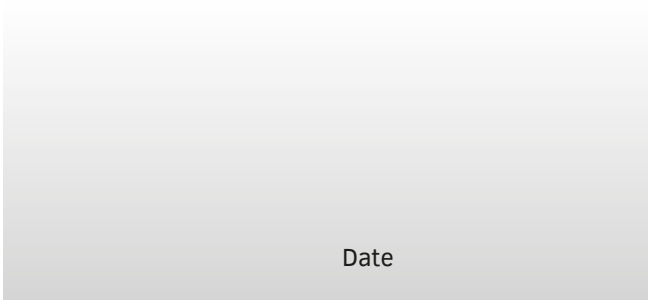


Date

108 Months

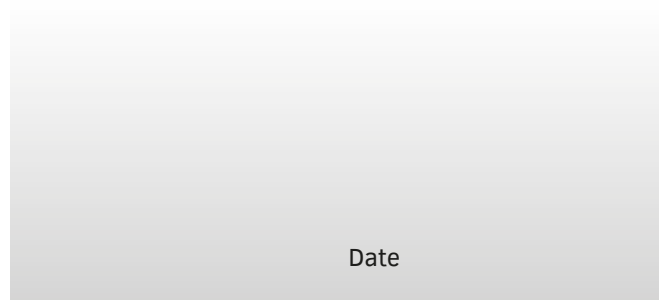


Date

120 Months

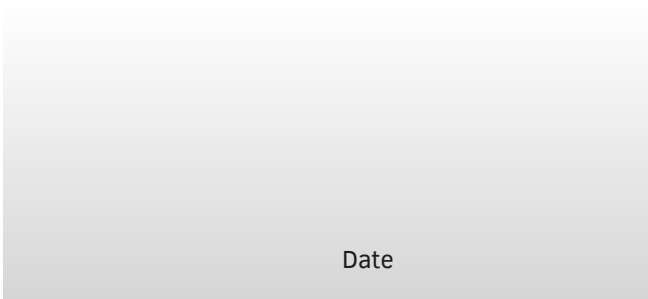


Date

132 Months

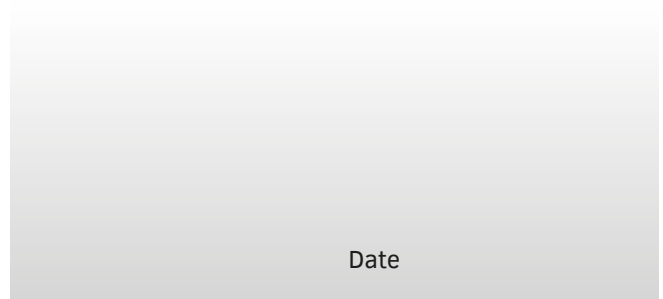

Date

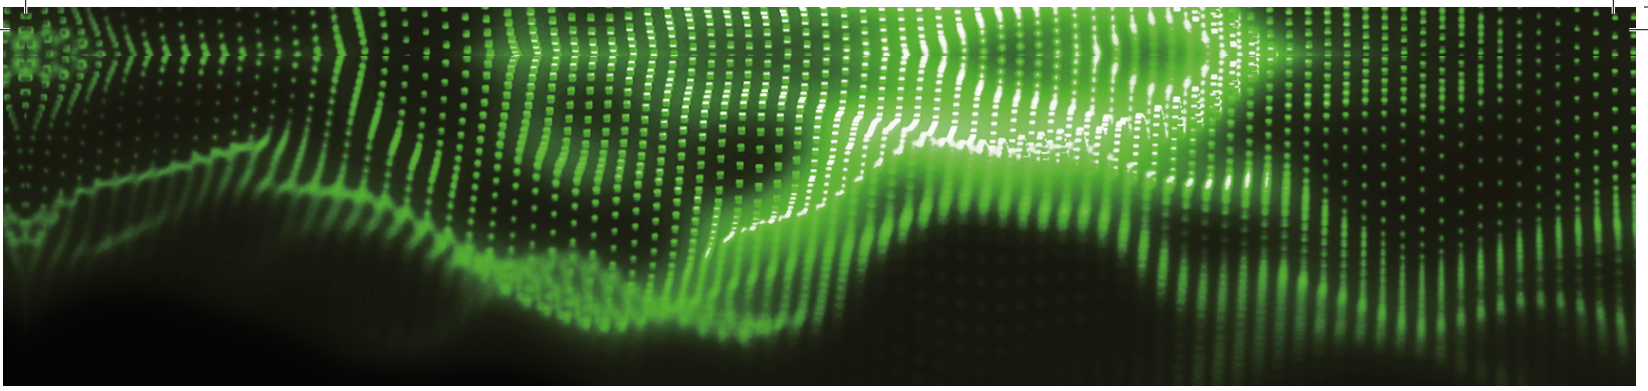

Personal Information (* Compulsory)

*Title		*Forename		*Surname	
*House Number		*House Name			
*Address 1					
*Address 2					
*Town					
*County					
*Postcode					
Home Tel		Mobile Tel			
Email					

Age	18 to 25		26 to 35		36 to 45		46 to 60		61 to 80		81 & over	
	*Usage	Domestic Use			Commercial/Professional/Hire Use							

*Dealer Stamp (if available)

*Selling Retailer (If dealer stamp not available)

*Dealer Name	
*Dealer Address	
*Date of Purchase	

Webb Lawnmowers privacy commitment to machine owners.

The information supplied, helps us to improve the products & services we provide, including information that we believe is relevant to your and/or your machine. We value your trust by giving us this information about yourself and we are committed to protecting your privacy.

Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding **PRODUCT RECALLS** specific to your machine. Please advise how you wish to be contacted for this specific reason only:

Post Telephone Email

From time to time Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding our products, services, offers or just opinions, which may be used for marketing, research or analysis purposes.

If you wish to be contacted by any of the following methods, please tick the relevant boxes:

Post Telephone Email

You may give Webb Lawnmowers notice in writing at any time that you no longer wish to receive direct marketing communications



Service & Support: cs@webbgardenpower.co.uk

Webb, Murdock Road, Dorcan
Swindon, Wiltshire SN3 5HY

New cordless garden machinery range from



ADVANCED 20V BATTERY TECHNOLOGY