

# **SCH**

**(SUPPLIES) LIMITED**

**Manufacturers & Suppliers of Estate & Garden Machinery**  
**TELEPHONE 01473 328272 • FAX 01473 327177**  
**[www.schsupplies.co.uk](http://www.schsupplies.co.uk)**

## **OPERATING INSTRUCTIONS**



### **Power Sprayer – 70 Litre Tank**

**Ref: PSP70**

## DESCRIPTION

The PSP70 sprayer is mounted on a strong four-wheel chassis. Two static wheels at the front with two castors at the rear makes this unit extremely manoeuvrable. The four-nozzle boom which can be removed for transport or storage is height adjustable and has a 'break back boom' feature. On contact with solid objects, the boom will fold, minimising the risk of damage.

The two outside nozzles can be individually isolated to give a narrow spray width.

## SPECIFICATIONS

Tank Capacity	70L (15 Gallons)
Spray Width	2440mm (96")
Pump Delivery (Open Flow)	7L per minute
Pump Voltage	12v DC bypass
Pump Operation Pressure	3.1 bar
Maximum Fluid Temp	54 °C
Chassis	Four-wheel chassis: 2 pneumatic at front, 2 pneumatic castors at rear.
Width	670mm (26")
Length	1600mm (63")

## SAFETY INSTRUCTIONS

- Never leave your sprayer where someone could trip or walk into it.
- Never allow people to ride on the sprayer.
- Do not use the sprayer in close proximity to other people.
- Do not inhale the chemical.
- Do not allow the chemical to come into contact with food.
- Do not smoke while operating the sprayer with chemicals.
- Do not allow the spray to contaminate rivers or ponds.
- Do not allow children to play with the sprayer.
- Do not spray on windy days.
- Do not use tar-based products.
- Always store the sprayer in a safe place.
- Wear protective clothing and eyewear when operating the sprayer.
- Test and familiarise yourself with the sprayer by using plain water.
- Do not allow the pump to run dry.
- Do not allow the pump to run with the sprayer nozzles closed.

If in doubt, please call the SCH customer help line at **01473 328272**.

## PREPARATION FOR USE

- Place the front mounting boom kit to the front of sprayer. Make sure that the boom mounting hose fixing are at the top.
- Push the bracket into the mounting and secure with black thumb screw.
- Fix the black delivery hose with quick-fit coupling on to the sprayer bracket.
- Fix the boom to the boom mounting bracket. The boom should be parallel to the ground.
- Fix the battery terminals to battery (Red +, Blue -)

## MAINTENANCE

The tank - Flush the machine through with clean water after use.  
Wash out thoroughly twice a year.

The pump - An inlet filter is fixed to the head of the pump. To clean unscrew the see-through filter bowl and clean. It is very important that on re assembly you place the black 'o' ring seal in the correct position and re fit the bowl.

Spray nozzles - Make sure they are spraying in an even pattern. There is a filter behind each nozzle which may require cleaning.

Chassis wheels - Grease twice a year

Thumb Screws - Remove twice yearly and insert into grease and replace

General - Check over for tightness of fixings and fittings  
A light spray over with preserving oil in the 'off' season will prolong the sprayer life.

Make sure to always protect the unit from frost.

## SPRAYING

- To commence spraying switch on toggle switch situated to the right-hand side of the handle.
- The spraying pressure may be adjusted by turning the red knob situated to the right-hand side of the pressure gauge.


### Hand Spraying –

- Switch off the sprayer
- Remove the delivery hose from the spray bar (push together and twist)
- Connect the delivery hose to the brass trigger lance
- Switch on the sprayer and begin spraying as required

## TROUBLESHOOTING

- If the pump fails to operate: - Check the electrical connection
- If the pump fails to deliver: -
  - Check suction hose is in correct position.
  - Check the filter head of pump is clean.
  - Check the 'O' ring on filter bowl is in position.
  - If the boom is fitted make sure the nozzles & filters are clear.
  - Check the lance handle is clean by unscrewing the brass barrel, also ensure the nozzle & filter are clear.

## HAND LANCE

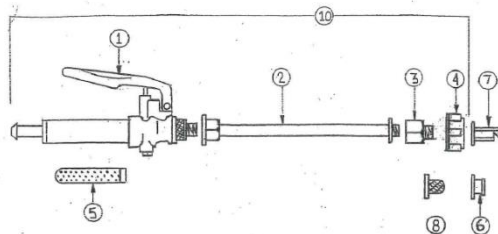

1. Lance Body
2. Lance Tube
3. Nozzle Holder
4. Nozzle Holder Cap
5. Filter
6. Round Nozzle
7. Wedge Nozzle
8. Nozzle Strainer
10. Complete Trigger Assy. Less Nozzle

**PARTS LIST**

<b>Description</b>	<b>REF</b>
Pump complete	PSP70 100
Pump head	PSP70 101
Battery	PSP70 102
Battery Charger	PSP70 103
Charger Leads	PSP70 104
25-Litre Tank c/w lid	PSP70 105
Lid with Fittings	PSP70 106
Tank Filter	PSP70 107
Tank Holding Cord	PSP70 108
Pressure Gauge	PSP70 109
Pressure Reducing Valve	PSP70 110
On/Off Switch	PSP70 111
Socket	PSP70 112
Plug	PSP70 113
Pneumatic Jockey Wheel	PSP70 114
Hand Switch and Cable	PSP70 115
Hand Lance Complete	PSP70 116
Nozzle Holder for Hand Lance	PSP70 117
Nozzle, Round	PSP70 118
Nozzle, Wedge	PSP70 119
4 Nozzle Boom Complete	PSP70 121
Fan Nozzles for Boom	PSP70 122
Nozzle Filters for Boom	PSP70 123
Bronze Quick-fit, Male	PSP70 124
Wheels – Front	PSP70 125

## **CALLIBRATION**

**Calibrate as directed by the chemical manufacturers' instructions**

## **A SIMPLE GUIDE TO CHEMICAL / FEED APPLICATION**

If the area to be sprayed is 3000 sq. metres. and according to the instructions of the liquid bottle you select says sufficient for 1000 sq. metres. Put 3 bottles in the tank and go over the area (north/south, east/west) until the tank is empty.

Please note that having tested your sprayer with water as advised you may not require a full tank of mixture. Therefore, adjust requirements accordingly.

## **UNDERSTANDING CALIBRATION**

The law requires some 30,00 contractors and employed persons involved in pesticide applications to obtain a Certificate of Competence.

These personnel will receive a good grounding in the safe and efficient use of pesticides. The exemption rules are such that there will be a large pool of people applying pesticides who, at best, will not have undertaken recent training. A few far-sighted employers have incurred not inconsiderable costs by including all their employees on the training courses and will more than recoup on this investment over the years in increased efficiency.

### **Why Calibrate?**

It is now a legal requirement for all users to adhere to the label recommendations with regard to dosage rates, method of application, etc.

Besides being illegal to exceed the maximum recommended dose, getting the application rate wrong can have distinctly adverse effects on the cash flow and budgets.

Consistent overdosing of sites is not only environmentally undesirable; it also increases the risk of damage to non-target species and run- of damage in more sensitive areas. It can, even with a modest spraying programme, cost hundreds of pounds each year in wasted chemical and unnecessary losses.

Under dosing, on the other hand can be equally costly. If weeds, for example are not controlled at the first application, a second later application may be necessary. This may involve higher rates, a more expensive chemical or even hand weeding. Add to this the disruption to work schedules and it becomes evident that careful monitoring and control of all application programmes is essential.

Correct application and efficient monitoring is only possible if all personnel involved have a thorough understanding of calibration techniques.

## TERMINOLOGY

### **Treated Area**

All chemical data, whether in advisory leaflets or label recommendations, is stated in litre or kilogrammes of product per treated area. The actual area to be treated thus has to be calculated for budgeting, purchasing, job planning and calibration purposes.

### **Overall Application**

The treated area is equal to the gross area

### **Band Application**

The treated area is less than the gross area and is calculated thus:

Band width x Band lengths x No of bands

### **Spot Application**

The treated area is significantly less than the gross area and is calculated thus:

Area of spot =  $0.7855 \times (\text{diameter})^2$  (metres) (derived from  $\pi d^2/4$ )

Treated area (ha) = Area of spot x No of spots per ha  $\div 10,000$

Quite obviously, the smaller the area that can be treated to achieve the desired result; the less costly the operation. With the area calculated, the variables involved can be determined in order to calibrate equipment to complete the spraying operation in a safe and efficient manner.

### **Forward Speed**

With overall and band applications, control of forward speed is critical in determining how much chemical is applied. This will vary with the type of terrain and must be realistically calculated. In flat terrain where unimpeded progress is possible, forward speed will be greater than in undulating, heavily vegetated conditions. In the latter, trial may be necessary to determine a constant work rate, which can be, maintained both up and downhill.

### **Swathe width**

The width covered at each pass is known as the swathe width and will vary with, for example, choice of nozzle, operating pressure and height of application. Having selected the appropriate nozzle and operating pressure the height selected must in the case of hand-held equipment be comfortable for the operator.

Equipment is comfortable for the operator. With non-pressurised equipment, such as CDA and gravity systems, there are obviously no operating pressures to worry about.

### **Nozzle Output**

Nozzle output is critical in all spraying operations and it is important to select a nozzle type appropriate to the viscosity of the concentrate being applied/swathe width required.

### **Flow Rate**

Flow rate will vary with nozzle type, viscosity, pressure and the ambient temperature at the time of application.

After selecting the most appropriate nozzle for the operation adjustment to pressurise equipment will be necessary to achieve the desired flow rate. Flow rate in powered machinery can be controlled by engine speed and/or internal pressure adjustment.

### **Application Rate**

Spray coverage of the target being sprayed should be sufficient to give an even application of the correct dose of pesticide on the area to be treated. The manufacturers recommendations must be followed and where there is a choice of options, i.e., high, medium, low, very low volumes, select the most appropriate volume to achieve the desired result.



### Tank Dilution

From the application rate, it is possible to calculate the amount of pesticide required per full tank.

Pesticide per fill (litres) = Tank volume (litres) x Pesticide volume (litres/ha ÷ Diluent's volume (litres/ha)

## CALIBRATION TECHNIQUE

Having determined the above, the next step is to calibrate the actual equipment chosen to apply the required amount of concentrate on the target area.

Each type of application obviously has its own calibration method which must be studied and closely followed, but in general the following notes for spraying equipment will hold good.

It is most important to understand that each applicator will vary slightly from others of the same type and manufacture. Thus, each piece of equipment must be individually calibrated.

The selected nozzles should be filled with water and the correct operating pressure selected.

The output of each nozzle should then be measured by spraying into a measuring jug for a set period of time, e.g., one minute, to give the nozzle output in litres/minutes.

As output will vary from nozzle to nozzle, in boom equipment the output from each nozzle should be checked. In larger boom equipment, at least four nozzles should be checked- one from each section and the output calculated accordingly. If nozzle outputs on boom equipment vary by more than 5%, the faulty nozzles should be replaced.

If output varies by a small amount from the calculated output, with some types of equipment, altering the operating pressure can rectify this. Where the output varies by a large amount, the calibration calculations should be re-checked and the nozzle type changed if necessary.

With all equipment the application pattern is checked and swathe width measured by treating an area of dry soil, concrete, etc.

Once the actual output is known, the forward speed can be calculated, in the case of liquid sprayers, thus: Forward speed (meters/hour) = Measured nozzle output (litres/minute) x 600,000 x (no of nozzles) Volume rate (litres/ha) x Swathe width (meters)

The equipment can then be filled with the recommended mixture of pesticide and dilutants. Never add pesticide concentrate direct to an empty tank, always half-fill the tank with dilutants prior to adding the concentrate and mix thoroughly.

A suitable test area. e.g., A 100m strip can be sprayed at this speed. At the end of this the actual application rate should be determined by topping up the tank using a measuring jug. The forward speed can then be adjusted to ensure that the concentrate is applied at the correct rate.

The serviceability of the equipment can be tested at the same time. Leaks are environmentally unacceptable and waste expensive. Blockages lead to patchy results and both make efficient monitoring impossible.

The full calibration process is only necessary when equipment has not been used for a while, after servicing or after changes in nozzles and pressure are made.

It is however, good practise to check the actual application rate at the commencement of each days work and after lunch. Adjustments can be made as appropriate.

Each employee will require access to a stopwatch and tape measure in order that they can monitor their own output. If resistance is met then this is a good indication that the employee has not understood the reasons behind the calibration process and further training is needed.

The process can be tedious but as operators become more familiar with the techniques, the loss in application time is reduced and more than offset by the improved results obtained.

Much can, of course be done by management to simplify the task by the production of job sheets clearly setting out the details of each task and providing space for records to be kept. These when returned, can be filed and the statutory requirement for adequate records to be kept met.

## MANAGEMENT TASKS

1. Analyse the objectives of the operation
2. Select the most effective chemical to achieve these objectives
3. Check the manufacturers recommendations to ensure that it is suitable for the task and select an appropriate application rate
4. Select the most efficient equipment to apply the chemical
5. Calculate the dilution rate per tank: Pesticide per fill =  
Tank volume (l) x Pesticide rate (l/ha) ÷ Dilatant's rate (l/ha)
6. Select an appropriate tank pressure for pressurised equipment
7. Select the correct nozzle to give the required swathe width
8. Calculate the gross area
9. Calculate the ACTUAL area to be treated. Overall application: Treated area = gross area  
Band application (ha): Treated area = Band width (m) x Band length x no of bands  
Width between row (m)  
Spot treatment (ha): Treated area =  $[0.7855 \text{ diam}^2 \text{ (m)}] \times \text{no spots/ha} \div 10,000$
10. Calculate an optimum forward speed based on the equipment to be used, the terrain type and the ease of movement
11. Issue comprehensive yet simple instructions to staff
12. Ensure that a record of the operation and its effectiveness is kept and any problems investigated fully

## SUPERVISORS TASKS

1. Read notes provided and check details
2. Check weather including wind speed and re-schedule operation if unsuitable conditions prevail
3. Ensure all operatives are issued with the correct safety wear, that this is serviceable and worn
4. Fill the sprayer with water and set to correct pressure
5. Measure nozzle flow rates using measuring jug  
Nozzle output (l/min) = quantity of spray in jug (ml) x 60,000 ÷ Time (sec)
6. Adjust pressure to give calculated output (if possible). If significant variation from calculated output, check calibration calculations and, if necessary, change nozzles
7. Spray an area of concrete or dry soil to determine the actual swathe width and for an even droplet pattern. With boom equipment ensure that the spray pattern from each nozzle overlaps correctly
8. Check for leaks and blockages. Blockages should only be cleared by using compressed air and never with wire!
9. Using the actual nozzle output and the actual swathe width determine the actual forward speed required to apply the correct quantity of chemical  
Forward speed = Nozzle output x 600,000 x No of nozzles ÷ Volume rate x swathe width
10. Compare this with the optimum speed and recalculate the operation if necessary
11. Fill the tank with correct quantity of concentrate / dilutants
12. Mark out an appropriate test area, spray and calculate the actual application rate. Adjust the forward speed as appropriate
13. Issue clear and simple instructions based on the actual output of the equipment
14. Monitor the operation and ensure that regular checks on output are made
15. Ensure that tank washings and surplus chemical are disposed of safely in accordance with the law
16. Ensure that adequate records are maintained on the basis of the actual operating parameters

# FLOJET®

## Duplex II Industrial Series Low Pressure (30 to 60 PSI)

### INSTALLATION & SERVICE INFORMATION

#### DESCRIPTION

FLOJET Industrial Duplex II Pumps are designed for a wide range of applications and are constructed from a selection of materials suitable for handling a broad range of chemicals. The Duplex II series of diaphragm pumps are self-priming and can be run dry without harm. They are intended for intermittent duty cycles but can be run continuously for short periods of time. The higher the duty cycle the shorter the expected life of the pump.

Typical pump uses are liquid transfer, spraying, cooling, circulation, filtration and dispensing.

#### OPERATION

To start and prime the pump, the discharge line must be open allowing trapped air to escape thus avoiding the potential of airlock. The pressure switch will shut off the pump automatically when the discharge valve is closed and the pressure has risen to the switch OFF set point. The pressure switch will restart the pump when a valve is opened and the discharge line pressure drops to the ON set point of the pressure switch.

#### DEMAND OPERATION (INTERMITTENT DUTY)

Demand Operation is considered an "intermittent duty" application. The maximum intermittent duty cycle is that which will cause the motor to reach its maximum thermal limits. Once the maximum thermal limit is reached, the motor must be allowed to settle to a lower temperature ideally being ambient before resuming operation. Running the pump at or near the maximum thermal limit for extended period of time will shorten the life of the pump and may result in immediate pump failure.


#### BYPASS OPERATION (IF EQUIPED)

Models equipped with an external bypass system are designed to pump at high pressures while at low or high flow rates. Models equipped with a bypass only will continue to run until the power is manually turned off.

The Duplex II pumps are not recommended for continuous duty service due to limited motor brush life. Operation at lower pressures and temperatures, however, will extend overall pump service life.

#### MOUNTING

The FLOJET Duplex II Series pumps are self-priming. Vertical prime may vary depending on the fluid viscosity, suction tube size, foot valve and pump configuration. The pump should be mounted in a dry and adequately ventilated area. If mounted within an enclosure, provisions to cool the motor may be necessary.

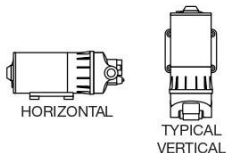

#### PREVENTATIVE MAINTENANCE TIPS



If pumping a liquid other than water the pump should be flushed with water (if applicable) after each use.

Sealers and Teflon tape acting as a lubricant can cause cracked housings or stripped threads due to over tightening. Care should be used when applying sealers; the tape may enter the pump inhibiting valve action, causing no prime or no shut-off conditions. Failures due to foreign debris are not covered under warranty.

Before freezing conditions occur, the pump must be liquid free or winterized with proper anti-freezing chemicals.

#### DIMENSIONAL DRAWING

Inches (Millimeters)  
Dimensional tolerances  
± 0.06 inches  
Consult factory if precise  
details are required.

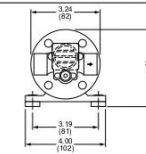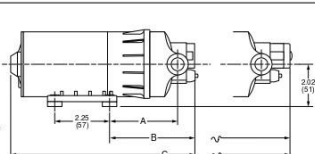


DEMAND PUMP	A	B	C
Minimum Dimension	2.53 (64)	3.98 (101)	8.00 (203)
Maximum Dimension	2.79 (71)	4.79 (122)	8.61 (219)
BY PASS PUMP			
Minimum Dimension	2.53 (64)	3.25 (83)	7.27 (185)
Maximum Dimension	2.79 (71)	3.51 (89)	7.73 (196)

If mounting the pump in an outdoor environment the pump should be shielded from water, dust, sunlight and wash down spray.

Do not assume chemical compatibility. If the fluid is improperly matched to the pumps Elastomers, the pump may fail to prime, have low pressures or the pressure switch may not shut off.

#### PLUMBING

 Use flexible hose of the correct pressure rating that is compatible with the fluid to be pumped. Tubing should be a minimum of 3/8" (9.5 mm) ID and at least 20 inches (508 mm) in length to avoid excess stress on the pump ports. Do not crimp or kink the tubing. The pump head may be rotated in 90° increments to simplify plumbing.

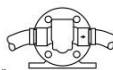

FLEXIBLE HOSE



RIGID PIPE

FLOJET does not recommend the use of metal fittings, standard plastic male and female threaded fittings can be acquired at commercial plumbing supply stores. FLOJET also distributes plastic barb fittings through our distributors (form no. F100-001).

The use of check valves in the plumbing system could interfere with the priming ability of the pump. If a check valve is installed in the plumbing it must have a cracking pressure of no more than 2 PSI (.14 bar).

Use of a minimum 40-mesh strainer or filter in the pump inlet line will prevent foreign debris from entering the system. Failures due to foreign debris entering the pump will not be covered under the limited warranty.

Note: Inlet pressure must not exceed 30-PSI (2.1 bar) maximum.



### WARNING



#### Risk of an electrical shock!

When wiring electrically driven pumps, follow all electrical and safety codes, as well as the most recent National Electrical Code (NEC) and the Occupational Safety and Health Act (OSHA).

Make certain the power source conforms to the pump voltage. Be sure all power is disconnected before installation.

The pump should be wired into an individual (dedicated) circuit, controlled with an UL/C-UL certified double pole switch rated at or above the fuse ampere indicated on the pump motor label.

On 115-volt AC pumps, the black wire lead is live or common, the white lead wire is neutral and the green/yellow is ground. On 230-volt AC pumps the brown wire lead is live or common, the blue wire is neutral and the green/yellow is ground.

On 12 and 24 volt pumps the red lead is positive and should be connected to the battery plus (+) terminal. The black lead is ground and should be connected to the battery minus (-) terminal. Use T6 AWG wire minimum. Use a fuse to protect the system wiring and components.


Improper duty cycle and/or rapid start stop conditions caused by undersized spray nozzles will cause the internal thermal breaker (if equipped) to trip, or can cause premature motor failure due to excessive heat.



### WARNING



#### DO NOT USE TO PUMP FLAMMABLE FLUIDS, GASOLINE, KEROSENE FUEL OIL, ETC. DO NOT USE PUMP IN A EXPLOSIVE ENVIRONMENT.

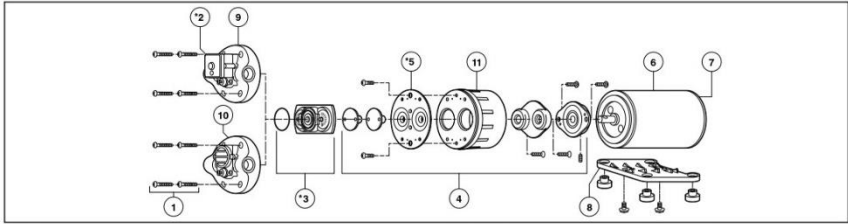

KEY	DESCRIPTION	KEY	DESCRIPTION
1	Pump Screws	7	Motor Rear End Bell Assembly
*2	Pressure Switch Assembly	8	Base Plate/Grommet Assembly
*3	Check Valve Assembly (With O Ring)	9	Upper Housing (Switch By Pass)
4	Diaphragm/Cam Bearing Assembly	10	Upper Housing (By Pass Only)
*5	Diaphragm	11	Bearing Cover
6	Motor Assembly (Less Base Plate)		*SPARE PARTS AVAILABLE

## DISASSEMBLE

### Pump Housing (2)

1. Disconnect power to the pump motor.
2. Remove pressure switch cover (2) and remove wire leads from switch assembly.
3. Remove the four recessed pump-housing screws (1) located on top of the pump housing (8 or 9).
4. Remove the pump housing (9 or 10) from diaphragm/lower housing assembly.

### Check Valve Assembly (3) – Follow steps 1 through 4.

5. The check valve housing and o-ring (3) located in the upper housing (9 or 10) or on the diaphragm cam assembly (4).
6. If in upper housing, remove by placing a small flat blade screwdriver between the upper housing and check valve housing and pry out.

### Diaphragm/Cam Assembly (4)

7. Remove two deep set phillips head screws (4).
8. Rotate bearing cover (11), so access notch is aligned with cam bearing set screw, loosen set screw with a 1/8" Allen wrench and slide pump lower housing assembly from motor shaft.
9. After removing the cam bearing from the outer piston set, the inner piston screws are now visible, remove both flat head screws. The outer piston set can now be removed from the two inner pistons.

## TROUBLESHOOTING

### Failure to Prime - Motor operates, but no pump discharge

- Restricted intake or discharge line.
- Open all line valves, check for "jammed" check valves, and clean clogged lines.
- Air leak in intake line.
- Punctured pump diaphragm.
- Defective pump check valve.
- Crack in pump housing.
- Debris in check valves.

### Motor Fails to Turn On

- Pump or equipment not plugged in electrically.
- Loose wiring connection.
- Pressure switch failure.
- Defective motor or rectifier.
- Frozen cam/bearing.

### Pump Fails to Turn Off after Discharge valves are Closed

- Depletion of available liquid supply.
- Punctured pump diaphragm.

## REASSEMBLE

### Diaphragm/Cam Assembly (4)

1. Place hex stem of inner pistons through the diaphragm and the openings in the bearing cover (11) and into outer piston set.
2. Center pistons in diaphragm and install two flat head screws.
3. Place cam bearing over outer piston set aligning locating pins into the holes of the cam bearing housing.
4. Install round head screws and tighten securely.

### Bearing Cover (11)

5. Coat motor shaft with grease prior to installing the diaphragm/cam bearing assembly (4) to motor.
6. Attach cam bearing assembly to motor shaft by aligning shaft indentation with set screw and tighten securely. (Rotate access notches down toward the base plate.)
7. Install and tighten 2 phillips head screws to motor (torque to 25 inch pounds).

### Check Valve Assembly (3)

8. Install check valve with new o-ring over the pistons in diaphragm, discharge side up (side with center circle up).

### Pump Housing (8 or 10)

9. Place pump housing (9 or 10) over check valve and align the four screw holes with bearing cover.
10. Install the four phillips head screws (1) into the bearing cover and cross tighten securely.

- Discharge line leak.
- Defective pressure switch.
- Insufficient voltage to pump.
- Debris in check valves.

### Low Flow and Pressure

- Air leak at pump intake.
- Accumulation of debris inside pump and plumbing.
- Worn pump bearing (excessive noise).

- Punctured pump diaphragm.
- Defective rectifier or motor.
- Insufficient voltage to pump.

### Pulsating Flow - Pump Cycling On and Off

- Restricted pump delivery. Check discharge lines, fittings, valves and spray nozzles for clogging or undersizing.

## SERVICE KITS

Kits are readily available to repair standard Duplex II series pumps. To insure that the correct kits are received the model number and all name plate data must be included with the order. Contact a FLOJET distributor or FLOJET directly to order the necessary repair kits.

## RETURN PROCEDURE

Prior to returning any product to Flojet, call customer service for an authorization number. This number must be written on the outside of the shipping package. Place a note inside the package with an explanation regarding the reason for return as well as the authorization number. Include your name, address and phone number.

## PRODUCT WARRANTY

Flojet warrants this product to be free of defects in material and/or workmanship for a period of one year after purchase by the customer from Flojet. During this one year warranty period, Flojet will at its option, at no charge to the customer, repair or replace this product if found defective, with a new or reconditioned product, but not to include costs of removal or installation. No product will be accepted for return without a return material authorization number. All return goods must be shipped with transportation charges prepaid. This is only a summary of our Limited Warranty. For a copy of our complete warranty, please request Form No. 100-101.

## WARRANTY

Your sprayer is warranted for 12 months from date of purchase. This guarantee covers faults which may occur from defective parts or manufacture.

This warranty only covers the sprayer for products that may be diluted with water. Tar based products are not recommended.



If you are missing your free brochure, contact us on **01473 328272**, email [sales@schsupplies.co.uk](mailto:sales@schsupplies.co.uk), or visit our website [www.schsupplies.co.uk](http://www.schsupplies.co.uk)

