

# **OPERATOR'S MANUAL & PARTSLIST**

## **MODEL – WEH30 PUSH SELF ADJUSTING CYLINDER MOWER**

### **FRONT COVER**

### **Spares & Support: 01793 333212**

Please read & understand this manual, paying particular attention to the safety instructions, before use.

The manufacturer reserves the right to change the product specification and livery according to continued product improvements.



# **CONTENTS**

**SPECIFICATIONS**

**SAFETY INSTRUCTIONS**

**MAINTENANCE & STORAGE**

**COMPONENTS**

**ASSEMBLY**

**OPERATION**

**TROUBLE SHOOTING**

**PARTS DIAGRAM & LIST**

**WARRANTY**

**DECLARATION OF CONFORMITY**






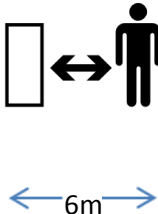 
## SPECIFICATIONS

Model	WEH30
Product Number	193873001
Height of Cut	10mm-40mm
No. of Cutting Heights	4
Number of Blades	6
Collector Capacity	17 ltr
Blade Material	Hardened Steel
Overall Dimensions (mm)	H-670, W-490, L-520
Weight	N.W 9.1kgs - G.W 9.85kg

**The manufacturer reserves the right to change the product specification and livery according to continued product improvements.**

# SAFETY INSTRUCTIONS

Read and understand the owner's manual and labels affixed to the machine. Learn its application and limitations as well as the specific potential hazards. Retain these instructions for future reference. The operator is responsible for following the warnings & instructions in this manual and on the product.

	Read & understand operator's manual before using the machine. Failure to follow instructions could result in death or serious injury.		Danger
	Always wear gloves to protect your hands when unpackaging the machine or working with the cutting cylinder. SHARP ROTATING BLADES		Wear foot protection or sensible shoes when using the lawnmower
	Keep hands out of the way of all moving parts.		Keep all bystanders & animals at least 6 metres away from the machine during operation. If approached, stop the machine immediately.



Safety alert symbol. Used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury.



## **DANGER**

Indicates an imminently hazardous situation which, if not avoided, will result in serious injury.



## **WARNING**

Indicates a potentially hazardous situation which, if not avoided, could result in serious injury



## **CAUTION**

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

## **CAUTION**

Used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

## **STAY ALERT**

Do not operate the lawnmower while under the influence of drugs, alcohol, or any medication that could affect your ability to use it properly. Do not use this lawnmower when you are tired or distracted from the job at hand. Be aware of what you are doing at all times. Use common sense.

## **AVOID DANGEROUS CONDITIONS**

Make sure there is adequate surrounding workspace. Cluttered areas invite injuries.

Keep your work area clean with sufficient light. Keep area around the lawnmower clear of obstructions, stones, sticks, wires and other debris or foreign bodies which could cause damage to the lawnmower.

**INSPECT YOUR MACHINE**

Check all bolts, nuts, and screws for tightness before each use, especially those securing guards and drive mechanisms. Vibration during use may cause these to loosen.

Replace damaged, missing or failed parts before using.

Warning labels carry important information.

Replace any missing or damaged warning labels.

**DRESS PROPERLY**

Do not wear loose clothing, gloves, scarfs, neckties or jewelry (rings, wrist watches), which can be caught in moving parts.

Wear protective hair covering to contain long hair, preventing it from getting caught in machinery.

DO NOT use whilst barefoot or wearing open toed footwear.

**KEEP BYSTANDERS AND CHILDREN AWAY**

Keep unauthorised persons a minimum distance of 6 metres away from the mower. Do not allow children to handle, use, or climb on the lawnmower.

**DO NOT OVERREACH**

Keep proper footing and balance at all times, particularly if using on slopes. The lawnmower should not be used on steep slopes and always be sure of footing.

**AVOID INJURY FROM UNEXPECTED ACCIDENT**

Keep hands out of the way of moving parts, particularly the cutting cylinder. When operating, do not pass hands through the clearance between frame, roller and cutting cylinder. The hardened steel blades are very sharp.

**DO NOT FORCE TOOL**

Always work within the rated capacity. Do not use the lawnmower for a purpose for which it was not intended.

**MAINTAIN YOUR MACHINE WITH CARE**

Clean the lawnmower immediately after use. Keep the lawnmower clean to ensure it operates to it's full and safest performance. When maintaining this lawnmower, only the manufacturer's original replacement parts should be used. The use of non-original manufacturer parts may invalidate your warranty.

**STORE IDLE EQUIPMENT**

When not in use, the lawnmower should be stored in a dry location. Keep the lawnmower away from children and others not qualified to use it.

# MAINTENANCE & STORAGE



## WARNING

**Improper maintenance & storage of the machine may void your warranty. Keep the machine clean for better and safer performance.**

## MAINTENANCE

- Before each use, check all nuts & bolts to be sure they are sufficiently tightened.
- We recommend only manufacturer original parts are used when maintaining this machine. Failure to do so could invalidate your manufacturer's warranty.
- The cutting cylinder blades should be sharpened every two years, or sooner when damaged by foreign objects to maintain performance.

## CLEANING

- Keep your lawnmower clean.
- Thoroughly clean the lawnmower at the end of each use, paying particular attention to grass cuttings in and around the wheels, roller and blades.
- We suggest regular application of multi-purpose oil or lubricant (i.e WD-40). This should be applied to all cutting surfaces and cutting reel axle shaft.




**Never put hands inside the cylinder when it is rotating.**

## STORAGE

- For years of trouble free service, make sure the lawnmower is clean and dry before storing.
- Before storing, clean the lawnmower thoroughly as indicated above.
- Store indoors or in a protected area during severe weather and winter months.

# COMPONENTS

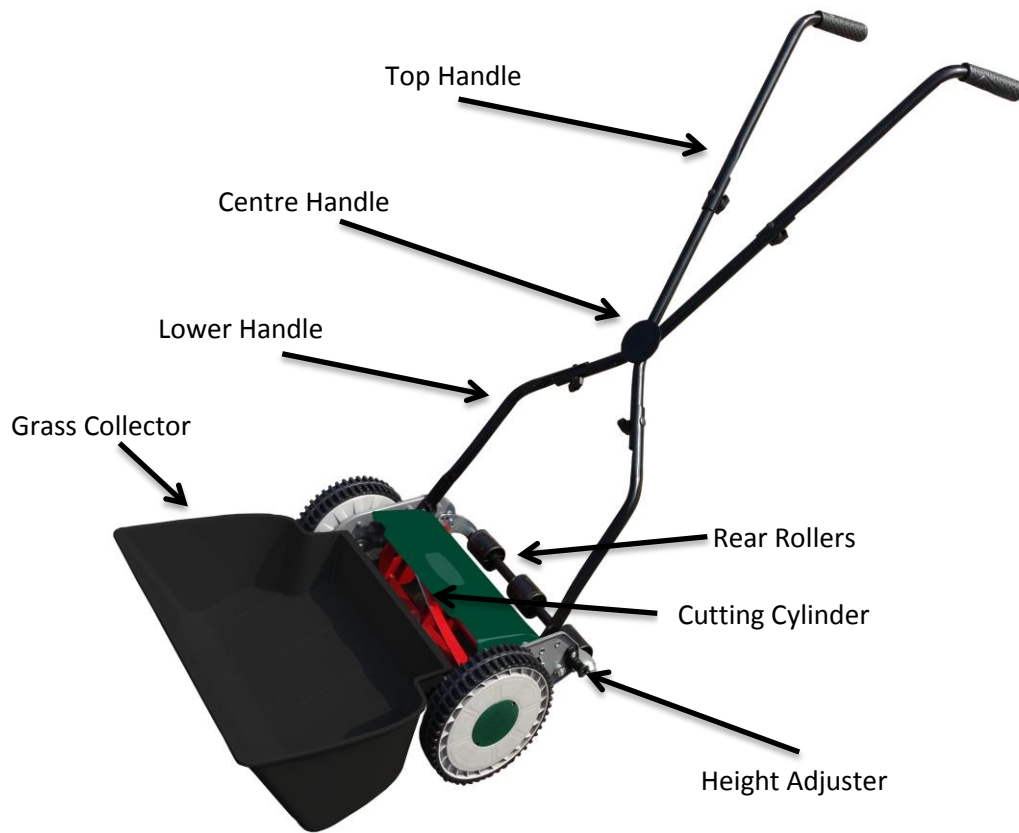

# ASSEMBLY

It is recommended that think gardening gloves are worn, when unpacking, adjusting, assembling and maintaining the lawnmower.

Remove the Mixer and contents from the carton. Be sure the carton is empty before discarding.

If you require any assistance with regards to the contents of the lawnmower contact us:

**Tel: 01793 333212 - Mon – Fri 8.30am – 5.00pm (excl. Bank Holidays)**

**Email: [customerservice@webblawnmowers.co.uk](mailto:customerservice@webblawnmowers.co.uk)**



## STEP 1 – FITTING THE HANDLE



### CAUTION

This operation has to be done close to the cutting cylinder blade. We strongly recommend the use of think gardening gloves on both hands and the lawnmower body is secured to stop the cutting cylinder blade from rotating.


1. Align the holes on both of the upper handles with those on the middle handles.
2. Secure both handles together using wing nuts & bolts provided.
3. Repeat the process with the lower handle.
4. Locate the handle connect peg, positioned on the side plate on the lawnmower and slide the appropriate lower handle over the peg.
5. Now attach the upper & middle handle assembly to the lower handle.
6. Follow step 4 & 5 for the opposite side lower handle.

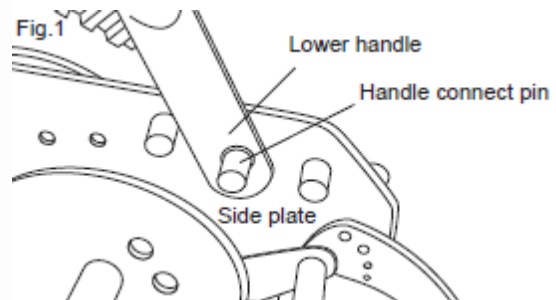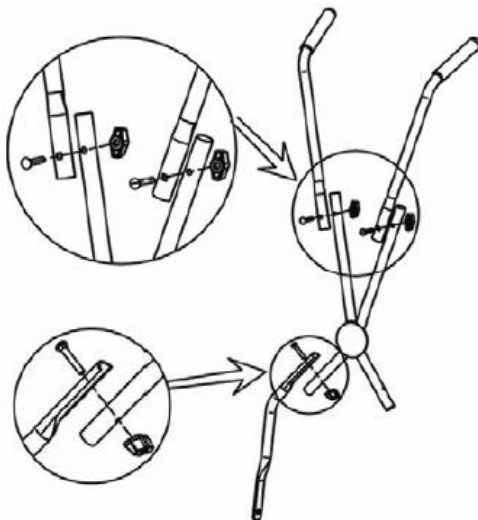

## STEP 2 – FITTING THE GRASS COLLECTOR

1. To fit the grass collector to your lawnmower, position the grass catcher onto the front protection cover.

Fig.4


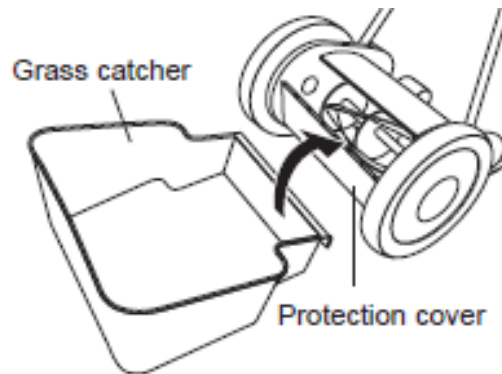


## STEP 3 – ADJUSTING THE CUTTING HEIGHT

The lawnmower can be set to any cutting height, between 10mm & 40mm. Depending on the height of the grass you are cutting; you may want to adjust the cutting height, using the four cutting heights available.

1. To adjust the cutting height, pull out the two adjust knobs located on the outside of the side plate.
2. Move the knobs up or down to locate into the suitable cutting height hole.


Fig.5

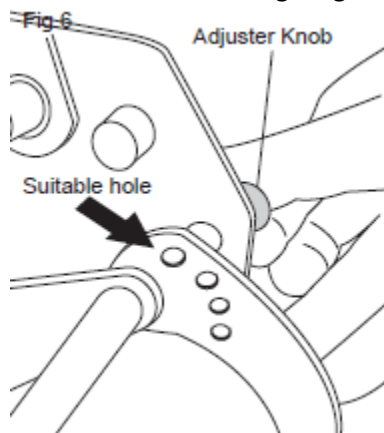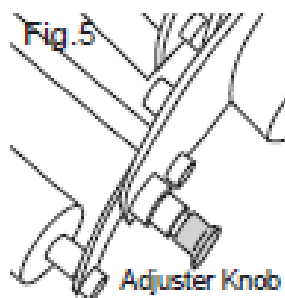

## OPERATION

Before operating the machine, please ensure you are fully aware of the instructions, failure to do so, could invalidate your manufacturer's warranty.


1. For best results, place the lawnmower on the edge of the lawn, mow in a forward direction.
2. Then at right angles at the end of each turn, slightly overlapping the previously cut strip.
3. The next time you mow the lawn, try to work at right angles to the previous cut. This will help prevent unevenness in the soil surface, which can build up if you always mow in the same direction.

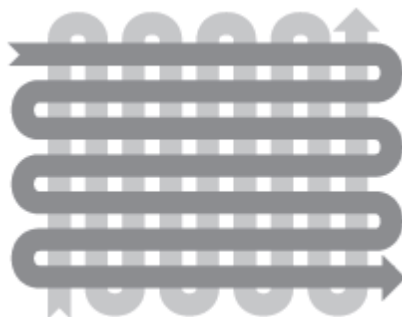

## TROUBLE SHOOTING

Problem	Answer	Fix
The lawnmower is not cutting?	Grass is too high Height adjustment required	Use suitable tool to reduce grass height to below 40mm. Adjust to suitable even height
Wheel does not turn?	Stone is lodged into gear of wheel. Foreign material between cylinder & cutter bar.	Inspect & remove .  Wear gloves to protect hands from blades and remove material.
The cut is uneven?	The blade may be damaged Height adjustment required	Visit your local Webb dealer to have the blade inspected. Adjust to suitable even height.

# PARTS DIAGRAM

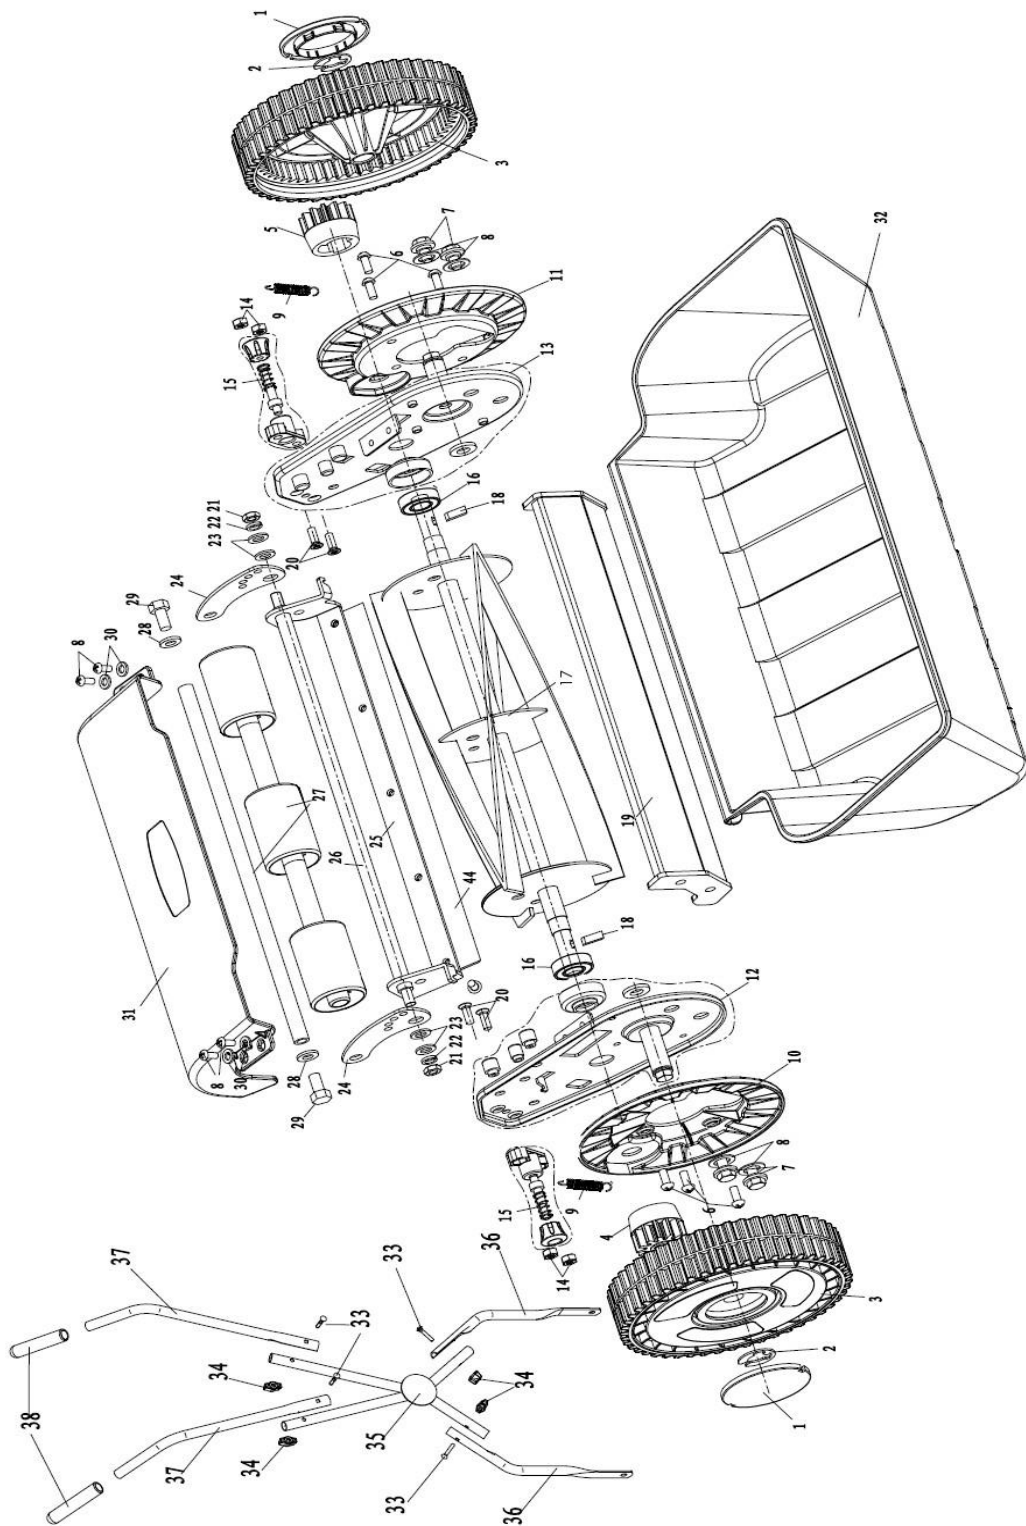

PARTS LIST

Item No.	Webb Part No.	Description	Qty	Item No.	Webb Part No.	Description	Qty
1	WE05A16F04	Wheel Trim	2	20	WEM8M01	Sunk Screw M6x12	4
2	WE12J03	E-Clip	2	21	WEM8F03	Hex Nut M8	2
3	WE16A08F01	Wheel	2	22	WE8Q03	Spring washer $\phi$ 8	2
4	WE05A16C06	Left Gear	1	23	WE8G03	Washer	4
5	WE05A16C07	Right Gear	1	24	WE16A08E07	Roller Bracket	2
6	WEM6D13	Screw M6x10	10	25	WE16A12D01	Cutter Bar Assembly	1
7	WE14A18L13	Hex Bolt M8x12.5	4	26	WE16A12D14	Cutter Torsion Bar	1
8	WE12.5G14A	Washer $\phi$ 12.5X20X1	4	27	WE16A12E	Roller Assembly	1
9	WE16A08G04-B	Spring	2	28	WE10G03	Washer 10	2
10	WE16A08F07	Left Side Cover	1	29	WE14A18L17	Bolt 3/8-16X16	2
11	WE16A08F08	Right Side Cover	1	30	WE6G03	Washer $\phi$ 6	4
12	WE16A08A01	Left Side Plate	1	31	WE16A12C28-B	Grass Delivery Plate	1
13	WE16A08A02	Right Side Plate	1	32	WESGG-007-12	Grass Catcher	1
14	WEM6E04	Lock Nut M6	4	33	TH133-45	Bolt M6x35	4
15	WE16A08E27	Roller Adjuster	2	34	TH133-46	Wing Nut	4
16	WEGB6002	Bearing 6002-2Z	2	35	TH133-47	Centre Handle	1
17	WE16A12C01	Cutting Cylinder	1	36	TH133-48	Lower Handle	2
18	WE05A16C05	Pawl	2	37	TH133-49	Top Handle	1
19	WE16A12B01	Protection Cover	1	38	WE108-50	Handle Grip	2



# EC DECLARATION OF CONFORMITY

**We Handy Distribution Ltd - SN3 5HY (Importer) declare that the product:**

**Designation:** Hand Push Lawn Mower

**Model(s):** WEH30

**Type/Serial No.** As per rating label on machine

**Complies with the following directives:**

Machinery Directive as last amended by EEC directive 2006/42/EC Annex -VII

**The conformity assessment procedure followed was in accordance with**

EN ISO 12100:2010, EN ISO 13857:2008, EN 953: 1997+A1:2009, EN ISO 13849-1:2008,  
EN 1037: 1995+A1:2008, EN ISO 14119:2013

**Notified Body:**

Global Testing Services Co. Ltd

**Addresses:**

No. 968 Meilong West Road, Minhang District, Shanghai City 201104, (P.R China)

**Authorised signatory and technical file holder**

**Date:** 06/11/2015

**Signature:**

**Name:** Mr Simon Belcher

**Position:** Managing Director

**Company:** Handy Distribution Ltd

**Address:** Murdock Rd, Swindon, Wiltshire, SN3 5HY.

