



51cm Self Propelled
High Wheel Steel Decked
Lawnmower

WER51SP

1938175001

Operator's Manual

Please read & understand this manual, paying particular attention to the safety instructions, before use.
The manufacturer reserves the right to change the product specification and livery according to continues product improvements.



CONTENTS

SPECIFICATION

IMPORTANT INFORMATION

GENERAL SAFETY INSTRUCTIONS

KNOW YOUR MACHINE

ASSEMBLY

FUEL & OIL

OPERATION

MAINTENANCE


PARTS DIAGRAM & LIST

GUARANTEE

DECLARATION OF CONFORMITY

SPECIFICATION

Model	WER51SP
Product Number	1938175001
Engine model	SL1P68F, 4 stroke, forced air cooling
Engine displacement	163cc
Engine rating power	2.5 kW
Rated speed	2900 min ⁻¹
Fuel tank capacity	1.3 L
Oil tank capacity	0.6 L
Cutting width	510 mm
Grass bag capacity	60 L
Net weight (including engine)	35 kg
Adjustable cutting height	26 - 68 mm / 7 stages

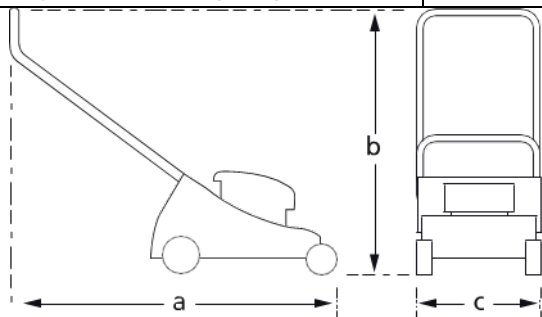

Dimensions:

a = 157cm

b = 105.5cm

c = 69cm

Consistent with our policy of continuous improvement, WEBB reserves the right to change the design and configuration of any of its products without notice or obligation. Therefore, please treat the text and images in this manual illustrative purposes only. They may in no case serve as a basis for any legal claim.

If you require any assistance with regards to the contents or operation of your machine, please call our Customer Service Team on 01793 333212 or email customerservice@webbgardenpower.co.uk (Monday to Friday 8.00am to 5.30pm excl. Bank Holidays)



INSTRUCTION MANUAL

IMPORTANT INFORMATION



WARNING: Read this instruction manual carefully before operating this machine. Make sure that you are familiar with the controls and properly operate the machine. Following these instructions to reduce the risk of fire, electric shock and personal injury.

IF NOT USED PROPERLY THIS MACHINE CAN BE DANGEROUS!

This machine can cause serious injury to the operator and others, the warning and safety instructions must be followed to ensure reasonable safety and efficiency in using this product. The operator is responsible for following the warning and safety instructions in this manual and on the machine. Never use the product unless the fixing screws or guards are correctly positioned.

DESIGNED FOR DOMESTIC USE ONLY.

The Lawnmower is designed for use in private gardens, whose annual use does not generally exceed 50 hours and that are primarily used for GRASS & LAWN AREAS, but not in public facilities, parks or sports grounds and not for agricultural, commercial or forestry use. Compliance with this manual supplied by the manufacturer is a prerequisite for the proper usage of the machine. The operating manual contains servicing and maintenance instructions as well as directions for use.

TRAINING

Read the instructions carefully: Be familiar with the controls and the proper use of the equipment.









Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the age of the operator.

Never operate while people, especially children, or pets are nearby.

Keep in mind that the operator or user is responsible for accidents or hazards involving the machine that occur to other people or their property.

GENERAL SAFETY INSTRUCTIONS

It is important that you read and understand the owner's manual and labels affixed to the machine. Learn its application and limitations as well as the specific potential hazards. Retain these instructions for future reference. The operator is responsible for following the warnings & instructions in this manual and on the product.


	Read the instruction handbook before operating this machine.		This graphic and when accompanied by WARNING or DANGER , calls attention to actions which could lead to SERIOUS INJURY
	We recommend eye and ear protection		Wear foot protection or sensible shoes when using the machine
	Always wear gloves to protect your hands. SHARP ROTATING BLADES		Remove all objects that could be thrown by the blade in the working area.
	Keep hands and feet clear of the cutting deck when the machine is running.		The cutting blade will continue to rotate after the motor is switched off
	Do not expose to rain or damp condition		Be careful when using on slopes. Do not operate on inclines greater than 15°. It is advised to cut across the incline.
	No smoking. Do not use near a flame, or sparks		Keep all bystanders & animals at least 15 metres away from the machine during operation. If approached, stop the machine immediately.
	Fire Risk Fire and its vapors are extremely flammable & explosive. Fire or explosion can cause severe burns or death.		Risk of Carbon Monoxide Poisoning. Ensure working area is correctly ventilated.
	Running engines produce heat. Engine parts, especially the exhaust, become extremely hot. Severe thermal burns can occur on contact		Safety alert symbol. Used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury.
	Indicates an imminently hazardous situation which, if not avoided, will result in serious injury.		Indicates a potentially hazardous situation which, if not avoided, could result in serious injury
	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.		Used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.



INSTRUCTION MANUAL

PREPARATION

Always wear appropriate footwear, such as work boots, and trousers when operating the mower. Do not operate the equipment when barefoot or wearing open sandals. Always wear safety goggles or safety glasses with side shields when operating the mower.

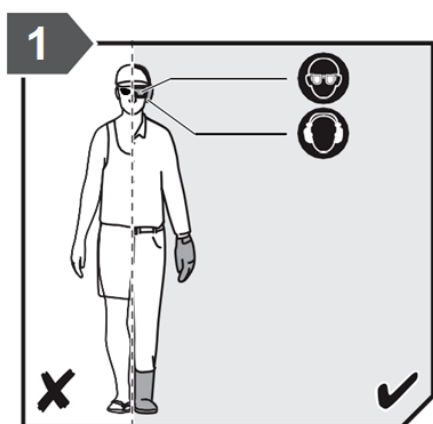

Thoroughly inspect the area where the equipment is to be used and remove all objects which can be thrown by the machine.

Before using, always visually inspect to see that the blades, blade bolts and cutter assembly are not worn or damaged.

Replace worn or damaged blades and bolts in sets to preserve balance.

Only use accessories approved by the manufacturer.

Do not operate the machine while under the influence of alcohol or drugs.

Never operate the machine in wet grass. This could cause you to slip while mowing.

OPERATION

Only operate the mower in daylight or in good artificial light.

Avoid operating the equipment in wet grass.

Always be sure of your footing on slopes.

Exercise extreme caution when changing direction on slopes. Do not mow excessively steep slopes, which exceed 15°. For wheeled rotary machines, mow across the face of slopes, never up and down.

Never run while using the mower, always walk.

Do not pull the mower backwards unless necessary. Use extreme caution when reversing or pulling the lawnmower towards you.

Stop the blade(s) if the lawnmower must be tilted for transportation when crossing surfaces other than grass (such as gravel drives, walks, or roads) & when transporting the lawnmower to & from the area to be mowed. Never pick up or carry a lawnmower while the engine is running. Never operate the lawnmower with defective guards, or without safety devices, for example deflectors and/or grass catchers, in place.

Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.

Stop the engine:

- ✓ before clearing blockages or unclogging the chute;
- ✓ before checking, cleaning or working on the lawnmower;
- ✓ after striking a foreign object inspect the lawnmower for damage and make repairs before restarting and operating the lawnmower,
- ✓ if lawnmower starts to vibrate abnormally (check immediately).

Shut the machine off and wait until the engine and the blade come to a complete stop before removing the grass catcher.

Watch for holes, ruts, or bumps. Tall grass can hide obstacles.

Do not mow near drop-offs, ditches or embankments. The operator could lose footing or balance.

Be alert and turn the machine off if children enter the area.

Never tamper with safety devices. Check their proper operation regularly.

Never attempt to make wheel height adjustments while the motor is running.

GENERAL MOWING TIPS

When cutting long grass, reduce walking speed to allow for more effective cutting and a proper discharge of the clippings. It is recommended that you cut longer grass in

stages. Start at a higher cutting height and go over the same area a second time with a lower cutting height.

Do not cut wet grass; it will stick to the underside of the deck and prevent proper collection or discharge of grass clippings. New or thick grass may require a higher cutting height.

Empty the grass box regularly, the discharge chute will become blocked with grass cuttings.

The mower is designed to operate and cut most effectively when moving forwards.

MAINTENANCE AND STORAGE

Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition.

Replace worn or damaged parts for safety. Keep the machine free of grass, leaves, or other debris build-up.

Allow the machine to cool before storing. Grass catcher components are subject to wear, damage, & deterioration, which could expose moving parts or allow objects to be thrown. Frequently check & replace them with the manufacturer's recommended parts, when necessary.

Mower blades are sharp and can be dangerous. Wrap the blade(s) or wear gloves, and use extra caution when servicing them.

STAY ALERT

Do not operate the machine while under the influence of drugs, alcohol, or any medication that could affect your ability to use it properly. Do not use this machine when you are tired or distracted from the job at hand. Be aware of what you are doing. Use common sense.

AVOID DANGEROUS CONDITIONS

Make sure there is adequate surrounding workspace. Cluttered areas invite injuries. Keep your work area clean with sufficient light. Keep area around the machine clear of obstructions, stones, sticks, wires and other debris or foreign bodies which could cause damage to the machine.

DO NOT SMOKE, whilst using the machine.

INSPECT YOUR MACHINE

Check all bolts, nuts, and screws for tightness before each use, especially those securing guards and drive mechanisms. Vibration during use may cause these to loosen.

Replace damaged, missing or failed parts before using.

Warning labels carry important information. Replace any missing or damaged warning labels.

DRESS PROPERLY

Do not wear loose clothing, gloves, scarfs, neckties or jewellery (rings, wrist watches), which can be caught in moving parts.

ALWAYS wear protective eye and ear wear. Appropriate gloves are also recommended.

Wear protective hair covering to contain long hair, preventing it from getting caught in machinery.

DO NOT use whilst barefoot or wearing open toed footwear.

KEEP BYSTANDERS AND CHILDREN AWAY

Keep unauthorised persons or animals a minimum distance of 15 metres away from the mower. Do not allow children to handle, use, or climb on the lawnmower.

DO NOT OVERREACH

Keep proper footing and balance at all times, particularly if using on slopes. The machine should not be used on steep slopes and always be sure of footing.

AVOID INJURY FROM UNEXPECTED

ACCIDENT

Keep hands out of the way of moving parts, particularly the engine and rotating cutting tool.

DO NOT FORCE TOOL

Always work within the rated capacity. Do not use the machine for a purpose for which it was not intended. Always use the correct handles provided with the machine.

MAINTAIN YOUR MACHINE WITH CARE

Clean the machine immediately after use. Keep the machine clean to ensure it operates to its full and safest performance. When maintaining this machine, only the



INSTRUCTION MANUAL

manufacturer's original replacement parts should be used. The use of non-original manufacturer parts may invalidate your warranty.

STORE IDLE EQUIPMENT

When not in use, the machine should be stored in a dry location. Keep the machine away from children and others not qualified to use it. **DO NOT STORE FUEL IN THE MACHINE**, fuel over 30 days old can become stale and if used, damage the


carburetor, which is not covered by the manufacturer's warranty.

SERVICE

Servicing requires extreme care and knowledge and should be performed only by a qualified service technician.

For service, we suggest you contact your nearest garden machinery specialist for repair. When servicing, use only identical replacement parts.

KNOW YOUR MACHINE

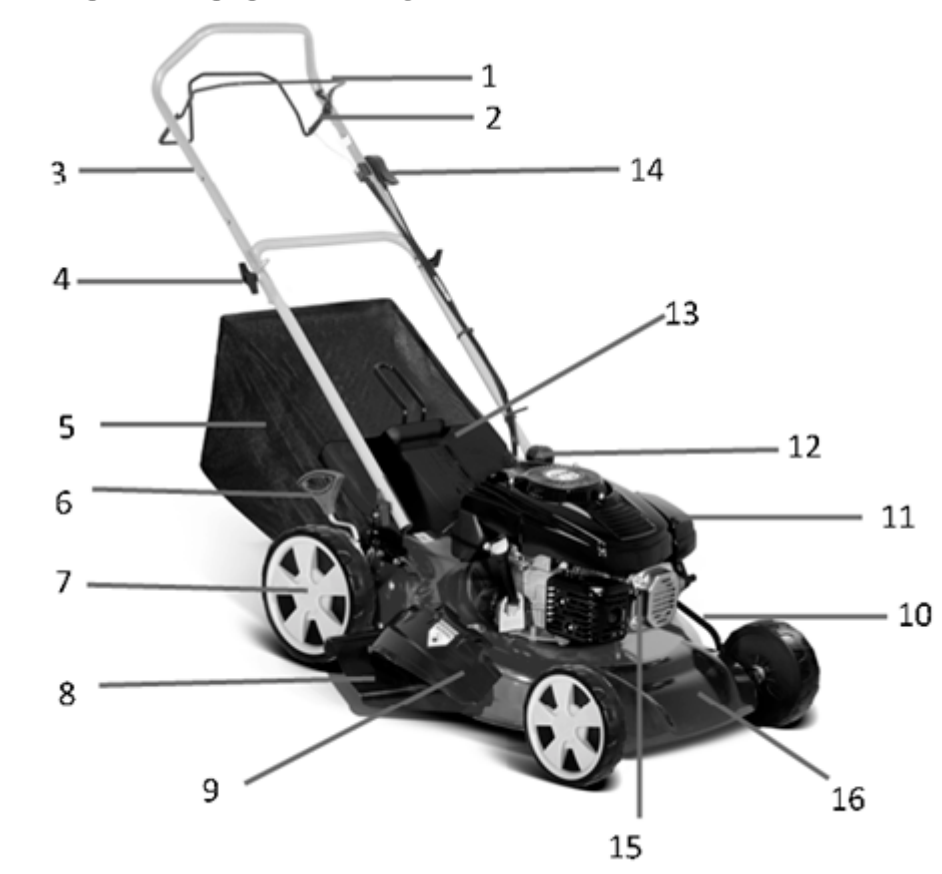

- | | | | | | |
|---|--------------------------|----|----------------------------|----|-----------------------|
| 1 | OPC/Brake lever | 7 | Wheel | 12 | Fuel tank |
| 2 | Drive lever | 8 | Side discharge guide plate | 13 | Rear flap |
| 3 | Handle | 9 | Side discharge cover | 14 | Throttle control unit |
| 4 | Flash nut | 10 | Connecting bar | 15 | Spark plug |
| 5 | Grass bag | 11 | Air filter | 16 | Deck cover |
| 6 | Height adjustment handle | | | | |


ASSEMBLY




Remove the contents from the carton and ensure you have all the below listed components:

Spark Plug Spanner x1, Instruction Manual x1, Multi-Spanner x1, Cable Ties x2, Upper Handle Wing Nut & Bolts x2, Lower Handle Nuts & Bolts x2, Recoil Starter Guide x1, Mulch Plug x1 (this may be fitted to the machine for transit purposes), Side discharge cover.


STEP 1 – HANDLES

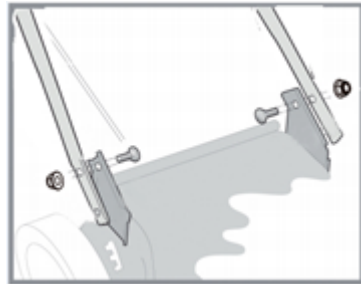

Place the lower handles onto the deck and secure by inserting the lower bolts & nuts. Tighten until secure.

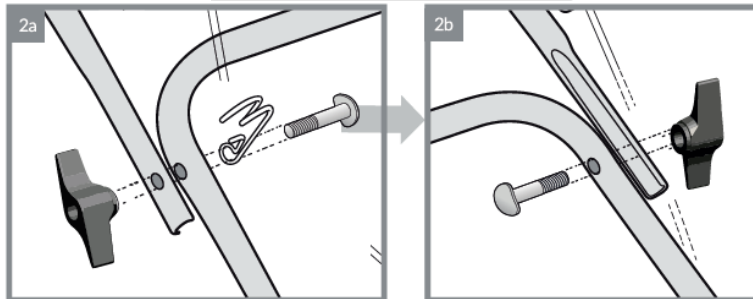

Pair the upper handle to the lower handle. Starting on the right side, place a bolt through the recoil starter guide, lower & upper handles and secure with a wing nut until tight. Repeat on the left side.

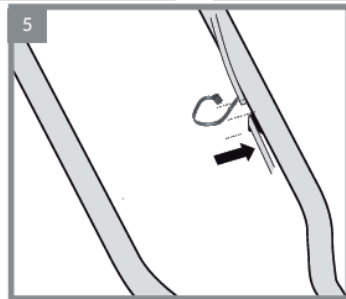

Secure the OPC/Brake & Drive cables to the upper and lower handles, using the cable ties supplied.




Hold the OPC/Brake lever up to the upper handle. Slowly raise the recoil starter up to the guide and house.



INSTRUCTION MANUAL

STEP 2 – GRASS COLLECTOR

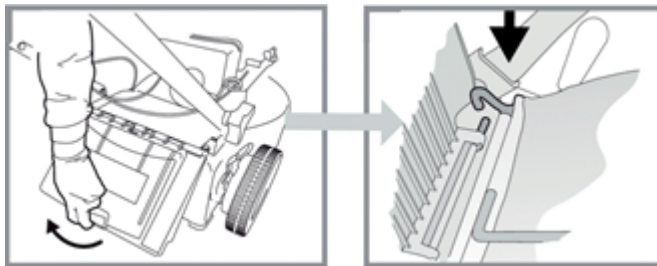

Left the rear grass flap and place the grass collector onto the bar and secure on the deck hooks.

Place the grass flap on top of the grass collector.

FUEL & OIL

ADD FUEL

- Unscrew the machine fuel cap slowly and fill the fuel tank with your fuel mixture to a maximum of 80% capacity. This will allow for fuel tank expansion.
- Fasten the fuel cap tightly, being careful not to cross-thread. This will also prevent loosening through vibration during use.
- Wipe away any spillage, with an appropriate material.
- If the machine has continued leaks, the product should not be started. Never use the machine with damaged ignition cable or spark plug cap, as there is a risk of sparks.
- Use good quality unleaded fuel which contains NO ETHANOL or METHANOL. Use Branded 89 octane or higher unleaded fuel, known to be of good quality.
- Fuel which is older than 30 days old can become stale and cause acid & gum deposits in the fuel system or essential carburetor components. This could result in starting issues which **would not be covered by your manufacturer's warranty.**
- To keep fuel fresh, we recommend you use *Handy Parts – Sure Start Garden Machinery Fuel Additive* which is available in 250ml bottles, for 25 litres of fuel.
 - ✓ Helps makes machines easier to start
 - ✓ Extends shelf life of petrol up to 2 years
 - ✓ Keeps carburetor & engine clean
 - ✓ Reduces emissions & increases fuel economy


IMPORTANT

Ensure that any stored petrol is clearly marked in a separate appropriate canister for a maximum of 30 days. **FUEL OVER 30 DAYS OLD WILL CAUSE THE CARBURETTOR TO BLOCK & THE MACHINE DIFFICULT TO START. THIS IS NOT A WARRANTY ISSUE AND WOULD BE CHARGEABLE.**

If the machine is not going to be used for a long period, drain the mixture from the fuel tank, start the engine & drain the carburetor of remaining fuel.


ADD OIL

- ✓ Recommended oil - 4-stroke SAE30 or 10W/30 engine oil.
- ✓ Remove the oil filler cap & dipstick
- ✓ Pour 0.6L of 4-stroke SAE30 or 10W/30 engine oil into the filler tube.
- ✓ Do not over or underfill the engine. Catastrophic failure can occur, not covered under warranty.

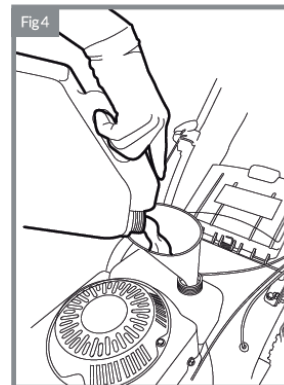

CHECK OIL LEVEL

1. Check the oil with the engine stopped and on a level surface.
2. Remove the oil filler cap/dipstick and wipe it clean.
3. Insert the oil filler cap/dipstick into the oil filler neck as shown, but do not screw it in, then remove it to check the oil level.
4. If the oil level is near or below the lower limit mark on the dipstick, remove the oil filler cap/dipstick & fill with the recommended oil to the upper limit mark. Do not overfill.
5. Reinstall the oil filler cap/dipstick.

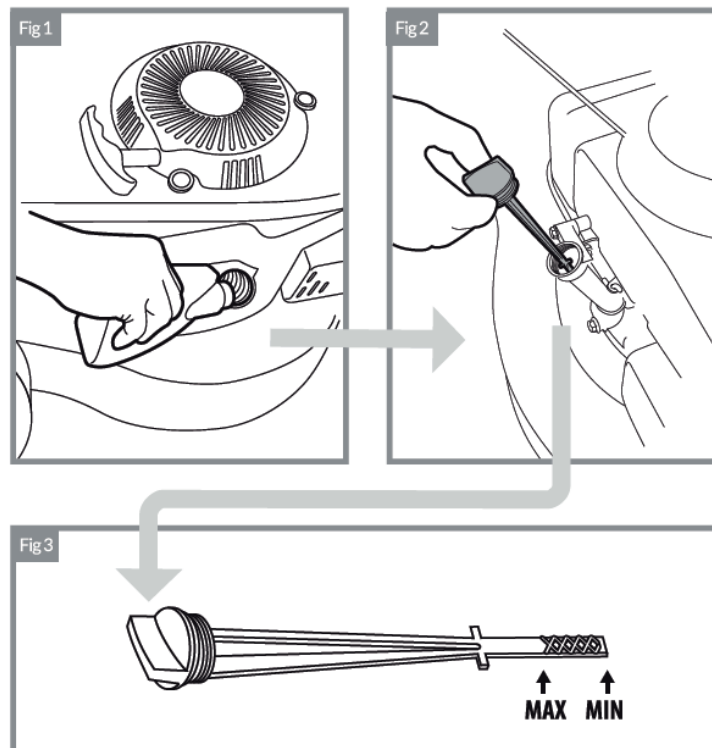

Operating the engine with insufficient oil can have catastrophic consequences. Any failure caused by insufficient oil, will not be covered by the manufacturer's warranty, supplied with this machine.



INSTRUCTION MANUAL

OPERATION

⚠ DANGER: All lawnmowers can throw small stones, metal or small objects as well as material being cut. Do not allow anyone to enter the operating **DANGER ZONE** with you. The danger zone is an area 20 metres in radius
Insist that persons in the **RISK ZONE** beyond the danger zone wear eye protection from thrown objects. If the unit must be used where there are unprotected people, operate at a low throttle speed to reduce the risk of thrown objects.
DANGER ZONE WITHIN 20 METRES - RISK ZONE GREATER THAN 20 METRES

ENGINE STARTING & STOPPING PROCEDURE

⚠ WARNING: Prior to operating, ensure all bolts, screws & nuts are securely tightened.

OPC/BRAKE LEVER - must be held up to the Push Handle to for the engine to start. Release to stop the engine.

STARTER/RECOIL HANDLE - used for starting engine.

DRIVE LEVER - used to engage the drive self-propelled forward motion of lawnmower. Push the lever up to the Push Handle and the machine will drive forwards.



Fig 1



Fig 2



Fig 3

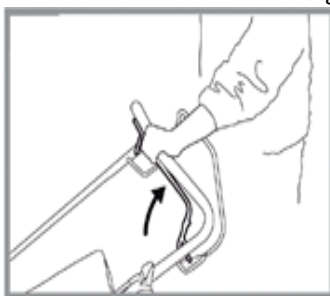


Fig 4

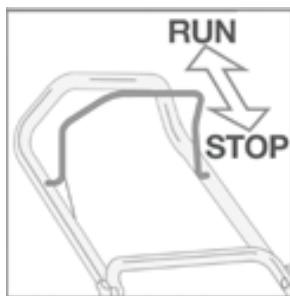


Fig 5

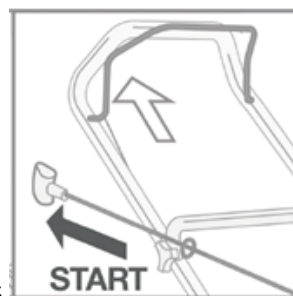


Fig 6

STARTING (COLD ENGINE):

Make sure your mower is on safe, flat surface (a paved area or path is ideal, avoid thick wet grass & gravel surfaces) away from fuel or fueling area.

Move the throttle control lever to the **START** position (Fig 1). Firmly hold the OPC/Brake lever against the top handle with your left hand (Fig 4), and then with your right handle, pull the recoil starter cord until you feel resistance. Then apply a vigorous pull with one positive action (Fig 6). Guide the cord back to its rest position, do not let the rope fling back. Repeat if the engine does not start. Once the engine has been running for 30 seconds, move the throttle control lever to the **RUN** position (Fig 2).

STARTING (WARM/HOT ENGINE)

Make sure your mower is on safe, flat surface (a paved area or path is ideal, avoid thick wet grass & gravel surfaces) away from fuel or fueling area.

Move the throttle control level to the **RUN** position (Fig 2). Firmly hold the OPC/Brake lever against the top handle with your left hand (Fig 4), and then with your right handle, pull the recoil starter cord until you feel resistance. Then apply a vigorous pull with one positive action. Guide the cord back to its rest position, do not let the rope fling back. Repeat if the engine does not start.

STOPPING

Gradually release the OPC/Brake lever, until the engine stops.

CUTTING

COLLECT

Remove the mulch plug, put the side discharge cover into the closed position and place the grass collector onto the rear of the machine. Grass will discharge into the grass collector.

SIDE DISCHARGE

Remove the mulch plug and grass collector. Put the side discharge cover into the open position and fit the side discharge chute. Grass will discharge onto your lawn at the side of the machine.

MULCH

Put the side discharge cover into the closed position. Fit the mulch plug into the rear discharge chute. The grass collector can be fitted for convenience. The grass will then be dispersed under the lawnmower into your lawn in fine cuttings. This is a natural feed for your lawn.

CUTTING HEIGHT ADJUSTMENT



WARNING: Always turn the mower off, before adjusting the cutting height.


For best results, adjust the cutting height of your mower to suit your lawn conditions. Do not try to cut too much grass in one pass. Adjustment of the cutting height is made centrally. Turn off the mower and take the weight of the mower by lightly lifting the bottom handle crossbar. Take hold of the Cutting Height Adjustment Lever, positioned on the mower's right-hand rear wheel. Move the lever outwards to release it from its locating notch. Move the lever towards the front of the machine to increase the cutting height and towards the rear to reduce the cutting height. Return the lever to the locating notch to set the desired cutting height. Make sure the handle fits snugly and securely into its serrated holder (fig 9).





INSTRUCTION MANUAL


MOWING THE LAWN

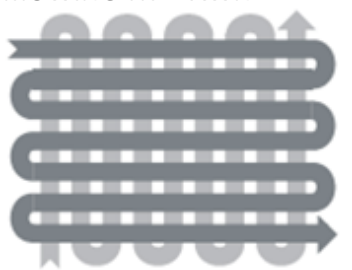


For best results, cut your lawn in alternative directions, switching each time you cut. Cut your lawn at an equal height. Slightly overlap your cutting lines. Remove longer grass in sections and pass over the same grass at a lower height, in a second movement.

Mulching Plug

The mulching insert prevents grass from being collected by blocking the collection chute. This allows the grass clippings to be deposited back on the lawn during cutting.

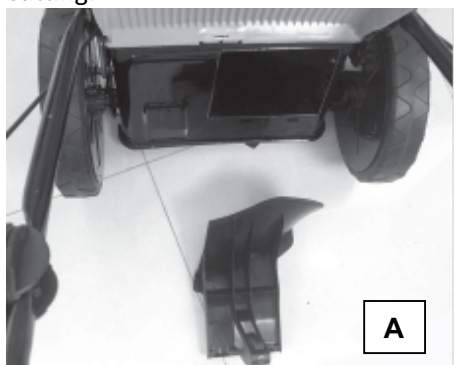

Open the rear deflector guard, hold it in position and insert the mulching insert into the rear discharge chute (Fig. A). Ensure the lower side of the handle snaps in place.

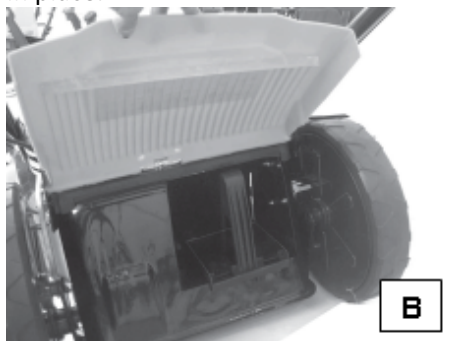


Press the lower side of the handle to release and remove the mulching insert (Fig. B).


When removing the mulching insert, you should drag it to the left side and remove it from the mower deck.

Side discharge attachment

Use the side discharge attachment when using the product for side discharging.

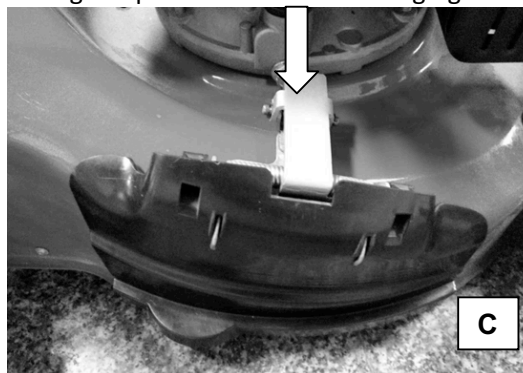

Before using the side discharge function, press down the end of the lock. (Fig. C & Fig. D).

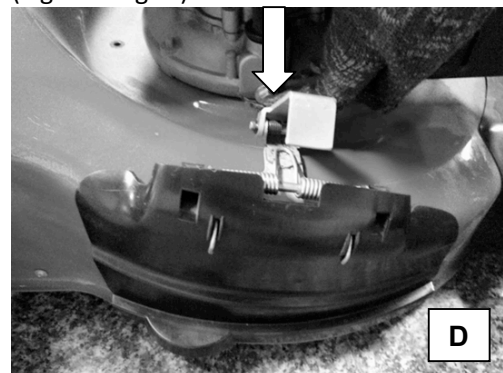

Lift the side deflector guard and attach the lugs of the chute to the guard bar (Fig E).



MAINTENANCE



WARNING: Before inspecting, cleaning, or servicing the machine, disconnect the Spark Plug from the machine. Failure to follow the instructions can result in serious personal injury or property damage.

CLEANING



WARNING: Turn off your mower before undertaking any cleaning.

Cut grass is damp. Regular cleaning after each use will ensure better functioning of the machine and reduce the risk of corrosion or seizure.

Having finished mowing allow the engine to cool, then remove the accumulated grass clippings from and around the engine with a brush. Clean the grass collector annually with a brush or gently spray water and allow to dry.

Clean the underneath of the deck regularly – disconnect the spark plug and tilt the machine backwards. Remove the cut grass with a scraper or brush.

DO NOT USE pressure washers or hot water to clean the mower. Dry off the machine before storing, by leaving it running for a few minutes on a flat, clean surface to prevent corrosion or seizure.

STORING YOUR MOWER

Store the mower in a dry, well ventilated area away from flames, sparks, or heat sources.

Disconnect the spark plug. Avoid storing underneath a tarpaulin or similar cover as it may cause condensation resulting in corrosion.

Winter storage: thoroughly clean the mower. Run the engine outdoors until the fuel tank is empty). Alternatively, use a suction pump to remove with the engine off and run the engine until the remaining fuel is consumed. Turn the fuel tap to OFF. Dispose of discarded fuel safely & responsibly.

Remove the spark plug, pour a tablespoon of SAE30 or 10W/30 4-stroke engine oil into the cylinder opening. Gently pull the recoil rope several times to distribute oil around the engine, to protect the cylinder over winter. Replace and tighten the spark plug.

TRANSPORTING THE MOWER

Ensure the fuel tank is empty.

Run the engine until any remaining fuel is consumed. Allow the engine to cool.



INSTRUCTION MANUAL

BLADE MAINTENANCE



WARNING:

Blades are sharp. When handling the blade assembly, wear non-slip, heavy-duty protective gloves. Do not place your naked hand or fingers on the blade or in any position where they could get cut. **NEVER** touch the blades or service the unit when the engine is running.

SHARPENING

Never attempt to sharpen the blade yourself. The blade must remain balanced; an unbalanced blade will cause excessive vibration through the machine. Always have a blade sharpened by a professional garden machinery specialist.

Always check for any damage before each use and replace a damaged blade immediately, with an approved replacement part.

CHANGE – (TWO PERSON OPERATION)

Disconnect the spark plug cap & remove the fuel and oil. Tilt the mower on its side with air filter side uppermost. Firmly grip the blade with the gloved hand and remove the blade bolt, blade washer, blade and blade housing.


Check all the components to ensure they are undamaged.

When refitting the blade, ensure the turned-up edges of the blade are turned up towards the machine.

When replacing the blade, the blade bolt should also be replaced.

A damaged or unbalanced blade will cause excessive vibration and should be replaced immediately.

AIR FILTER

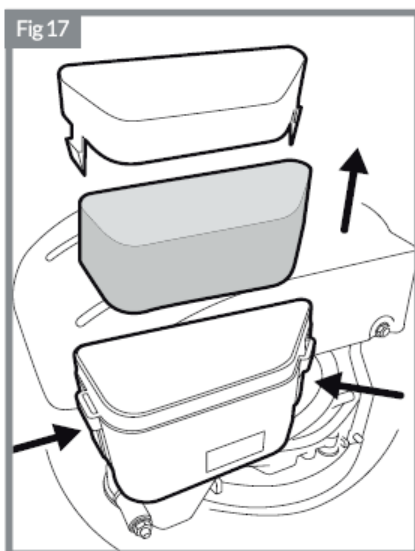



Inspect the air filter each time the engine is operated. You will need to clean the air filter more frequently if you operate the engine in very dusty areas. Always replace with genuine replacement parts.

NOTE: *Operating the engine without an air cleaner, or with a damaged air cleaner, will allow dirt to enter the engine, causing rapid engine wear. This type of damage is not covered under the Warranty*

Remove the air filter cover lid & remove the foam filter cartridge. Clean the cartridge in warm water containing a few drops of washing-up liquid, until it is clean & free from all grease & dust. Rinse the cartridge in clean water & gently squeeze to remove water. Let it air dry naturally.

Clean the cover & inside of the air filter box with a clean lint-free cloth. Apply a uniform layer of oil to the outside of the cartridge filter with a brush (you can use clean engine oil). Insert the filter cartridge into its housing and replace the filter lid, ensuring that each component is properly installed.

SPARK PLUG

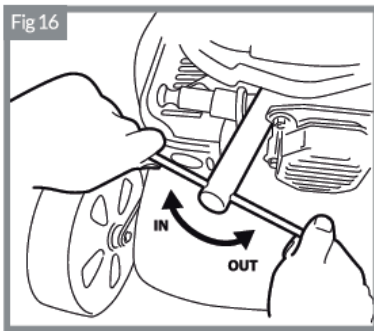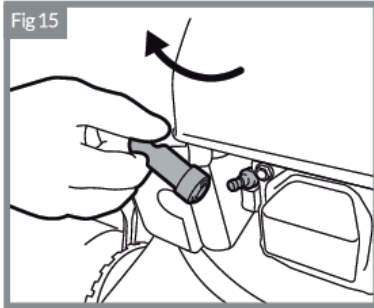

Check the spark plug initially after the first five hours of mower use. Thereafter, maintenance of the sparkplug should take place every 25 hours.

Remove the spark plug cap (*Fig.15*) using a rotary motion & then remove the spark plug with the wrench provided (*Fig.16*).

Clean off any carbon deposits using a copper brush and check the electrode gap with a feeler gauge (the gap should be 0.7 mm). Replace and tighten the serviced spark plug and replace the cap.

If the spark plug is worn or damaged, replace with a new spark plug of the same or suitable type for the engine. If in doubt, contact your point of purchase or local dealer.

SCHEDULE

REGULAR SERVICE PERIOD (4)		Before Each Use	First Month or 5 Hours	Every 3 Months or 25 Hours	Every 6 Months or 50 Hours	Every Year or 100 Hours	Every Two Years or 250 Hours
ITEM Perform at every indicated month or operating hour interval, whichever comes first.							
Engine Oil	Check	O					
	Replace		O		O		
Air Cleaner	Check	O					
	Replace			O			
Spark Plug	Check-adjust					O	
	Replace						O
Fuel Tank & Filter	Clean					O	
Fuel Tube	Check	Every 2 years (Replace if necessary)					
Valve Clearance	Check-adjust					O	
Combustion Chamber	Clean	After every 200 hours					
Blade	Check	O					
	Replace					O*	

* Blade should be replaced if any damage is noticed.



INSTRUCTION MANUAL

TROUBLE SHOOTING

Failures such as a difficulty in starting the engine, irregularity in functions and abnormality in performance can normally be prevented if careful attention is paid to all operating instructions and maintenance procedures.

Should the engine not function properly, check the following?

- That the fuel system is in good condition and fuel is flowing to the engine.
- The ignition system is in good condition and the spark plug, sparks correctly.
- Compression of the engine is adequate.

FAILURE TO START

- Correctly follow the starting procedure, not priming the engine can cause the engine to not start.
- Dispose of fuel from the tank, particularly if to be left for over 30 days.
- Ensure that fuel is fresh and clean.
- Check fuel filter to ensure it is clean. (Replace filter if necessary).
- Make sure air filter elements are clean.
- Install a new, properly gapped spark plug (0.7mm gap)
- When there is serious trouble with the unit, do not try to repair it yourself, but have your local approved service dealer inspect it for you.



EC DECLARATION OF CONFORMITY

We Handy Distribution Ltd - SN3 5HY (Importer) declare that the product:

Designation: 51cm Self Propelled Rotary Lawnmower

Model(s): WER51SP

Product Number: 1938175001

Type/Serial No. As per rating label on machine

Complies with the following directives:

Machinery Directive 2006/42/EC

EMC Directive 2014/30/EU

EU Noise Directive 2000/14/EC Annex VI & 2005/88/EC

The conformity assessment procedure followed was in accordance with

EN ISO 5395-1:2013, EN ISO 5395-2:2013, EN ISO 5395-1:2013, EN ISO 5395-2:2013/A2:2017

EN ISO 14982 :2009

EN ISO 3744: 1995 & ISO 11094:1991

Guaranteed Sound Power Level: $L_{WA} = 98\text{dB(A)}$

Vibration Level: 6.12 m/s^2 (Uncertainty – $K=1.5\text{m/s}^2$)

Notified Body:

TÜV SÜD Product Service GmbH

Addresses:

Zertifizierstelle, Ridlerstraße 65, 80339 München, Germany

Authorised signatory and technical file holder

Date: 24/10/2017

A handwritten signature in black ink, appearing to read "S Belcher", written over a horizontal line.

Signature:

Name: Mr Simon Belcher

Position: Managing Director

Company: Handy Distribution Ltd

Address: Murdock Rd, Swindon, Wiltshire, SN3 5HY.





INSTRUCTION MANUAL

This Service Book is provided with your Webb, to help you look after your purchase to our recommendations and enable you to take advantage of the 2 year conditional manufacturer domestic warranty*.

* Commercial/Professional & Hire users receive a 90 day warranty

Present this service book to your authorised Webb repair dealer, whenever a service or a warranty appraisal is required.

The booklet is applicable to the following products, in the UK only:

- Ride On Lawn Tractors
- Cylinder Lawnmowers
- Petrol Rotary Lawnmowers
- Petrol Hand Held Range

Please register your machine using the following pages or at www.webbgardenpower.co.uk. By registering your machine, you agree to maintain the machine in accordance with the service schedules specified in this manual and services duly recorded. You may be asked to produce this booklet as proof of servicing in the event of a claim. Proof of purchase should also be kept as a reference.

Ensure you have the following information available from your machine product label. The two examples below can be found on your machine:



1. Model Number

2. Serial & Product Number

Please complete using BLOCK CAPITALS.
Sections marked* must be completed to validate Warranty.

SERVICE BOOK

1. Users Statement of Warranty

Each new machine is warranted against defective material or assembly of material under normal usage. The warranty applies to the original purchaser, is not transferable and covers faulty parts and the labour involved in replacing and repairing those parts, which are of original manufacture.

2. Period of Warranty

2 year conditional warranty from the original date of sale to the first domestic user.

90 days from the original date of sale to the professional/commercial or for hire user.

Engine warranty as per the engine manufacturer's warranty, which will be supplied with the machine.

90 days from the original date of sale for Replacement Spare Parts

All machines' must be serviced within the first 14 months from the original date of purchase, to qualify for a second year parts & labour warranty, details of the service must be recorded in the service record within this manual.

A reduced warranty period of 90 days applies to those items which are subject to normal wear and tear and in normal use, will need replacement or adjustment.

These items are chargeable after 90 days of ownership.

Filters
Tyres / Wheels
Drive chains and belts
Brake & clutch friction components
Control cable & starter cords
Fluids & lubricants
Spark plugs
Blades (Lawnmowers & Brushcutters)
Cutter bars (Hedgecutters)
Drive & clutch cable surfaces
Nylon Lines (Line Trimmers)
Carburettor cleaning
Bearings
Bushes
Electric cable
Grass collectors

3. Not covered by this warranty

(a) The warranty policy does not cover any depreciation or damages caused by ordinary wear, rusting or corrosion, lack of correct maintenance or operation, misuse, abuse, lack of transportation or accident.

(b) The warranty policy does not cover any costs necessary for the standard periodic maintenance services instructed by the operators manual, or service parts replacement which would include oil, filters, tyres, belts, brake linings, fuses, blades, seals and other service parts unless it can be proven that the item has evidence of faulty manufacture.

(c) The warranty policy will not cover failure or damage caused as a result of parts or accessories being modified without the written approval of GJ Handy & Co Ltd.

(d) The warranty policy will not cover the unit if non-genuine parts have been fitted and as a result damage has occurred to the unit.

(e) The warranty policy is non-transferable and is only applicable to the original purchaser.

4. Disclaimer

(a) This warranty is only a remedy for defect of products. GJ Handy & Co Ltd will never warranty in terms of the merchantability or the fitness for a particular purpose.

(b) No person is authorised to make any warranties, representations or promises, expressed or implied, on behalf of GJ Handy & Co Ltd, or to modify the terms conditions or limitation of this warranty policy in any way.

(c) Neither GJ Handy & Co Ltd nor any company affiliated with GJ Handy & Co Ltd shall be liable in any event or manner whatsoever for incidental or consequential damages or injuries, including, but not limited to, loss of crops, loss of profit, out of pocket expenses or profits, rental of substitute equipment or other commercial losses.



INSTRUCTION MANUAL

5. General

- (a) Most warrantable failures show up within the first few weeks of use. These failures are usually straightforward and warranty assessment is relatively easy.
- (b) Failures relating to cutter decks and belts need careful investigation, as the cause may not always be straightforward. Look for damage to blades and pulleys especially when the cutter belt or blade boss have snapped or cracked as this could be due to impact damage.
- (c) Customers should always refer to the operator/instruction manual when any disputed problem arises, you will find most areas covered within the manual.

Protecting your machine

Maintenance

Regular maintenance of your Webb machine is essential to ensure it operates, safely, efficiently and therefore reducing the environmental impact.

It is the owner's responsibility to ensure that their Webb machine is maintained at specific intervals. Any approved Webb service dealer can undertake a service, which are specialised in our products and will be aware of your particular machine and any technical updates which will save valuable time & money.

If you are using your machine in dry, dusty or high temperatures, you will need to service the machine more regularly.

Fuel

Due to ongoing efforts by fuel companies to reduce emissions, unleaded petrol will oxidize & deteriorate in storage overtime, leaving residue from detergent components.

Fuel deterioration problems may occur when petrol is stored for over 30 days. If you are planning to store fuel for over 30 days, we recommend you add Handy Parts Sure-Start fuel stabilizer to fresh fuel after purchasing. Sure-Start cannot reconstitute stale fuel.

Storage

When storing your machine for an extended period, we do recommend that you follow the instructions of engine instruction manual.

Always store the fuel in a clean, approved and sealed container. If the container is steel, ensure it is not corroded.

If the container is not filled to its recommended capacity, air can accelerate fuel deterioration.

Always store fuel away from direct sunlight, in a dark, cool environment.


SERVICE BOOK

Your servicing Webb approved dealer will stamp & date the below relevant sections, when the correct service actions have been completed.
PLEASE ENSURE THE SERVICE BOOK IS AVAILABLE FOR THE DEALER, DURING SERVICE WORK.

1st Service


This must be stamped by an approved service dealer to qualify for a free second year warranty.

12 Months

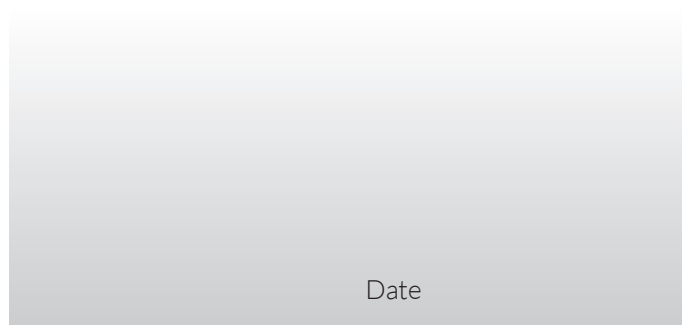


Date

24 Months

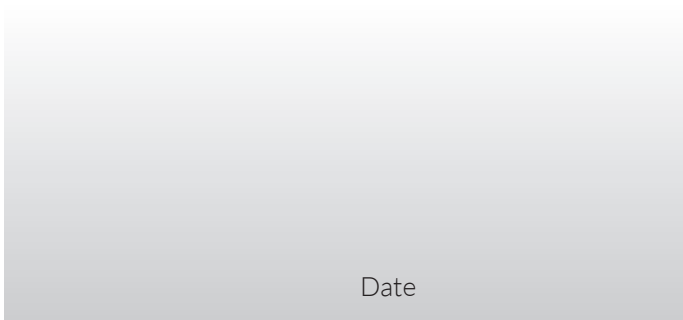

Date

36 Months

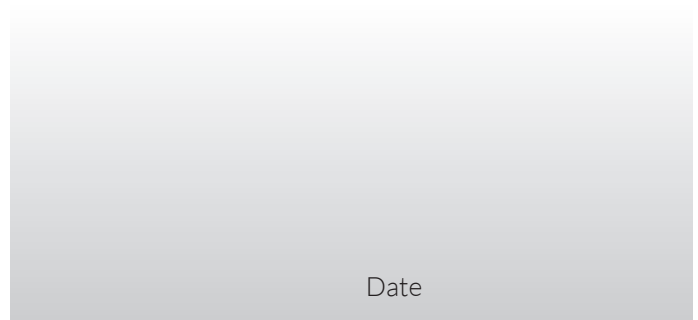


Date




INSTRUCTION MANUAL

48 Months

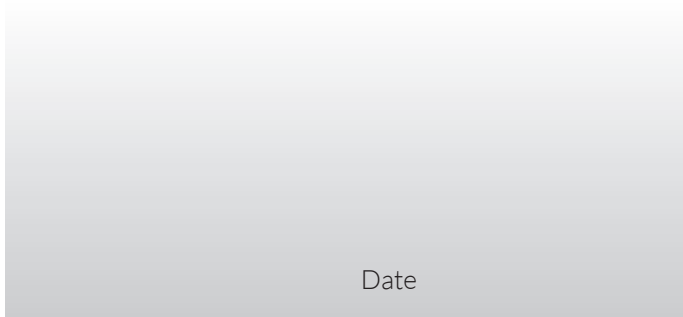


Date

60 Months

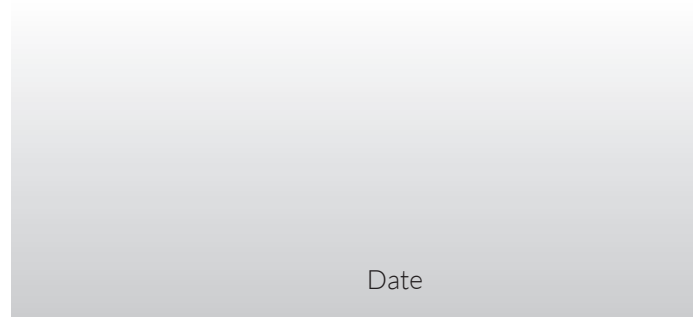


Date

72 Months

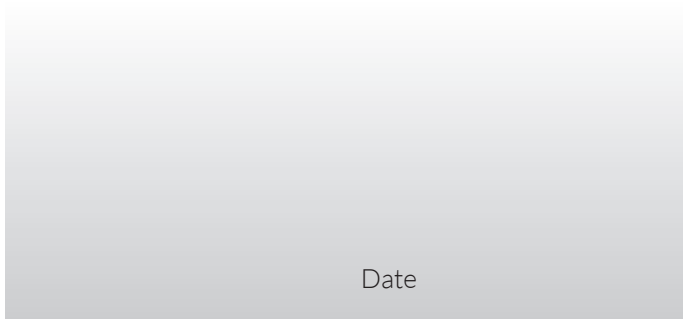


Date

84 Months

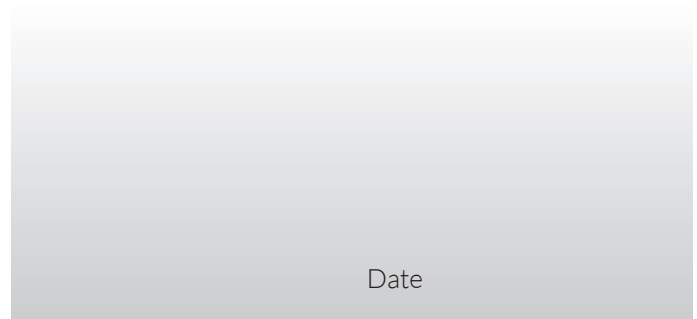


Date

96 Months

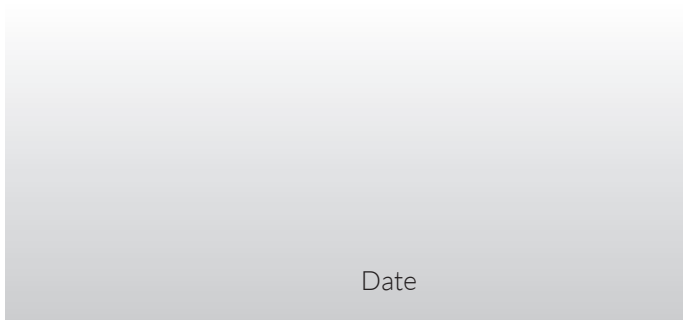


Date

108 Months

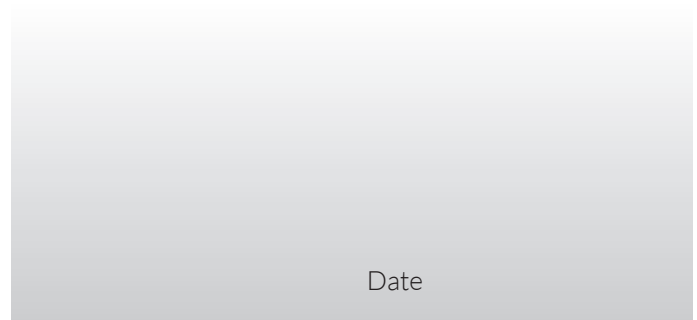


Date

120 Months

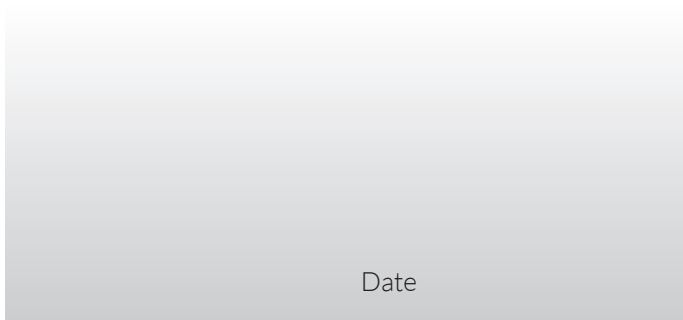

Date

132 Months

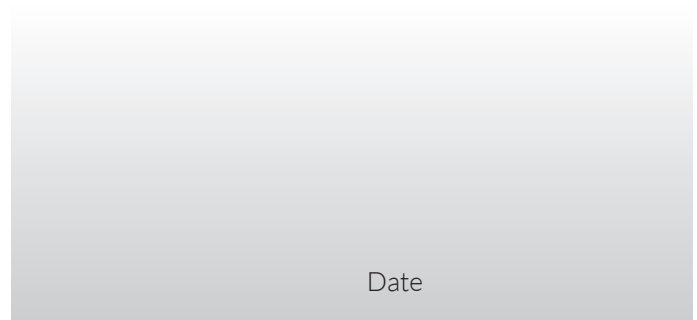

Date

SERVICE BOOK

If you have registered online, this form is not necessary.
PLEASE POST THIS COPY TO THE ADDRESS OVERLEAF

Product Information (* Compulsory)

*Model No:	
*Product No:	
*Serial No:	
*Date of Purchase:	

Personal Information (* Compulsory)

*Title		*Forename		*Surname		
*House Number		*House Name				
*Address 1						
*Address 2						
*Town						
*County						
*Postcode						
Home Tel		Mobile Tel				
Email						
Age	18 to 25	26 to 35	36 to 45	46 to 60	61 to 80	81 & over

*Dealer Stamp (Complete Address)

*Selling Retailer (If dealer stamp not available)

*Dealer Name	
*Dealer Address	
*Date of Purchase	

*Usage	Domestic Use		Commercial/Professional/Hire Use	
--------	--------------	--	----------------------------------	--

Webb Lawnmowers' privacy commitment to machine owners: Thank you for completing this form. The information supplied, helps us to improve the products & services we provide, including information that we believe is relevant to your and/or your machine. We value your trust by giving us this information about yourself and we are committed to protecting your privacy. From time to time Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding our products, services, offers, technical improvements or just opinions, which may be used for marketing, research or analysis purposes.

If you DO NOT wish to be contacted by either of the following methods, please tick the relevant box POST TELEPHONE

If you would like us to contact you by Email, please tick this box

You may give Webb Lawnmowers notice in writing at any time that you no longer wish to receive direct marketing communications

Webb Lawnmowers
Murdock Road
Dorcan
Swindon
Wiltshire
SN3 5HY