CO3RV

MODEL: GCT200P

GARDEN TROLLEY OWNERS MANUAL



CAUTION:

Before using this product, please read this manual carefully to understand the proper use of your garden trolley. Please keep this manual for future reference.

PLEASE NOTE: NEVER CARRY PASSENGERS IN THE GARDEN TROLLEY

Product colours may vary.

Safety Instructions

- 1. Read all the instructions carefully before use.
- 2. Do not load the trolley with more than 200kg. Do not use the tipping/dumping feature of the trolley for more than 100kg.
- 3. Do not allow children to use the trolley unsupervised. This trolley is not a toy. Special care is required when tipping loads.
- 4. Always distribute loads evenly over the surface of the bed of the trolley.
- 5. Do not load anything on the edges of the plastic tray.
- 6. Do not use if any parts of the trolley are damaged or broken.
- 7. Do not operate or use on ground that may damage the pneumatic tyres and wheels.
- 8. Please use a manual foot or hand pump to inflate tyres. Do not inflate tyres to more than 20 PSI (137Kpa)

PLEASE NOTE: NEVER CARRY PASSENGERS IN THE GARDEN TROLLEY

Parts List

	Tub (1)		Yoke (1)	/	Center front axle brace	N.	M8x60 bolt set
	Lock frame (1)		Rear axle frame	/	Handle (1)	(and	M6x22 bolts set (1)
1	Front axle	H	(1) Frame	a	Handle	200	M8x18 countersunk bolt set (2)
1	support (1) Left and		(1)		coupler (1)	A.F.	M6x18 set (3)
	right rear strut (1)		Center brace (1)		Wheel (4)	的 所 所 所 。	M8X18 bolt set (14)


Assembly Instructions

Before assembling the tipping trolley please check all the parts and hardware, if anything is missing or damaged, please contact your retailer.

Tools required: Screwdrivers, socket set and adjustable wrench.

Step 1


The left and right rear struts are preassembled to the rear axle

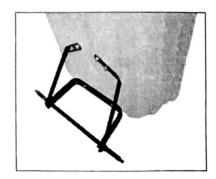

Frame. Attach the rear axle assembly to the tub using M8x18 bolts (2pcs) and M8 Lock nuts (2pcs). Attach left and right rear struts to The tub using M18x18 bolts (4pcs), washers (4pcs) and M8 lock Nuts (4pcs).


Step 2

Assemble the lock frame to the tub using M8x18 bolts (4pcs), washers (4pcs) and M8 lock nuts (4pcs).

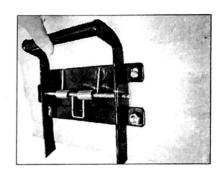

Step 3


Join the yoke and the centre front axle brace to the front axle support to the end hole by using M6x22 bolt (1pc), washer (1pc) and M8 lock nut (1pc). Using a washer and a cotter pin (already assembled to the front axle support) to secure the second hole in the yoke and front axle support. Assemble the centre brace to the front axle support using M6x18 bolts (3pcs), washers (3pcs) and M6 lock nuts (3pcs)

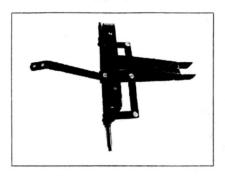



Step 4

Assemble the front axle support assembly to the front frame using M8x18 countersunk bolts (2pcs), washers (2pcs) and M8 lock nuts (2pcs). Attach front axle brace to frame using M8x18 bolts (2pcs), washers (2pcs) and lock nuts (2pcs).

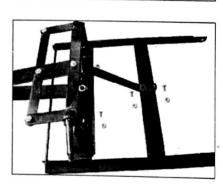


Step 5

Attach assembled frame from step 4 to the tub using M8x18 bolts (2pcs) and M8 lock nuts (2pcs).

Step 6

Assemble the wheels using large washers (4pcs) and M12 lock nut (4pcs). Attach to the front axle support and the Rear axle frame.

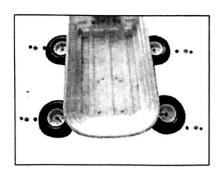


Step 7

Assemble the handle to the yoke using M8x60 bolt (1pc), M8 lock nut (1pc) and washer (1pc).


Using the Tipping/Dumping feature

To operate this feature, pull the Tipping /dumping release handle to release the plastic bed from the locking mechanism. Lift up the release handle to raise the trolley into the dumping position.

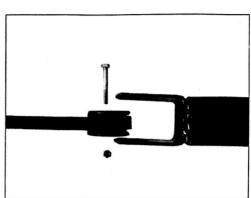

Returning the Plastic Bed to the lowered Position

Move the plastic bed back down to the lower position. Make sure the release handle is locked into place when the trolley is in the lowered position.

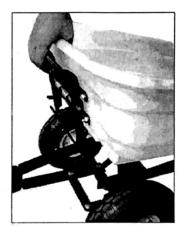

Caution: Do not exceed maximum overall load capacity of 200kgs. When the tipping mechanism is being used, do not exceed dumping capacity of 100kgs.

Store your trolley
Covered or indoors
To prevent corrosion
And deterioration of
The plastic.

